

			Power Supply							Handpiece					Work Station					Tips		
	System	Operating Frequency	Connection	RFG-30	PS2-01 PS2-02	PS2V-01 PS2V-02	PS2E-01 PS2E-02	MX-500P	SP-PW1-10 SP-PW1-20		STSS -RM3	MX-RM3E	MX-H1-AV	SHP-1	SP-HC1	WS1	MX-W1AV	MX-WS4	SP-WSK1 and SP-CRADLE	WS2	STSS-xxx	SMTC-xxxx
Metcal	STSS-001	13.56MHz	Coax Mini F-Type	*	*						*	*	*	*		*	*	*			*	*
	STSS-002	13.56MHz	Coax Mini F-Type			*					*	*	*	*		*	*	*			*	*
	STSS-002E	13.56MHz	Coax Mini F-Type				*				*	*	*	*		*	*	*			*	*
	MX500.. -11 for 115Vac -21 for 230Vac Can be rewired to change supply voltage.	13.56MHz	Coax Mini F-Type					*			*	*	*	*		*	*	*			*	*
	MX5000	13.56MHz	Coax Mini F-Type																			
	SP200.. -11 for 115Vac -21 for 230Vac	470KHz	DIN						*						*				*	*		
OKI/Metcal	*New MX500*	13.56MHz	Coax Mini F-Type							*	*	*	*	*		*	*				*	*
	MFR	470KHz	DIN																			
	PS	470KHz	DIN																			
				No autosleep -01 for 115Vac -02 for 230Vac	Autosleep -01 for 115Vac -02 for 230Vac	Autosleep -01 for 115Vac -02 for 230Vac	Ground sensing, Autosleep, Tipsaver -01 for 115Vac -02 for 230Vac	Two port with selector switch, Ground sensing, Autosleep, and Tipsaver	Ground sensing, Autosleep, Tipsaver -10 for 115Vac -20 for 230Vac	Universal Power Supply. Two port with selector switch, Ground sensing, Autosleep, and Tipsaver		Older version	Newer version	Termaltronics or Easybraid equivalent		Most have tipsaver magnets	Include magnets for tipsaver				General Purpose -0xx = 600F -1xx = 700F	Rework/ Specialty