
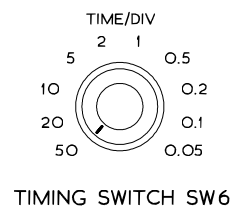


## NOTES

1. SWITCH SW1.2 SHOWN IN "TV SYNCHRONISATION" POSITION
2. SWITCHES SW1.4, SW1.5 & SW1.6 SHOWN IN "ms" POSITION
3. THE PACKAGE/BASE PINOUT OF SOVIET TRANSISTORS MAY DIFFER FROM UNIT TO UNIT - THE ONES SHOWN ARE TYPICAL

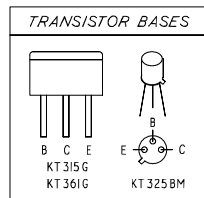

RESISTOR SYMBOLS	
	0.05 W
	0.125 W
	0.25 W
	0.5 W
	1 W
	2 W

## C1-112 OSCILLOSCOPE

P.C.B. U1 - SYNC AMP/TRIGGER, TIMEBASE AND X-PREAMPLIFIER