



DS2000, DS4000, DS6000 Firmware Upgrade Procedure

Date: 11.21.2012

Solution:

1. Check to see that the USB stick is recognized by inserting into the USB input on the front panel. The instrument should indicate USB Device Detected.

NOTE: If the device is not recognized, try another USB memory stick. We also recommend minimizing the number of folders, files, and programs on the stick. Drives less than 4GB in total volume are also recommended.

2. Download the proper firmware file and transfer to the root directory of a USB memory stick.
3. Plug the instrument in to an uninterruptible power supply.

WARNING! Don't power cycle or disturb the instrument until the upgrade is complete.. as the instrument can be damaged.

4. Press the power on button on the front panel of the instrument. All of the buttons will light.
5. Repeatedly press the Help key on the front panel. All of the buttons will unlight.


rigolna.com

Rigol Technologies USA, Inc.
Phone/Fax: 440-232-4488

Toll Free: 877-4-RIGOL-1


7401 First Place, Ste. N Oakwood Village, OH 44146 USA

6. The Single light will illuminate.

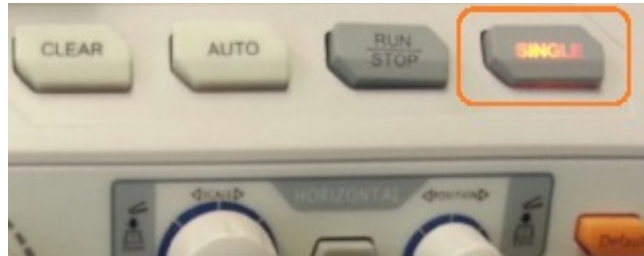

7. Insert the USB stick into the front panel.

8. The CH1 button will flash and then go solid.

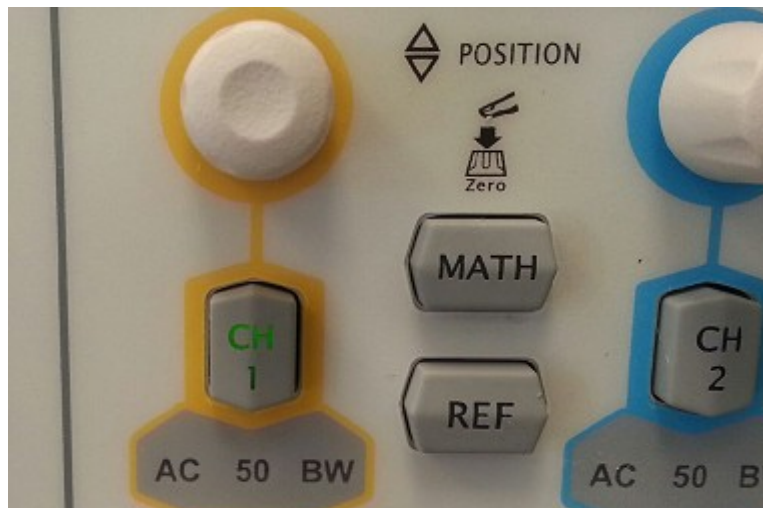



9. After 10-15 minutes, all of the buttons on the front panel will be lit. The upgrade is complete.



10. Remove the USB drive and power cycle the instrument.
11. You can check the firmware revision by pressing
Utility > System > System info