

# SDS804X HD - Save Button/Default Button Issue

## HD Firmware\_V1.1.3.8 (Release Date 06.28.24 )

Reproducible? Yes

Happens Every Time? Yes

### Steps To Reproduce:

1. Check “Save Button” setting from the Utility Menu

2. Verify “Save To” is selected




3. Open the “Utility Menu”

4. Select “Save/Recall”



5. Select Type & Change to Default Key

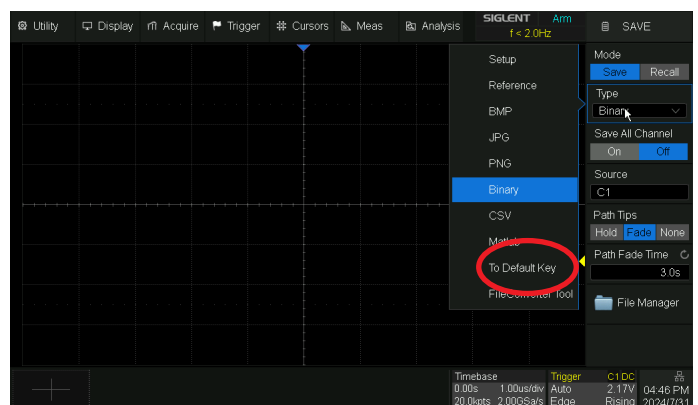


Continued on Page 2


5. Make Sure “Save” & “Current” is highlighted  
click “Save”



6. On the instrument panel select “Default”  
7. Select Continue on the screen.

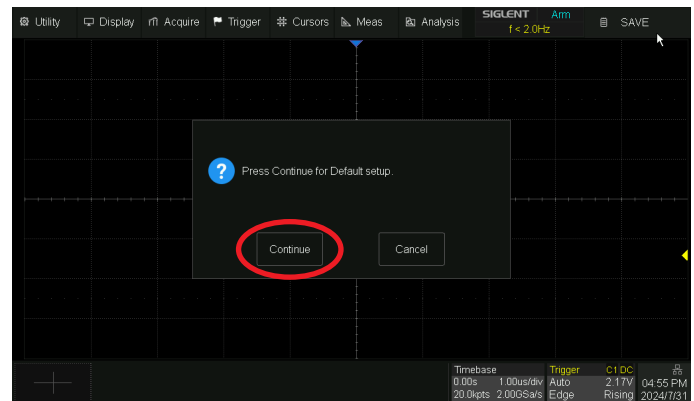

8. On the instrument panel select “Save”

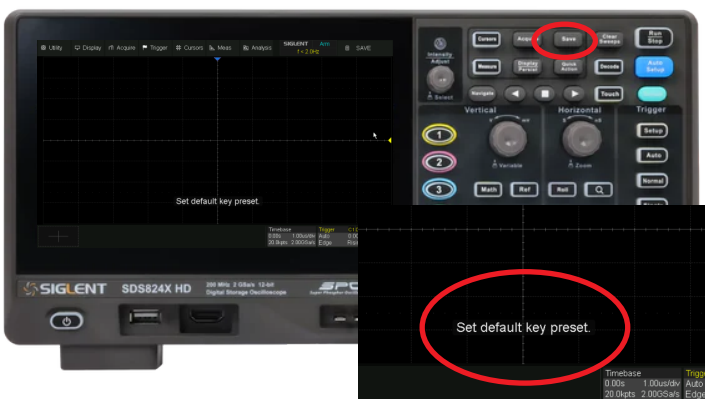

Note the message  
“Set Default Key Preset”

Issue & Suggested Changes Continued Next Page

There are two options for the “Save Button”

1. Save Screenshot
2. Save To

Save To is the preferred option as you may wish to capture wave form data, binary etc with a simple one button press.

**The Problem:**

Because changing the “Default” button setup is also under the “Save To” menu this causes the “Save” button to become a quick save to the “Default” button with no confirmation.

**Easy Solution:** Confirmation dialogue to confirm “Default” button setting change before saving.

**Best Solution:** Move the “Default” button setup out of the “Save To” section of the Utility menu & always require a confirmation before overriding the “Default” button setting.


**Reasoning:** It would stand to reason that if a confirmation dialogue is needed to load, it should also be so to save.

It seems possible this is not intended behaviour.

Workarounds Next Page

# Workarounds

1. Change Type To ScreenShot - Then save the default setup.

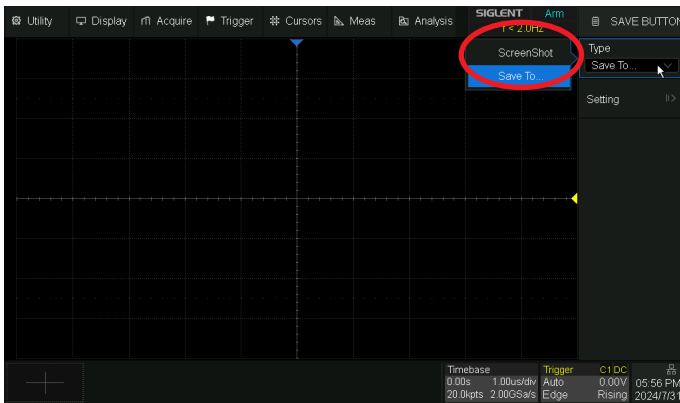

2. Save setup XML file that is not as easily overwritten

