

# 5314A UNIVERSAL COUNTER



HEWLETT  
PACKARD

## **SAFETY**

This product has been designed and tested according to international safety requirements. To ensure safe operation and to keep the product safe, the information, cautions, and warnings in this manual must be followed. Refer to Section 1 for general safety considerations applicable to this product.

## **CERTIFICATION**

Hewlett-Packard Company certifies that this product meets its published specifications at the time of shipment from the factory. Hewlett-Packard further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the national laboratories of other countries, or to the calibration facilities of other international standards organizations.

## **WARRANTY**

This Hewlett-Packard product is warranted against defects in material and workmanship for a period of one year from date of shipment, except that, in the case of certain components listed in Section 1 of this manual, the warranty shall not include specified periods. During the warranty period, Hewlett-Packard Company will, at its option, either repair or replace products which prove to be defective.

For warranty service or repair, this product must be returned to a service facility designated by HP. However, warranty service for products installed by HP and certain other products designated by HP will be performed at Buyer's facility at no charge within the HP service travel area. Outside of service travel areas, warranty service will be performed at Buyer's facility only upon HP's prior agreement, and Buyer shall pay HP's round-trip travel expenses.

For products not used by HP for warranty service, Buyer shall prepay shipping charges to HP and HP shall pay shipping charges to return the product to Buyer. However, Buyer shall pay all shipping charges, duties, and taxes for products returned to HP from another country.

## **LIMITATION OF WARRANTY**

The foregoing warranty shall not apply to defects resulting from improper or inadequate maintenance by Buyer, Buyer-supplied software or accessories, unauthorized modification or misuse, operation outside of the environmental specifications for the product, or improper site preparation or maintenance.

NO OTHER WARRANTY IS EXPRESSED OR IMPLIED. IF SUCH CALLS DISCLAIM THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

## **EXCLUSIVE REMEDIES**

THE REMEDIES PROVIDED HEREIN ARE BUYER'S SOLE AND EXCLUSIVE REMEDIES. HP SHALL NOT BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY.

## **ASSISTANCE**

Peripherals, maintenance agreements, and other customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

# HP 5314A UNIVERSAL COUNTER

## OPERATING AND SERVICE MANUAL

### SERIAL NUMBER PREFIX: 2714

This manual applies directly to HP Model 5314A having serial number prefix 2714A and later.

### NEWER INSTRUMENTS

This manual, with enclosed "Manual Changes" sheet, applies to HP Model 5314A having serial number prefixes included on the "Manual Changes" sheet.

© HEWLETT-PACKARD COMPANY 1987-1992  
5001 STOWING STREET, SANTA CLARA, CA 95051-6249

MANUAL PART NUMBER: 5314-00012

Printed: September 1993



HEWLETT  
PACKARD

## TABLE OF CONTENTS

Section	Title	Page
I	GENERAL INFORMATION .....	I-1
1-1.	Introduction .....	1-1
1-4.	Specifications.....	1-1
1-5.	Safety Considerations.....	1-2
1-8.	Instructions Covered by Manual .....	1-2
1-11.	Instrument Verification .....	1-1
1-13.	Description.....	1-2
1-16.	Options .....	1-3
1-20.	Equipment Supplied.....	1-4
1-22.	Recommended Test Equipment .....	1-4
II	INSTALLATION .....	2-1
2-1.	Introduction.....	2-1
2-3.	Initial Inspection .....	2-1
2-5.	Preparation for Use.....	2-1
2-6.	Power Requirements .....	2-1
2-8.	Line Voltage Selection .....	2-1
2-10.	Power Cable.....	2-2
2-12.	Beam Operation .....	2-3
2-14.	Installation of Options CB1 and C02 .....	2-2
2-16.	Operating Environment .....	2-3
2-18.	Storage and Shipment .....	2-1
2-19.	Environment.....	2-1
2-21.	Packaging.....	2-3
III	OPERATION .....	3-1
3-1.	Introduction .....	3-1
3-3.	Operating Characteristics.....	3-1
3-5.	Frequency Measurements .....	3-1
3-7.	Period Measurements .....	3-1
3-9.	Time Interval Measurements .....	3-1
3-12.	Ratio A/D Measurements.....	3-2
3-14.	Totalize A Measurements .....	3-2
3-16.	Self-Checks.....	3-2
3-18.	Panel Features .....	3-2
3-20.	Operating Instructions.....	3-3
3-22.	Operator's Maintenance .....	3-3
3-24.	Power/Alarm Up .....	3-3
IV	PERFORMANCE TESTS.....	4-1
4-1.	Introduction .....	4-1
4-3.	Equipment Required .....	4-1
4-5.	Operating Verification .....	4-1
4-7.	Performance Test .....	4-1
4-9.	Test Record.....	4-1
4-13.	Procedure.....	4-2

TABLE OF CONTENTS (Continued)

Section	Title	Page
V	ADJUSTMENTS.....	5-1
5-1	Pinpoint Test.....	5-1
5-4	Equipment Required.....	5-1
5-5	Adjustment Locations.....	5-1
5-5	Safety Considerations.....	5-1
VI	REPLACABLE PARTS.....	6-1
6-1	Identification.....	6-1
6-2	Reference Designations.....	6-1
6-3	Replaceable Parts.....	6-1
6-4	How to Order a Part.....	6-1
6-10	Part Identification.....	6-1
6-11	Contacting Hewlett-Packard.....	6-2
6-18	Cabinet Parts and Hardware.....	6-2
VII	MANUAL CHANGES.....	7-1
7-1	Introduction.....	7-1
7-3	Manual Changes.....	7-1
7-6	Other Instruments.....	7-1
VIII	SERVICE.....	8-1
8-1	Introduction.....	8-1
8-3	Theory of Operation.....	8-1
8-5	Troubleshooting.....	8-1
8-7	Recommended Test Equipment.....	8-1
8-9	Schematic Diagram Notes.....	8-1
8-11	Reference Designations.....	8-1
8-13	Identification Markings on Printed Circuit Boards.....	8-2
8-16	Safety Considerations.....	8-2
8-20	Fuse Replacement.....	8-2
8-22	Line Input Fuse Replacement.....	8-3
8-24	Option 002 Fuse Replacement.....	8-3
8-26	Theory of Operation.....	8-3
8-27	Introduction.....	8-3
8-29	HP 5314A Users' Book Theory of Operation.....	8-3
8-31	Detailed A1 Assembly Theory.....	8-3
8-40	Power Supply Block Theory.....	8-4
8-47	Detailed A2 Assembly Theory.....	8-4
8-50	Option 002 Battery Charge Block Theory.....	8-4
8-52	Detailed Option 002 A2 Assembly Theory.....	8-4
8-56	Troubleshooting Test Procedures.....	8-4
8-59	Procedure 81: Testing of 5314A Power Supply.....	8-16
8-61	Procedure 82: Testing of 5314A Reference Oscillator.....	8-16
8-61	Procedure 83: Testing Input Channels.....	8-17
8-63	Procedure 84: Testing of ROM 7226.....	8-17
8-67	ICounter on-Chip and display.....	8-20
8-67	Procedure 87: 20 MHz Mode.....	8-20

## SAFETY CONSIDERATIONS

### GENERAL

This is a Safety Class I instrument. This instrument has been designed and tested according to IEC Publications 348, "Safety Requirements for Electronic Measuring Apparatus."

Acoustic Noise Emission: LpA, 140 dB; not fan installed.  
GERAUSCH Emission: LpA, 140 dB; kein Ventilator eingebaut.

### OPERATION

BEFORE APPLYING POWER, verify that the power transformer primary is matched to the available line voltage and that correct fuse is installed (See Section II). Make sure that only fuses with required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuseholders must be avoided.

### SERVICE

Although this instrument has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to ensure safe operation and to retain the instrument in safe condition. Service and adjustments should be performed only by qualified service personnel.

Any adjustment, maintenance, and repair of the opened instrument under voltage should be avoided as much as possible and, when inevitable, should be carried out only by a skilled person who is aware of the hazard involved.

Capacitors inside the instrument may still be charged even if the instrument has been disconnected from its source of supply.

Whenever it is likely that the protection has been impaired, the instrument must be made inoperative and be secured against any unintended operation.

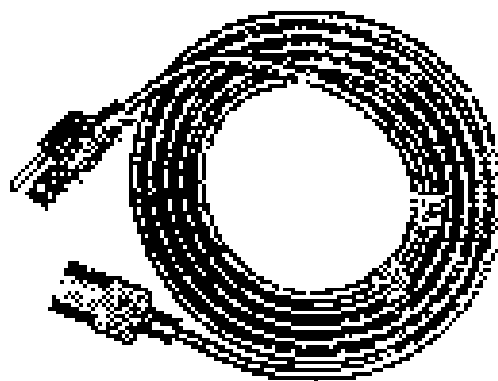
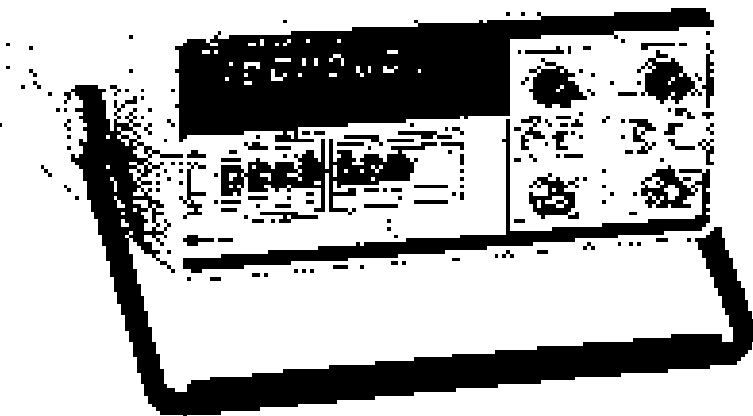


Figure 7-1. Model 5316A and Equipment Supplied

## SECTION I GENERAL INFORMATION

### 1-1. INTRODUCTION

1-2. This manual provides information pertaining to the installation, operation, testing, adjustment, and maintenance of the HP Model 5314A Universal Counter. Figure 1-1 shows the HP 5314A with the applied equipment.

1-3. This operating and service manual is divided into eight sections, each covering a particular topic for the operation and service of the HP 5314A. The eight sections are listed here:

Section	Topic
I	General Information
II	Installation
III	Operation
IV	Performance Tests
V	Adjustments
VI	Replaceable Parts
VII	Manual Changes
VIII	Service

### 1-4. SPECIFICATIONS

1-5. Performance specifications are listed in Table 1-1. These specifications are the performance standards or limits against which the instrument may be tested.

### 1-6. SAFETY CONSIDERATIONS

1-7. The HP 5314A Universal Counter is a Safety Class I instrument, designed according to international safety standards. This operating and service manual contains information, cautions, and warnings which must be followed by the user to ensure safe operation and keep the HP 5314A in safe operating condition.

### 1-8. INSTRUMENTS COVERED BY MANUAL

1-9. If the serial number prefix of your HP 5314A is lower than the serial number prefix on the title page of this manual, the manual must be modified for agreement with the HP 5314A. Refer to Section VII, Manual Changes, for the information which will adapt this manual to your HP 5314A. If the serial number prefix is higher, refer to the yellow "manual changes" sheet located inside the front cover.

1-10. The HP 5314A standard instrument, Option 001, and Option 002 are documented in this manual. The differences are noted in the appropriate locations such as Options in Section I, Replaceable Parts in Section VI, and Service in Section VIII.

### 1-11. INSTRUMENT IDENTIFICATION

1-11. The instrument serial number is located on the rear panel. Hewlett-Packard uses a two-section serial number consisting of a four-digit prefix and a five-digit suffix. A letter between the prefix and suffix identifies the country in which the instrument was manufactured (A=USA, G=West Germany, J=Japan, U=United Kingdom). All correspondence with Hewlett-Packard concerning this instrument should include the complete serial number.



Table 2-1. Specifications

<b>INPUT CHARACTERISTICS</b>	<b>Resolution:</b>
<b>Range:</b>	= $LSB = (N \text{ Trigger Error} \times \text{FREQUENCY})/N$
Channel A 10 Hz to 100 MHz	<b>Accuracy:</b>
Channel B 10 Hz to 25 MHz	$\pm 1 \text{ count of } A \pm 1 \text{ Trigger Error} / \text{FREQUENCY} / N$
<b>Sensitivity:</b>	<b>TOTALIZE (A)</b>
Channel A:	Range: 10 Hz to 10 MHz
25 mV rms to 100 MHz	Resolution: $\pm 1 \text{ count of Input}$
25 mV peak-to-peak minimum pulse with 5 ns	<b>GENERAL</b>
Channel B:	Check: Current Interval 10 MHz Oscillator
25 mV rms to 25 MHz	Display: 7-digit amber LED display with green and over-time indicators.
25 mV peak-to-peak minimum pulse width of 50 ns	Maximum Sample Rate: 5 readings per second
<b>Coupling:</b> AC	Operating Temperature: 0° to 50°C
Impedance: 1 M $\Omega$ NOMINAL shunted by less than 10 M $\Omega$	<b>Power Requirements:</b>
Attenuation: X1 or X10 NOMINAL (A Channel only)	115V, 170V, $\pm 25\%$ ; 210V, $\pm 17\%$ ; 19A; 40-65 Hz; 10 VA maximum
<b>Trigger Level:</b>	Weight: 20 kg (44 lbs)
Continuously variable -450 mV (rms) automatic setting around average value of signal.	Dimensions: 244 mm wide x 91 mm high x 226 mm long (9 5/8" x 3 5/8" x 9 1/8")
Slope: independent selection of + or - slope	<b>TIME BASE</b>
Channel Inputs: Switchable SEPARATE or COMMON	Frequency: 10 MHz
<b>Range Level:</b>	Aging Rate: $< 3 \text{ parts in } 10^6 \text{ per month}$
X1: DC to 100 MHz 350V (DC + peak AC) 100 kHz to 5 MHz $2.5 \times 10^6 \times \text{Hz} \times \text{Product}$ Above 5 MHz 5V rms	Temperature: $< 1 \text{ part in } 10^6, 0^\circ \text{ to } 50^\circ \text{C}$
X10: DC to 1 MHz 350V (DC + peak AC) 1 MHz to 50 MHz $2.5 \times 10^6 \times \text{Hz} \times \text{Product}$ Above 50 MHz 5V rms	Line Voltage: $< 1 \text{ part in } 10^6 \text{ for } \pm 10\% \text{ variation}$
<b>FREQUENCY (A)</b>	<b>OPTIONS</b>
<b>Range:</b>	Option 101: High Stability Time Base (TCXO)
10 Hz to 10 MHz direct count	Frequency: 10 MHz
1 MHz to 100 MHz prescaled by 10	Aging Rate: $< 1 \text{ part in } 10^6 \text{ per month}$
<b>LED Display:</b> Direct count 10.1 Hz, 1 Hz, 10 Hz, over-selectable, prescaled 10 Hz, 100 Hz, 1 kHz, switch-selectable	Temperature: $< 1 \text{ part in } 10^6, 0^\circ \text{ to } 40^\circ \text{C}$
<b>Resolution:</b> $\pm 1 \text{ Hz}$	Line Voltage: $< 1 \text{ part in } 10^6 \text{ for } \pm 10\% \text{ variation}$
<b>Accuracy:</b> $\pm 1.0 \pm (\text{time base error}) \times \text{FREQ}$	Option 102: Battery
<b>PERIOD (A)</b>	Type: Rechargeable lead-acid, sealed
<b>Range:</b> 10 Hz to 25 MHz	Capacity: TYPICALLY 40 hours minimum operation at 25°C
<b>LED Display:</b>	Recharging Time: TYPICALLY 16 hours to 98% of full charge, immediate reoperation. Charging circuitry included with option. Battery cannot discharge during instrument operation.
$\frac{100}{N}$ Hz, N = 1 to 1000 in decade steps of N	Battery Voltage Sensor: Automatically shuts instrument off when low battery condition exists
<b>Resolution:</b>	Line Voltage Protection: Instrument automatically switches to batteries in case of line failure
$\pm 1.0 \pm 1.4 \times \frac{\text{Trigger Error}}{N}$	Weight: Contains 602 cells $\pm 5 \text{ kg (11 lbs)}$ - no weight of instrument
<b>Accuracy:</b>	<b>WARRANTY</b>
$\pm 1.0 \pm 1.4 \times \frac{\text{Trigger Error}}{N} + (\text{time base error}) \times \text{PER}$	ALL COMPONENTS WITHIN OPTION 102, EXCEPT THE BATTERY, ARE WARRANTED FOR ONE FULL YEAR. BATTERY BT11HP PART NO. 6420-02531 IS WARRANTED FOR 90 DAYS.
<b>TIME INTERVAL (A, TO IF)</b>	<b>DEFINITIONS</b>
<b>Range:</b> 250 ns to 1 s	Resolution: Smallest discernible change of measurement result due to a minimum change in the input.
<b>LED Display:</b> 700 ns	Accuracy: Deviation from the actual value as fixed by currently accepted standard of frequency and time.
<b>Resolution:</b> = $LSB = \text{START Trigger Error} \times \text{STOP}$	Trigger Error:
Trigger Error	$\frac{\sqrt{0.002 \times (12 + 4 \times 2)}}{\text{Input Slew Rate at Trigger Point (2V/}\mu\text{s)}} \quad (\text{rms})$
<b>Accuracy:</b> $\pm 1.0 \pm \text{START Trigger Error} = \text{STOP}$	Where $q$ is the rms value of the input for a 100 MHz bandwidth on Channel A and a 10 MHz bandwidth on Channel B
Trigger Error $\pm (\text{time base error}) \times 11$	LSB: Least Significant Digit.
Time Interval measurements require an input signal for both the START and STOP Channels.	
(See Paragraph 3-1.7.)	
<b>RANGE</b>	
<b>Range:</b>	
10 Hz to 10 MHz Channel A	
10 Hz to 25 MHz Channel B	
<b>LED Display:</b>	
$\frac{1}{N} \text{ part in } \frac{A}{B} \times N$ in decade steps of N for N = 1 to 1000	

1-13. This instrument has a two-part serial number. The first four digits and one letter comprise the serial number prefix. The last five digits form the sequential suffix that is unique to each instrument. The contents of this manual apply directly to instruments having the same serial number prefix as listed under 5314A. PREFIX on the title page.

1-14. An instrument manufactured after the printing of this manual may have a serial prefix that is not listed on the title page. This unlisted serial prefix indicates that the instrument is different from those covered in this manual. The manual for this instrument is supplied with a yellow manual changes supplement which contains change information that documents the differences.

## 1-15. DESCRIPTION

1-15.1. The HP 5314A is a 100 MHz/100 ns Universal Counter. It features a seven-digit, seven-segment LED display with overflow indication, seven function performance, and four input signal conditioning. There are two options available for the 5314A. They are a Temperature Compensated Crystal Oscillator (TCXO) Option 001 and a battery pack for portable operation (Option 002).

1-15.2. The seven functions are: Frequency, Single Shot Period, Period Average, Time Interval, Interval Ratio, and Self Check. This is accomplished by a single 5 integrated circuit. The input signal is AC coupled and can be conditioned as follows: square wave limit, trigger level, and attenuation.

## 1-16. OPTIONS

1-16.1. The following is a list of options available for the 5314A Universal Counter.

### NOTES

A full description of all the options is given in Table 1-1. Specifications, performance information concerning the options for the HP 5314A, contact your local HP Sales and Service Office. A list of HP Sales and Service offices is provided at the end of this manual.

### Hardware Options

- 001 High Tech Dry Time Base (TCXO)
- 002 Battery with External Charger

### NOTES

One of the following hardware options must be included with each order.

- 1-277 Time measuring voltage factory set at 115V nominal (0.5V to 127V) ac.
- 1-278 Time measuring voltage factory set at 230V nominal (100V to 250V) ac.

### Support Options

- W30 Three-year customer return repair coverage
- W32 Three-year customer return calibration coverage
- W34 Three-year customer return Standard Complete Calibration Service
- W36 Three-year customer return repair coverage
- W38 Two-year customer return calibration coverage
- W39 Five-year customer return Standard Complete Calibration Service

Support options are available only on first order purchase. Support coverage is available from the date of purchase for instruments which do not include support options at time of purchase. For information, consult your nearest Hewlett-Packard sales office before ordering any of the back order items listed.

For field installation of Options 001 and 002, refer to paragraph 2-1.4, Installation of Options 001 and 002.

1-20. EQUIPMENT SUPPLIED

1-21. Table 1-2 lists the only equipment supplied with the HP 5314A.

Table 1-2. Equipment Supplied

DESCRIPTION	HP PART NO.
Detachable Power Cord 229 cm (90 in) long	0102-1173

1-22. RECOMMENDED TEST EQUIPMENT

1-23. The test equipment listed in Table 1-1 is recommended for use during performance tests, adjustments, and troubleshooting. Substituted test equipment may be used if it meets the required characteristics listed in the table.

Table 1-1. Recommended Test Equipment

Instrument Type	Required Characteristics	HP Model No. Recommended
Test Oscillator	10 MHz, 25 mV rms	3314A
Signal Generator	100 MHz, 25 mV rms	6666B
50 ohm Termination	100 MHz, per device	107001
Digital Voltmeter	10 V rms	3466A
Oscilloscope <100 MHz	20 V rms 10-10 ns	1741A
Function Generator	25 MHz, 25 mV rms	1912A

## SECTION II INSTALLATION

### 2-1. INTRODUCTION

2-1. This section provides all information necessary to install the HP 5314A. Covered in this section are initial inspection, preparation for use, field installation options, operating environment, and repackaging for shipment.

### 2-2. INITIAL INSPECTION

2-2.1. Inspect the shipping container for damage. If the shipping container or cushioning material is damaged, it should be kept until the contents of the shipment have been checked for completeness and the shipment has been checked mechanically and electrically. The contents of the shipment should be as shown in Figure 2-1. Procedures for checking electrical performance are given in Section IV. If the contents are incomplete, if there is mechanical damage or defect, or if the instrument does not pass the electrical performance test, notify the nearest Hewlett-Packard office. If the shipping container is damaged, or the cushioning material shows signs of stress, notify the carrier as well as the Hewlett-Packard office. Keep the shipping material for the carrier's inspection.

### 2-3. PREPARATION FOR USE

#### 2-3.1. Power Requirements

2-3.1.1. The HP 5314A requires a power source of 175V,  $\pm 10\%$ ,  $\pm 25\%$ ; 230V,  $\pm 17\%$ ,  $\pm 9\%$ ; 40-60 Hz, 10 VA maximum. Power consumption is 10 watts maximum.

#### 2-3.2. Line Voltage Selection

#### CAUTION

**BEFORE SWITCHING ON THIS INSTRUMENT,** make sure the instrument is set to the voltage of the power source. The voltage at which the unit has been factory set, is indicated on the rear panel label.

2-3.2.1. Line voltage selection is determined by the position of the line voltage selector switch, located inside the instrument on the 92-05374-80002 power supply assembly. Line voltage is preset at the factory for 175V (165V to 180V) or 230V (220V to 250V) as ordered by the customer. If changing of the line voltage becomes necessary, follow the procedure in Table 2-1.

Table 2-1 Line Voltage Changing Procedures

WARNING	
THE POWER CORD SHOULD BE REMOVED FROM THE REAR OF THE HP 5314A BEFORE STARTING THIS PROCEDURE.	
Turn the HP 5314A upside down and remove the four screws near the corners on the cabinet bottom.	
2.	Flipping the top and bottom covers together, turn the HP 5314A right side up and carefully lift the top cover. This exposes the line voltage selector switch located on the A2 (05314-6006) power supply assembly (large pc assembly located in the rear of the cabinet).
3.	The two-position switch may now be properly set to match the input voltage (E15 for 85V to 135V input or E20 for 170V to 252V input).
4.	Replace the top cover and carefully turn the unit upside down. Replace and tighten the four screws, one in each corner, of the cabinet bottom.
NOTE	
The line voltage selector switch automatically selects the correct line input cable configuration. (The two fuses are located on the A3 assembly and are in series for 250V selection, and in parallel for 115V selection).	

## 2-10. Power Cable

2-10.1. The HP 5314A is shipped with a three-wire power cable. The type of power cable plug shipped depends on the country of destination. Refer to Figure 2-1 for the part numbers of the power cable and plug and grounds available.

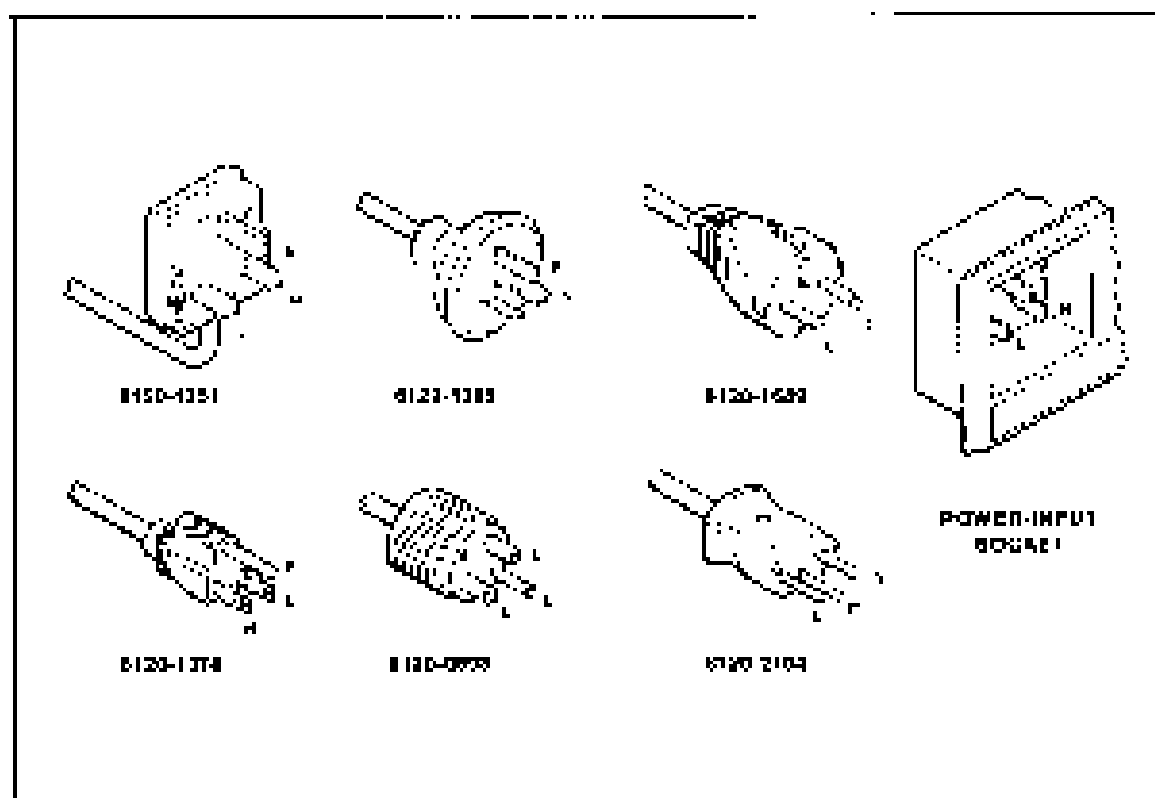


Figure 2-1. Power Cable HP Part Numbers versus Mains Plug Available

## 2-12. Bench Operation

2-12.1. The HP 5314A has an adjustable handle and two rubber strips located at the rear of the cabinet bottom. For convenience in bench operation, by pulling out the ends of the handle and adjusting it, the front of the HP 5314A may be raised for easier viewing of the front panel. The two rubber strips on the cabinet bottom keep the HP 5314A from sliding on smooth, hard surfaces.

## 2-14. INSTALLATION OF OPTIONS 001 AND 002

2-14.1. For installation of Options 001 and 002, refer to tables 2-2 and 2-3, respectively. Field installation of either option should be performed by qualified service personnel only.

## 2-16. OPERATING ENVIRONMENT

2-16.1. In order for the HP 5314A to meet the specifications listed in Table 1-1, the operating environment must be within the following limits:

Temperature	0°C to +53°C
Humidity	<85% relative
Altitude	<15,000 feet

## 2-18. STORAGE AND SHIPMENT

### 2-18.1. Environment

2-18.1.1. The instrument should be stored in a clean, dry environment. The following environmental limitations apply to both storage and shipment:

Temperature	-40°C to +73°C
Humidity	<85% relative
Altitude	<50,000 feet

### 2-18.2. Packaging

2-18.2.1. **ORIGINAL PACKAGING.** Containers and materials equivalent to those used in factory packaging are available through Hewlett-Packard offices. If the instrument is being returned to Hewlett-Packard for servicing, attaching a tag indicating the type of service required, return address, model number, and full serial number. Also, mark the container FRAGILE to assure careful handling. In any correspondence, refer to the instrument by model number and full serial number.

2-18.2.2. **OTHER PACKAGING.** The following general instructions should be used for repackaging with commercially available materials:

- When the instrument is heavy paper or plastic, if shipping to a Hewlett-Packard office or service center, attach a tag indicating the type of service required, return address, model number, and full serial number.
- Use a strong shipping container. A double wall carton made of 250 pound test material is adequate.
- Use enough shock-absorbing material (2 to 4 inch layers) around all sides of the instrument to provide firm cushion and prevent movement inside the container. Protect the front panel with cardboard.
- Seal the shipping container securely.
- Mark the shipping container FRAGILE to assure careful handling.

Table 2-7 Option 001 Installation Instructions

NOTE		
Installation of Option 001 (TCXD) should be performed by qualified service personnel only.		
Option 001 consists of the following parts:		
HP Part Number	Qty.	Description
06374-55204	1	TCXD Assembly
10901-2011	1	Spacer (1.03)
2360-0115	1	6-32 x .44" Machine Screw
2360-0116	1	6-32 x 1.00" Machine Screw
2420-0001	2	6-32 Nut

**PRELIMINARY**

1. Turn off the HP 5314A and remove the AC power cord.
2. Turn the HP 5314A upside down and remove the four screws near the corners of the cabinet bottom.
3. Holding the top and bottom covers together, turn the HP 5314A rightside up and carefully lift the top cover.
4. Remove the handle.

There are two sets of instructions for installing Option 001. The first set (Procedure 1) is used to install Option 001 into a standard HP 5314A. The second set (Procedure 2) is used to install Option 001 into an HP 5314A with Option 002.

**Procedure 1**  
Installation of Option 001 into standard HP 5314A.


1. Remove the rear two black plastic spacers which hold the A2 assembly (see Figure 2-1) in place.
2. Carefully lift the A2 assembly out of the cabinet bottom.
3. Locate the two holes in the perforated barrier between the large electronic spectrum analyzer (A0C1) and the power transformer (A2T1). These holes are the mounting holes for the Option 001 A4 (06374-60004) assembly. They are also the +5V and ground points for the A4 assembly.
4. Attach the A1 assembly to the A2 assembly with the common side of A4 toward the large electrolytic. Use the supplied hardware (short 6-32 screw on the A1 mounting lug and long 6-32 screw and 1-inch spacer on the A1 mounting lug). See Figure 2-2, "Top Internal View," for correct positioning.
5. Reinstall the combination A2/A4 assembly into the HP 5314A cabinet bottom being careful to properly align the rear spacer stub and the line cord input block. Reinstall the two black plastic spacers.
6. Grasp the combination front panel and A1 assembly and carefully pull away from the cabinet bottom.
7. Use an Allen wrench to remove the two front panel LEVEL knobs.
8. Use a #16 nut driver to remove the rear front panel mounting nuts on the two BNC input jacks.
9. Remove the combination front panel window from the A1 assembly.
10. Locate jumper wire W1 on the A1 assembly (between A1U2 and A1U4). Using a soldering iron and needle-nose pliers, remove W1.

**NOTE**

Instruments with TCXD Option 001 require addition of diode A1CR4 on circuit board A1. See Figure 2-5 for A1 CR4 location between A1U2 and A1U7 on lower left corner of the board. If Option 001 is being installed, add A1CR4 diode (HP Part No. 14-1 0020).

Table 2-2 Option 007 Installation Instructions (Continued)

10. Referring to the sketch below, solder the coax cable from the Option 007 A4 assembly to the component side of the A1 assembly as follows: Solder the shield to the solder pad labeled **2** in the sketch and the center conductor to the solder pad labeled **1** in the sketch. The solder pad labeled **1** is left open. Use the diagonal cutters to clip any protruding wire on the circuit side of A1.

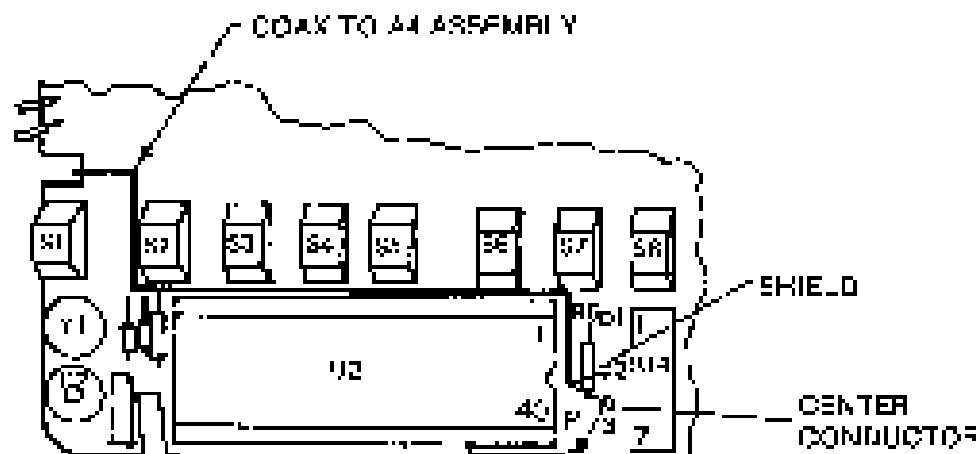

12. Cross the coaxial cable between U2 and the screw pads as shown in the sketch. Pass the cable through the cutout on the side of the A1 assembly with the rest of the cable.
13. Assemble the front panel of A1 and secure it with a 3/16" BNC nut.
14. Replace the front covers, being careful to center them between the + and - positions. Tighten both Allen screws from the + side of A1.
15. Installation of Option 007 (nonstandard HP 5314A with a nonstandard HP 6256A761) powered is described as "PREFLIGHT" in Table 2-3, Option 007 Adjustment.

#### Procedure 2:

Installation of Option 007 on HP 5314A with Option 002.

1. Remove the red and black cables of the A1 assembly from the battery socket by pulling on the terminal caps.
2. Remove the screws which hold the battery and A1 assembly to the cabinet bottom.
3. Carefully remove the A1 assembly by first pulling the assembly toward the battery and second, lifting the assembly.
4. Remove the two four black plastic spacers which hold the battery in place. Lift the battery out of the cabinet bottom.
5. Perform steps 1 through 14 of Procedure 1 in this table. Then return and continue with step 16.
6. Install the battery pack into the cabinet bottom. Mount the two four black plastic spacers.
7. Install the A1 assembly into 11 of the A2 assembly but **DO NOT** connect the red or black cable to the battery.
8. Insert and tighten the four screws which hold the A1 assembly.
9. Connect the red and black cables to the battery's positive and negative posts, respectively. Turn the HP 5314A ON.
10. Installation of Option 007 (nonstandard HP 5314A with Option 007) is now complete. (343101477) (Y) proceed to item 4 "PREFLIGHT" in Table 2-3, Option 007 Adjustment.



Table 3.3: Option 002 Installation Instructions

NOTE		
Installation of Option 002 (battery pack) should be performed by qualified service personnel only.		
Option 002 consists of the following parts:		
HP Part Number	Qty.	Description
05314-00000	1	Battery Charger Assembly
1420-0052	1	6V Lead-Acid Battery
05314-00002	1	Battery Bracket
2420-0001	1	5-32 x 1/2" Machine Screw
1.	Turn off the HP 3314A and remove the AC power cord.	
2.	Turn the HP 3314A upside down and remove the four screws near the corners of the cabinet bottom.	
3.	Holding the top and bottom covers together turn the HP 3314A right side up and carefully lift the two covers.	
4.	Remove the front two (one plastic spacers and washers, secured 1/8" behind the combination front panel A1 assembly) (shown in Figure 3-1 only).	
5.	Assemble the battery and battery hold-down bracket, matching the polarity of the battery with that shown on the hold-down bracket.	
6.	Insert A1-A2 interconnect cables to lay across the lower left corner of the cabinet bottom.	
7.	Install the battery pack and A3 assembly as follows:	
a.	Secure the two spacer studs in the front of the cabinet bottom (approximately 1/8" behind the combination front panel A1 assembly).	
b.	Mount the battery pack and bracket on the two spacer studs (go through the two large holes on the bracket, and the battery posts (+) and (-) are pointing toward the A2 assembly near of the cabinet).	
c.	Locate the Option 002 A3 assembly (05314-50000). Lay the assembly on a flat surface (non-pendant side up) and cross the two cables (red and black) in they come straight up (perpendicular) from the assembly.	
d.	Install the A3 assembly (05314-50000), pendant-side up, into A2 (the 6-pin plastic board connector on the A2 power supply assembly).	
e.	Insert a 5/16-32 screw through the hand assembly/battery mounting bracket and secure them to the cabinet bottom.	
NOTE		
Make sure the HP 3314A power switch is in the OFF position.		
4.	Connect the red cable to the (+) post of the battery pack.	
5.	Connect the black cable to the (-) post of the battery pack.	
6.	Insert the two black plastic spacers (with out washers) onto the front spacer studs.	
7.	Installation of Option 002 is now complete. <b>WARNING!</b> Proceed to step 4 of Table 3.4: Battery Control Voltage Adjustment.	

## SECTION III OPERATION

### 3-1. INTRODUCTION

3-2. This section provides complete operating information needed for the HP 5314A Universal Counter. This section includes a description of all front-panel controls, connections and indicators, operating instructions, operator's checks, and operator's maintenance.

### 3-3. OPERATING CHARACTERISTICS

3-4. The following paragraphs describe the operating ranges and resolution for frequency, period, time interval, ratio A/B, ratioize A, and self-check functions.

#### 3-5. Frequency Measurements

3-6. All frequency measurements are made through the A channel input. The frequency range is 10 Hz to 10 MHz direct count and 101 Hz to 100 MHz prescaled by 10, with a minimum input level of 25 mV rms or 75 mV p-p with a minimum pulse width of 5 ns times the attenuator setting. The resolution is 0.1 Hz for frequencies up to 10 MHz. With frequencies above 10 MHz (prescale mode), the resolution is 10 Hz. See Figure 3-3 for a typical frequency measurement setup.

#### 3-7. Period Measurements

3-8. All period measurements are made through the A channel input. The signal can be a steady-state square wave, or a wave form with components later than 10 Hz. The period range is 100 ns to 400 ns (10 Hz to 2.5 MHz). The sensitivity is 25 mV rms or 75 mV p-p. The resolution is 100 ns. See Figure 3-4 for a typical period measurement setup.

#### 3-9. Time Interval Measurements

3-10. The counter measures time intervals from Channel A to Channel B; that is, Channel A starts the measurement and Channel B stops the measurement. Time between points on a single waveform can be measured by connecting the input signal to CHANNEL A jack and placing the Input Amplifier Control switch to COM A. Under these conditions, the slope and level controls of Channel A and Channel B allow variable triggering on either the + or - slope. With the Input Amplifier Control switch set to S/P, measurements can be made between points on separate waveforms. The time interval range is 250 ns to 7 s. The sensitivity is 25 mV rms (75 mV p-p). The resolution is 100 ns. See Figures 3-5 and 3-6 for typical time interval measurement setups.

3-11. INITIATING A MEASUREMENT. The HP 5314A does not internally arm itself in time interval. Both Channel A and B must be externally armed before a time interval measurement can be initiated. See Figure 3-1. Each channel is armed by the first positive or negative edge (corresponding to the slope selection settings) of the input signal. Channel A is armed first, Channel B ignores all input edges until Channel A is armed. Once Channel A is armed, the first positive or negative edge (corresponding to the slope selection settings) arms Channel B. Until Channel B is armed, Channel A ignores any further input edges. Once Channel B is armed, the next slope selected edge in Channel A starts the time interval measurement, and the next slope selected edge in Channel B stops the time interval measurement.

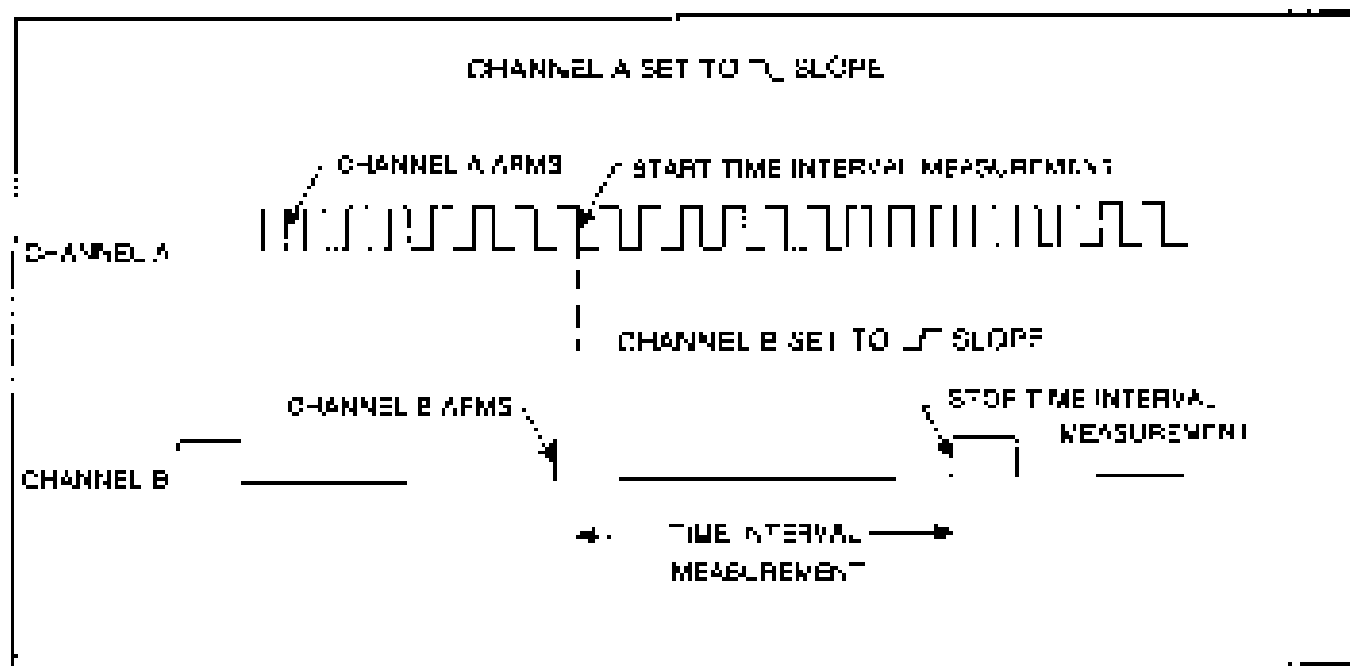


Figure 3-1 Time Interval Measurement: Routine

### 3-12. Ratio A to B Measurements

3-12. The ratio between two frequencies ( $f_A/f_B$ ) is measured by connecting one signal to Channel A and the other to Channel B. Channel A operates in the range of 10 Hz to 70 MHz. Channel B operates in the range of 10 Hz to 2.5 MHz. If the higher frequency is connected to Channel A, the ratio will be greater than one. The answer for a ratio measurement is a unitless figure. See Figure 3-2 for a typical ratio measurement setup.

### 3-14. Totalize A Measurements

3-15. The HP 5374A can totalize directly from 10 Hz to 70 MHz with a resolution of 1 count. Input frequencies between 10 Hz and 100 MHz may be totalized in the prescale mode (see Figure 3-8) with a resolution of 10 Hz. The HOLD switch may be used to latch the display. However, the counter continues to increment and when the HOLD is released, the updated count is displayed. See Figure 3-5 for a typical totalize measurement setup.

### 3-16. Self-Check

3-17. The HP 5374A contains a built-in self-check function. The self-check mode programs the unit to make a frequency measurement on its internal 10 MHz time base. For details concerning self-check, see Figure 3-5, Operator's Checks.

## 3-18. PANEL FEATURES

3-19. Front panel features of the HP Model 5374A are described in Figure 3-2, Front Panel Controls and Connectors. Contained in Figure 3-2 is a description of each of the controls and connectors. Description numbers match the numbers on the illustration.

## 3-20. OPERATING INSTRUCTIONS


3-21. General operating procedures with the HP Model 5314A Universal Counter connected in typical measurement setups are shown in Figures 3-3, 3-4, 3-5, 3-6, 3-7, and 3-8. Many other applications are possible but not shown because the general operating procedure is the same. Description numbers match the numbers on the illustration.

## 3-22. OPERATOR'S MAINTENANCE

3-23. There is no operator's maintenance for the HP 5314A. All maintenance should be performed by qualified service personnel only.

### 3-24. Power/Warm-Up

3-25. The HP 5314A has a two position power switch, STBY and ON. For HP 5314A models with Option 002, it is important that the instrument be connected to the power source in the STBY mode when not in use. This supplies power to the battery charging circuitry.

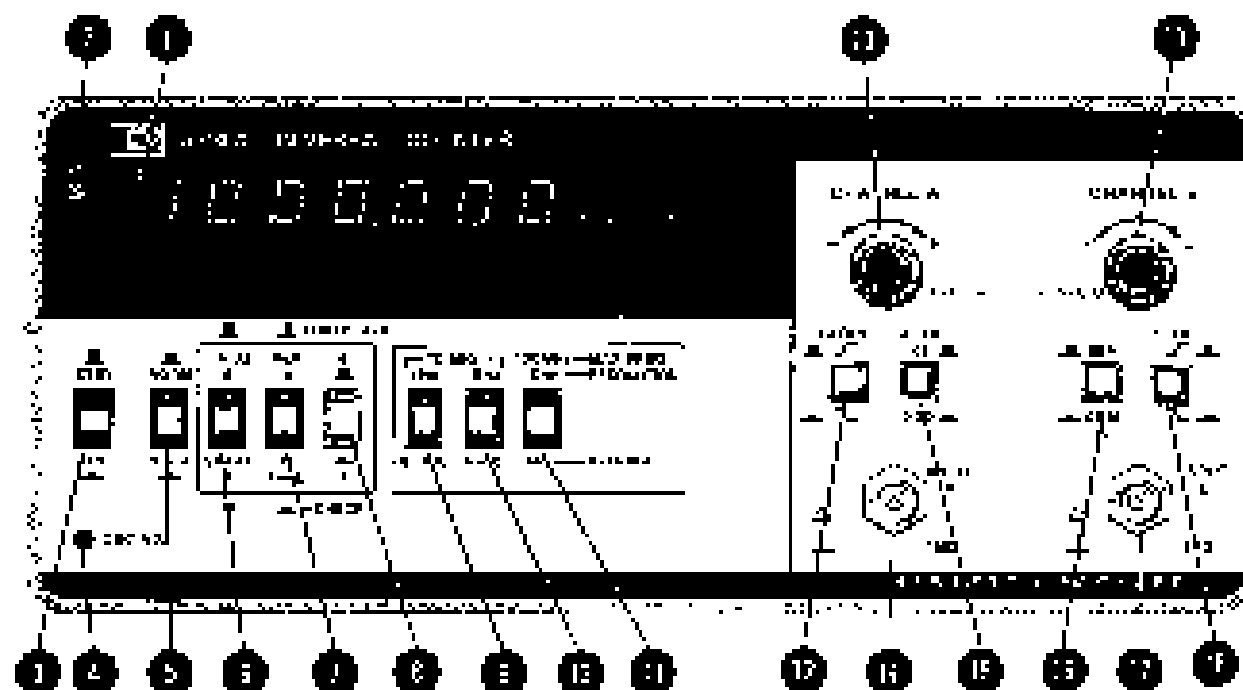

1. **GATE** — the gate light, which illuminates the main gate is open and measurement is in progress.
2. **OVERFLOW** — LED on wafer, which lights when one or more of the most significant digits (digits to the left of the decimal point) are not displayed. However, the counter continues to count correctly, although the digits are only correct to the extent of the time base.
3. **ON/OFF** — Supplies power to the entire instrument in the ON position. Supplies power only to the Orion III battery-charging circuit in the OFF position.
4. **OSC ADJ** — Front panel window allowing access to the oscillator frequency-adjustment capacitor (A1C2).
5. **HOLD/HOLD** — In HOLD, switch IN, the measurement (except for totalize, in progress) is stopped, the main counter is reset, and the HP 5314A is held ready to make a new measurement. The highest count displayed so the last complete measurement is displayed. When switched LOCK to HOLD, a new measurement is entered. In totalize, when placed in HOLD, the display is held but the counters continue to increment. When the HOLD is released, the display is updated and resumes counting.
6. **FREQ/START A** — With this switch IN, the HP 5314A is placed in frequency or duty cycle (START) mode as determined by the position of the blue shift key (1).
7. **PER A/TIME A** — With this switch IN, the HP 5314A is placed in period or time interval mode as determined by the position of the blue shift key (2).

Figure 3-2. Front Panel Controls and Connectors

# NOTE

There are two additional functions which are selected using combination numbers 4 and 5. These two functions are held together and are 4 and 5. To select these mode, place both function switches 4 and 5 in the IN position. The comment is now making a frequency measure. Set on the external 10 MHz time base. Activating switches 4 and 5 causes 10 MHz to be displayed. Activating switch 4 causes 100 MHz to be displayed. Resolution selection switches can now be checked for proper operation. For Ratio A switch, place both function switches 4 and 5 in the OUT position. For more details on Ratio A to B, refer to paragraph J-17 and Figure J-7.

## 4 AND 5 KEY

IN/OUT position determines the function selected by keys 4 and 5. IN position selects the following functions. OUT position selects the upper row functions.

# NOTE

The following three switches 6, 7, and 8 are output ports. Depending on the function selected, frequency, Ratio A, Ratio B, the switches either represent the resolution and waveform gate time, or the sample size (N samples).

## 6 1 Hz/N 120

In frequency (10 Hz to 10 MHz), this switch, when N, gives a display with a 1 Hz resolution. In count mode timer, for frequencies between 10 Hz and 100 MHz, use the explanation for switch 6. In period, this switch, when IN, causes the HP 5314A to measure 120 periods and display the average value in 60 microseconds. In ratio, this switch when IN, causes the HP 5314A to make 120 measurements and display the average ratio. This switch does not improve accuracy beyond 100 nanoseconds for time interval measurements.

## 7 10 Hz/N 10

In frequency (10 Hz to 10 MHz), this switch, when IN, gives a display with a 10 Hz resolution. In count mode gate time, for frequencies between 10 Hz and 100 MHz, use the explanation for switch 7. In period, this switch, when IN, causes the HP 5314A to measure 10 periods and display the average value in 10 microseconds.

In ratio, this switch, when N, causes the HP 5314A to make 10 measurements and display the average ratio. This switch does not improve accuracy beyond 100 nanoseconds for time interval measurements.


# NOTE

There is another resolution available using switches 6 and 7 in addition to the two resolutions called out on the front panel. It is 0.1 Hz/N=1000. This is generated when switches 6 and 7 are in the OUT position. In frequency (10 Hz to 10 MHz), with these three switches out, the HP 5314A gives a display with 0.1 Hz resolution (10 sample gate time). For frequencies between 10 Hz and 100 MHz, use the explanation for switch 6. In period, with these three switches out, the HP 5314A measures 1000 periods and displays the average value in 1000 microseconds. In ratio, with these three switches out, the HP 5314A makes 1000 measurements and displays the average ratio. This switch combination does not improve accuracy beyond 100 nanoseconds for time interval measurements.

Figure J-2 Front Panel Controls and Connectors (Continued)

- 10 Hz/N=1** This switch when IN, introduces the Channel A input signal through a divider by 10 prescaler (shown when FREQUENCY/ART A switch **1** is in). This switch **MUST** be used for frequencies between 10 MHz and 100 MHz. In frequency, this switch when IN, prescales the input signal by 10 and gives a display with a 10 Hz resolution (prescale by 10 with a 1 second gate time). This switch and switch **11 Hz/N=100** /N prescales the input and gives a display with a 100 Hz resolution (prescale by 10 with a 100 millisecond gate time). This switch and switch **11 Hz/N=10** /N prescales the input and gives a display with a 1 Hz resolution (prescale by 10 with a 20 millisecond gate time).
- In Period, this switch /N causes the HP 5314A to measure 1 period and display the value in microseconds; the switch is used for single-shot period measurements.
- In Ratio, this switch /N causes the HP 5314A to make 1 measurement and display the ratio; this switch is used for angle-sine ratio measurements.
- In Time Interval, this switch should be pressed. This program uses HP 5314A to make single-shot time interval measurements.
- In Start, the HP 5314A counts the input directly (10 Hz to 10 MHz) and displays in units. With this switch IN, the input is prescaled by 10 and the display is in kilounits. This switch **MUST** be used in START A for signals above 10 MHz.
- 11 Hz/N=100** This switch setting determines which slope of the Channel A input signal will be used for the triggering slope.
- LEVEL A** LEVEL control used in conjunction with the attenuator switch **10** to select the reference voltage at which triggering occurs. Approximately 1350 millivolts is the amount varied. The input amplifiers are decoupled. The actual dc level of the trigger point is unknown.
- INPUT A** BNC connector for the A channel signal input. The input impedance is 1 Meg. For more information on the input signal, refer to Table 1-1, Specifications.
- ATTN** Channel A input signal attenuator switch. Used in conjunction with the LEVEL control to set the trigger point. The input signal is not attenuated in XT position. Input signal amplitude is reduced by 2 (dB) or 20 in the X20 position.
- SEPARATE** Input amplifier channel switch.
- SEP - Allows independent operation of A and B channels.
  - EXTMA - Externally connects Channels A and B in parallel. Used for single source time interval measurements. Channel B input jack B not active. The input impedance remains the same as in SEP.
- INPUT B** BNC connector for the B channel signal input. The input impedance is 1 Meg. For more information on the input signal, refer to Table 1-1, Specifications.
- 12 SLOPE** This switch setting determines which slope of the Channel B input signal will be used for the triggering slope.
- LEVEL B** LEVEL control used to select the reference voltage at which triggering occurs. When switch **13** is in SEP, the trigger voltage varies approximately 1350 mV. When switch **13** is in COM A, the trigger voltage varies approximately -100 mV times the attenuator switch **10** setting. The input amplifiers are decoupled. The actual dc level of the trigger point is unknown.

Figure 2-2 Front Panel Controls and Connectors (continued)

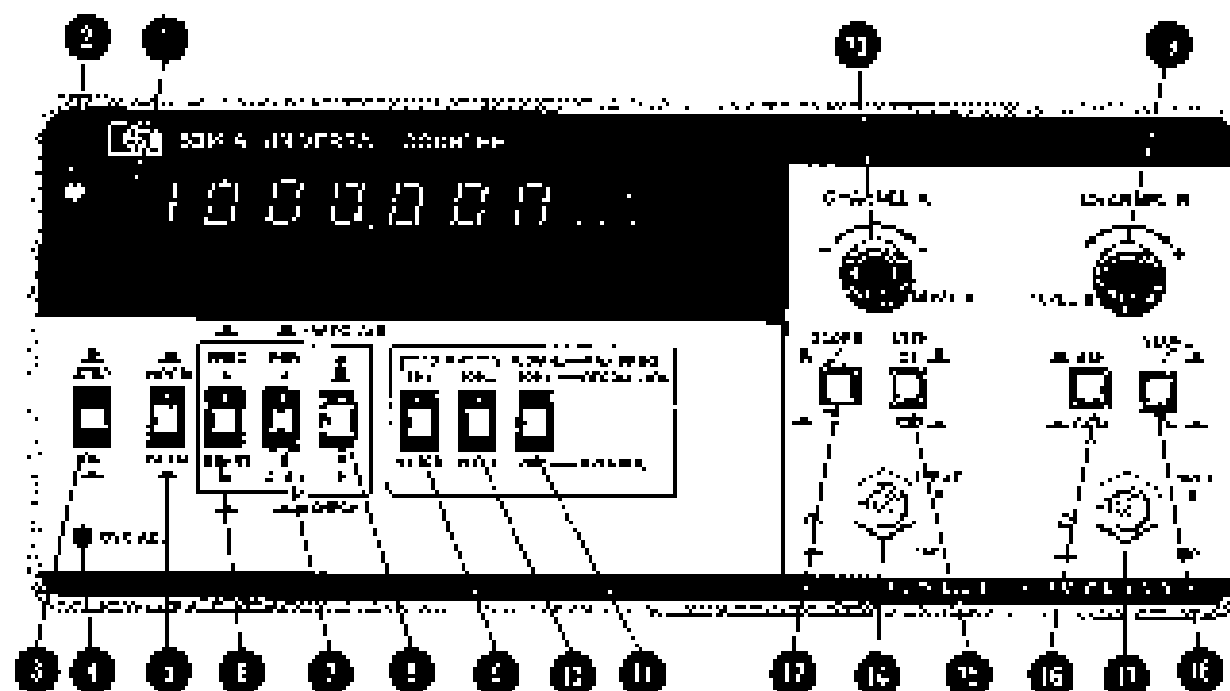

#### NOTE

See Table 1-1 for the specifications for all input signals concerning bandwidth, accuracy, and amplitude.

1. Set the main power switch (1) to the ON position.
2. Set COAX A/SEP switch (2) to the COAX position.
3. Connect the input signal to INPUT A jack (3).
4. Press FREQ/START/STOP push button (4). This is the blue shift key (5) and the ONLY push button. This selects the top function of switch (6).
5. Set RANGE (7), ATTEN (8), and LEVEL (9) to the desired positions; see Table 1-1, Specifications, for details.
6. Select either 1 Hz (10) or 10 Hz (11) resolution for frequencies between 10 Hz and 10 MHz. NOTE: 10 Hz (10) may also be used for frequencies higher than 10 MHz; the 100 MHz/10 Hz switch (11) must be pressed IN.


#### NOTE

The following three resolutions are available with the HP 5314A, but are not printed on the front panel:

- A. For 0.1 Hz resolution (10 second gate time) on frequencies from 10 Hz to 10 MHz, place all three resolution switches (10, 11, 12) in the OUT position.
- B. For 100 Hz resolution (0.1 second gate time) on frequencies to 100 MHz, place switches (10) and (11) in the IN position.
- C. For 1 kHz resolution (0.01 second gate time) on frequencies to 100 MHz, place switch (10) and (11) in the IN position.

Figure 3-5 Frequency Measurement Setup



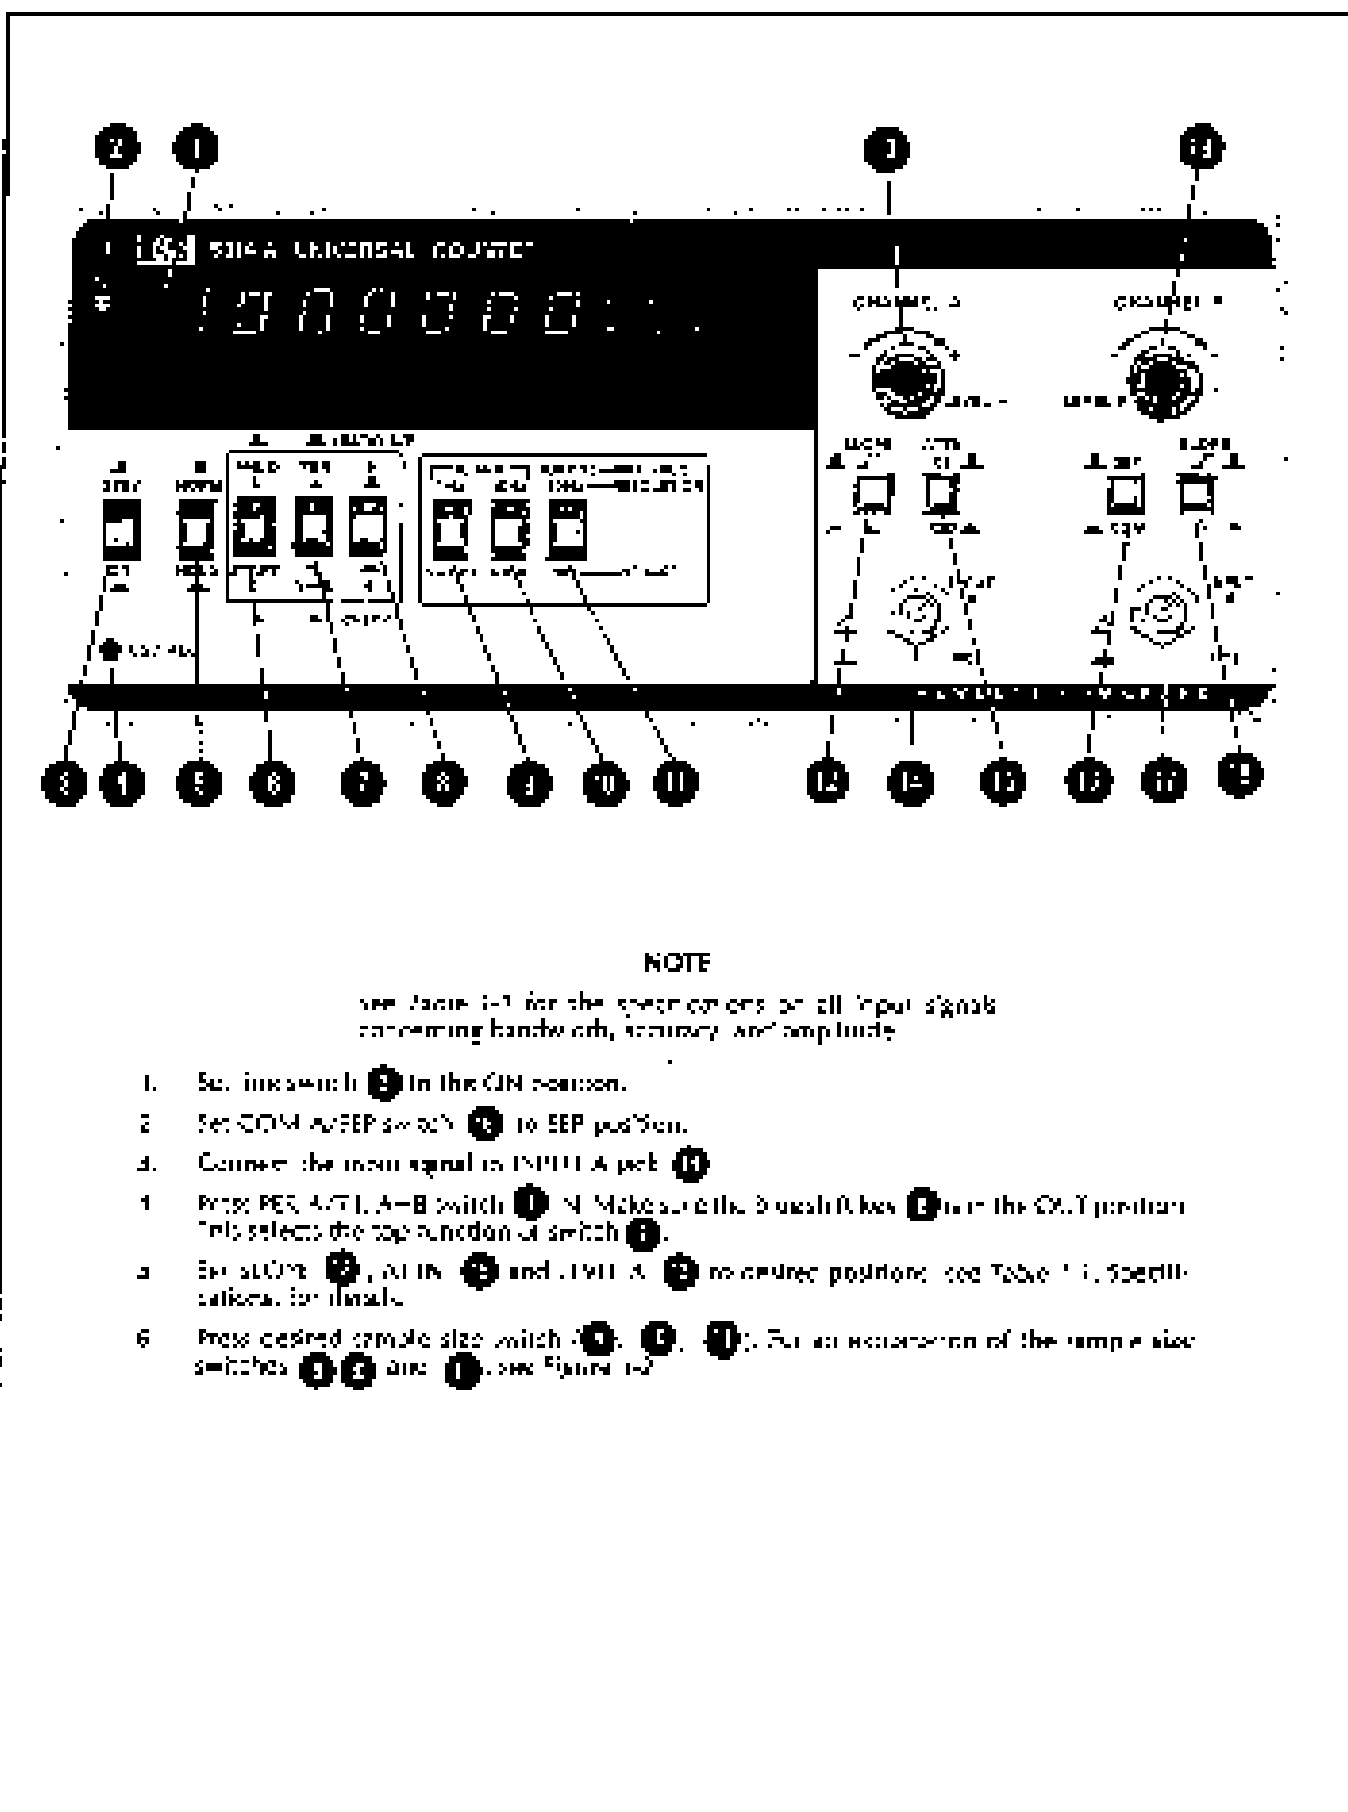


NOTE

See Table 1-1 for the specifications on all input signals concerning bandwidth, accuracy, and amplitude.

1. Set time switch **2** to the ON position.
2. Set NORM/STOP switch **3** to STOP position.
3. Connect the input signal to INPUT A port **11**.
4. Press PER, A/B switch **4**. Makes the 3 switches **5** in the ON position. This selects the top function of switch **4**.
5. Set NORM **2**, A/B **3** and INPUT A **11** to desired positions (see Table 1-1, Specifications for details).
6. Press desired sample size switch **6**, **7**, **8**. For an explanation of the sample size switches **6**, **7** and **8**, see Figure 1-2.

Figure 1-4. Period Measurement Setup

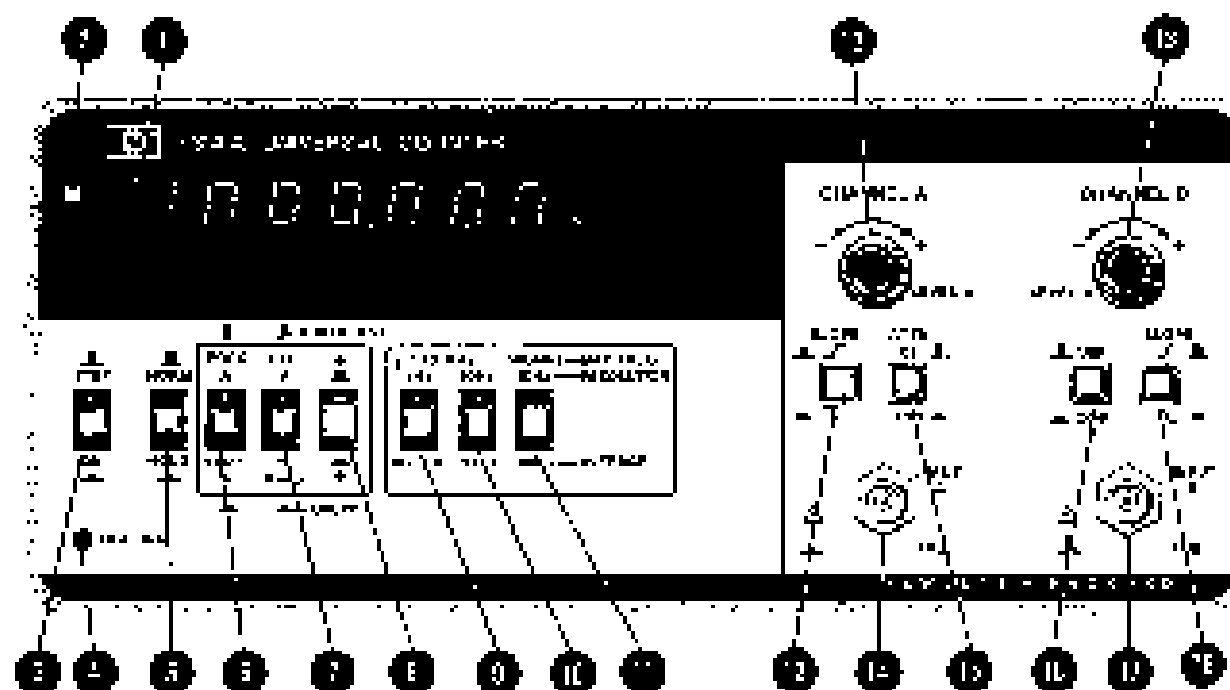


# NOTE

See Table 1-7 for the specifications for all input signals including bandwidth, accuracy, and amplitude. See paragraph 3-1 for time interval timing characteristics.

1. ECL line switch **1** to the CIN position.
2. SEC DIV. ADJ. switch **2** to COM A position.
3. Connect the input signal on the INPUT A jack **3**.
4. Press PULSE A-B switch **4** IN. Press the blue shift key **5** with position. This selects the normal function of switch **6**.
5. Set SLOPE switch **7** and A/B switch **8** and DEL. A/B control **13** and **14** to desired positions; see table 1-1, Specifications, for details.
6. Press inhibit switch **11** INHIBIT. This places the HP 5314A into single-shot mode. All time interval measurements made with the HP 5314A should be single-shot.

Figure A3. Down-time Time Interval Measurement Setup

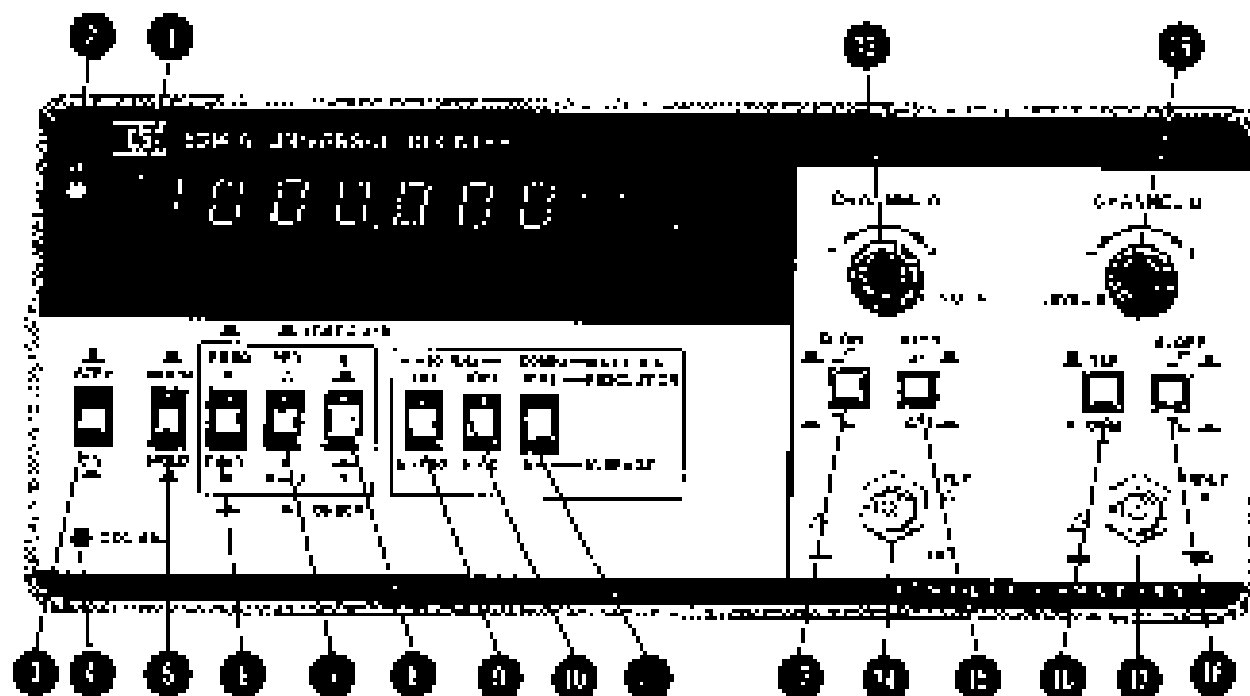


#### NOTE

See table 1-3 for specifications on all input signals concerning bandwidth, accuracy, and amplitude. See paragraph 3-11 for time interval timing characteristics.

1. Set mode switch **2** to the ON position.
2. Set CONTROL/SETUP switch **3** to SETUP position.
3. Press PIR A/T1, A-B switch **1** IN. Press the time shift key **4** (ON position). This enters the bottom function of range **1**.
4. Connect the start time-interval signal to the INPUT A jack **14**. Connect the stop time-interval signal to the INPUT B jack **7**.
5. Set SCOPE switches **12** and **13** to the range **15** and LEVEL A and B controls **16** and **17** to desired positions; see table 1-3, Speed column, for details.
6. Press resolution switch **1** (ON) IN. This places the HP 5314A into single shot mode. All time interval measurements made with the HP 5314A should be single shot.

Figure 1-6. Time Source Time Interval Measurement Setup

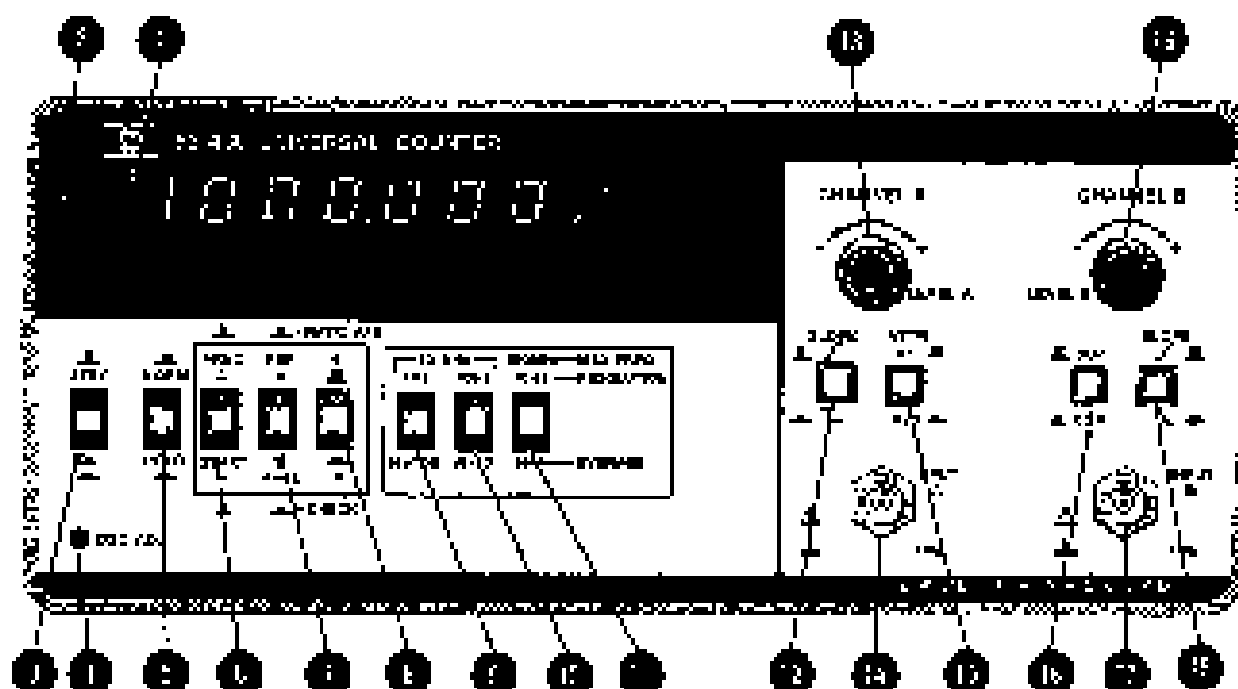


#### NOTE

See Table 7-1 for specifications on all measurements concerning bandwidth, accuracy, and amplitude.

1. Set the switch **1** to the ON position.
2. Set the A/SEP switch **2** to SEP position.
3. Place the two function switches **3** and **4** in the ON-T position. This places the HP3314A in the Radio A to B function.
4. Connect the higher frequency signal to the INPUT A jack **5**. Connect the lower frequency signal to the INPUT D jack **6** (the higher frequency can be input to INPUT B if below 25 MHz).
5. Set SLOPE switches **7** and **8**, ATTN switch **9**, and THRESH A and B controls **10** and **11** to desired positions; see Table 7-1, Specifications, for details.
6. Press the desired sample size switch **12**, **13**, **14**, **15**, **16**, **17**, or **18**. For an explanation of the sample size switches, see Figure 7-7, **1**, **2**, and **3**.

Figure 3-7. Radio Measurement Setup

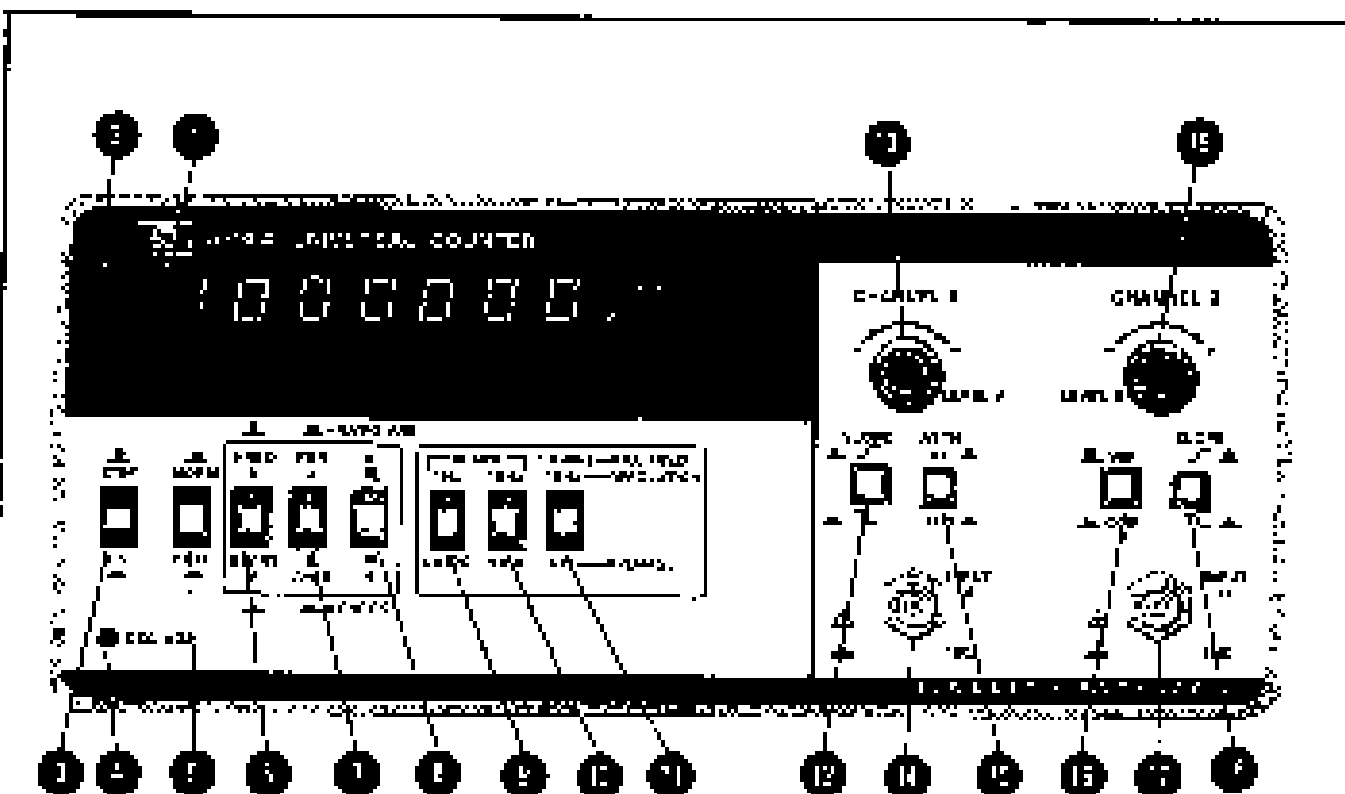


#### NOTE

See Table 2-1 for specifications on all input signals concerning bandwidth, accuracy, and amplitude.

1. Set line switch ② to the ON position.
2. Set CDM A/SEP switch ⑩ to SEP position.
3. Press the FREQ. A/START A switch ③.
4. Press the blue shrink-wrap button ④. This selects the bottom function of switch ⑤.
5. Set NORM ⑥, ATTN ⑦, and LEVEL A ⑪ to desired positions; see Table 2-1 "Specifications" for details.
6. Connect the input signal to INPUT 2 port ⑫. For input frequencies higher than 70 MHz, the 100 MHz/10 Hz attenuator switch ⑬ (prescale by 10) MUST be present in its position.

Figure 2-3 Front-Panel Measurement Setup

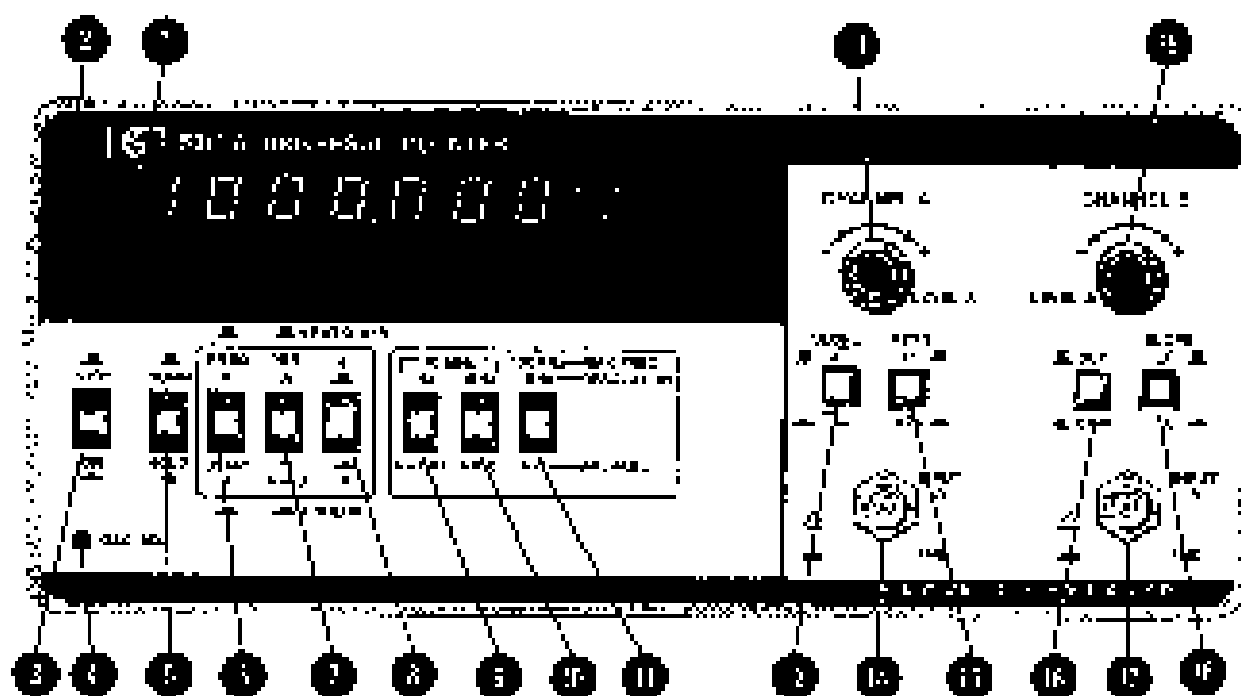

NOTE

This operator's check checks for proper operation of the counter chip, A/D converter, and resolution switches, and the display. This procedure does not check the operation of the two input amplifiers. See Figure A7, Operational Verification, for a more complete operational check.

1. Set the Line switch **3** in the ON position.
2. Depress both function switches **1** and **1** (H NORM). This places the HP 5314A in the self-check mode.
3. Place resolution switch **5** (10 Hz/N=100) in the IN position. The HP 5314A should display  
**1000.000**  
 with the overflow LED **3** ON and the instrument gating mode every second.
4. Place resolution switch **11** (10 Hz/N=10) in the IN position. The HP 5314A should display  
**10000.00**  
 with the overflow LED OFF and a 100-millisecond gate time.
5. Place resolution switch **7** (10 Hz/N=1) in the IN position. The HP 5314A should display  
**91000.00**  
 with the overflow LED **3** ON and a 1-second gate time.
6. Place both resolution switches **5** and **11** in the IN position. The HP 5314A should display  
**91000.00**  
 with the overflow LED **3** OFF and a 100-millisecond gate time.
7. Place both resolution switches **11** and **11** in the IN position. The HP 5314A should display  
**100000.00**  
 with a 10-millisecond gate time.

Figure 2-3. Operator's Check

## SECTION IV PERFORMANCE TESTS

### 4-1. INTRODUCTION

4-2. The two procedures in this section test the instrument's electrical performance using the specifications of Table 3-1 as performance standards. The first test is an operation verification which checks all major functions of the HP 3314A. The second test is the full performance test which checks all verifications.

### 4-3. EQUIPMENT REQUIREDS

4-4. Equipment required for the complete test and operation verification is listed in Table 2-2. Any equipment which satisfies the minimum specifications given in the table may be substituted for the recommended model.

### 4-5. OPERATION VERIFICATION

4-6. The abbreviated check given in Table 4-1 can be performed to give a high degree of confidence that the HP 3314A is operating properly without performing the complete performance test. The operation verification should be used for incoming QA, routine maintenance, and after instrument repair.

### 4-7. PERFORMANCE TEST

4-8. The performance test is given in Table 4-2. The performance test verifies all specifications listed in Table 3-1. Depending on the use and environmental conditions, the instrument should be checked using the performance test at least once a year.

### 4-9. TEST RECORD

4-10. Results of the operation verification may be tabulated on the operation verification test card located at the end of Table 4-1. Results of the performance tests may be tabulated on the performance check test card located at the end of Table 4-2.

Table 4-1. Operation Verification

I. SELF TEST	
Perform the self test procedure per figure 3-9. Mark the results on the test card.	
II. FREQUENCY RESPONSE AND SENSITIVITY	
A. CHANNEL A	
Specifications: 10 Hz—100 MHz, 20 mV p-p	
1. Set the HP 3314A function controls as follows:	
FUNCTION	..... LF/CF A
RESOLUTION	..... 100
BOTH CHANNELS	..... OFF
BOTH INPUTS	..... Mismatch
ATTN	..... 0
SEPARATION	..... OFF
2. Connect an HP 3314A voltmeter to the HP 3314A INPUT A with a cable and 10-ohm Tee-through. Set the HP 3314A for 500 Hz and 5 MHz at 20 mV p-p. At 10 mV p-p, use the HP 1174A with an HP 0666A signal generator. Press the Lock switch 10 Hz position (A-1), set the HP 1174A for 500 Hz and 10 mV p-p. At 20 mV p-p, set the HP 1174A for 500 Hz and 20 mV p-p. The counter should display the specified frequencies. Mark the results on the test card.	

Table 4-1. Operating Verifications (Continued)

### 5. CHANNEL D

Specifications: 10 Hz–10 MHz, 25 mV/div

1. Repeat Step A1. Set the HP 3314A FUNCTION to **CONT**. Use horizontal lines on screen. FREQ A and PER A **OUT**.
2. Connect an HP 3314A to the HP 3314A INPUT A with a cable and 20-ohm feedthrough. Set the HP 3314A for 200 mV and 10 MHz. At 25 mV/div, the HP 3314A should display "1.00" at horizontal frequencies. Mark the results on the test card.

### III. PERIOD



Specifications: 10 Hz–10 MHz, 25 mV/div

- A. Repeat Test II, Step A1. Set the HP 3314A FUNCTION to **PER**. (Make sure the HP 3314A Function is **OUT**.)
- B. Connect an HP 3314A to the HP 3314A INPUT A with a cable and 20-ohm feedthrough. Set the HP 3314A for 200 mV and 10 MHz. At 25 mV/div, the HP 3314A should display 1 millisecond and 0.410 milliseconds, respectively. Mark the results on the test card.

### IV. TIME INTERVAL

Specifications: 200 Hz–10 MHz, 25 mV/div

- A. Set the HP 3314A front-panel controls as follows:
 

FUNCTION	.....	TIME
RESOLUTION	.....	N=1
Rate key	.....	1
CHANNEL A SLOPE	.....	
ATTN	.....	X1
SEP/COM A	.....	COM A
CHANNEL B SLOPE	.....	
BOTH LEVELS	.....	60 dB range
- B. Connect an HP 3314A to the HP 3314A INPUT A with a cable and 20-ohm feedthrough. Set the HP 3314A for 1 MHz or 100 mV/div. (30 mV/div preferred.) The HP 3314A should display 0.5 microseconds at 100 megahertz. Mark the results on the test card.

### V. RATIO


Specifications:

Channel A: 10 Hz–10 MHz, 25 mV/div

Channel B: 10 Hz–10 MHz, 25 mV/div

- A. Set the HP 3314A front-panel controls as follows:
 

FUNCTION	.....	RATIO A/B
RESOLUTION	.....	N=100
BOTH SLOPES	.....	.....
BOTH LEVELS	.....	Multi-range
ATTN	.....	X1
SEP/COM A	.....	SEP
- B. Connect the HP 3314A, HP 3314A, and HP 3314A as shown in the following diagram:

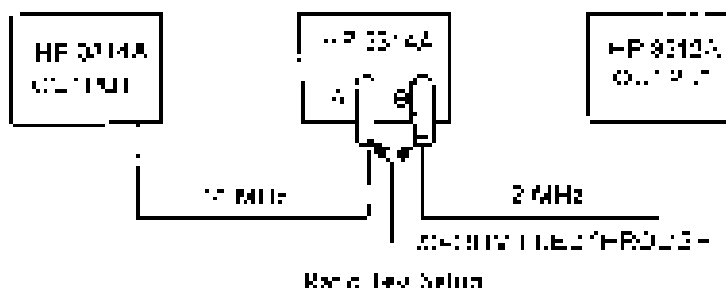

- C. Set the HP 3314A for 10 MHz or 25 mV/div. Set the HP 3314A function generator to 1 kHz at 25 mV/div (square waves). The HP 3314A should display 0.00. Mark the results on the test card.



# OPERATION VERIFICATION TEST CARD

MINITRACARD Model 5414A  
Universal Converter

Test Performed by \_\_\_\_\_

Serial No. \_\_\_\_\_

Date \_\_\_\_\_

DESCRIPTION	CHECK
I. SELF-CHECK	_____
II. FREQUENCY RESPONSE AND SENSITIVITY	
Channel A: 50 Hz, 5 MHz, 50 MHz, 100 MHz	_____
Channel B: 50 Hz, 5 MHz	_____
III. PERIOD	
2 milliseconds	_____
1400 milliseconds	_____
IV. TIME INTERVAL AND TIME INTERVAL AVERAGE	
Time Interval: 0.5 milliseconds or 100 mV (±200 $\pm$ 1% p.p.s.)	_____
V. BANDWIDTH	
Bandwidth as per Test V, step c	_____

Table 4-2 A. Calom Performance Test

# I. SELF TEST


Perform the self test procedure per Figure 4-5. Mark the results on the test card.

## II. FREQUENCY RESPONSE AND SENSITIVITY

### A. CHANNEL A

Specification: 10 Hz—100 MHz, 25 mV rms

1. Set the HP 5314A front panel controls as follows:

FUNCTION	FREQ A
RESOLUTION	1 Hz
BOTH SLOPES	
ATTN	0
SEPCOM A	SEP
BOTH LEVELS	Midrange

2. Connect an HP 3314A to the HP 5314A INPUT A with a cable and 50-ohm feedthrough. Vary the HP 3314A from 10 Hz to 100 MHz, maintaining a 25 mV rms signal level. The counter should display the correct frequencies. Mark the results on the test card.
3. Connect an HP 3366A signal generator to the HP 5314A INPUT A with a cable and 50-ohm feedthrough. Press the preset 10 Hz. Vary the signal generator, Vary the HP 3366A signal generator from 10 MHz to 100 MHz, maintaining a 25 mV rms signal level. The counter should display the correct frequencies. Mark the results on the test card.

### B. CHANNEL B

Specification: 10 Hz—2.5 MHz, 25 mV rms

1. Repeat step A1. Set the HP 5314A SEPCOM A switch in CHAN A. Set all three function switches OUT.
2. Connect an HP 3314A to the HP 5314A INPUT A with a cable and 50-ohm feedthrough. Vary the HP 3314A from 10 Hz to 2.5 MHz, maintaining a 25 mV rms signal level. The counter should display 100% throughout the specified frequency. Mark the results on the test card.

## III. PERIOD

Specification: 15 Hz—2.5 MHz, 25 mV rms

1. Repeat Test II, Step A1. Set the HP 5314A function switch FREQ A switch OUT. Mark the HP 5314A blue key's OUT.
2. Connect an HP 3314A to the HP 5314A INPUT A with a cable and 50-ohm feedthrough. Vary the HP 3314A from 10 Hz to 2.5 MHz, maintaining a 25 mV rms signal level. The counter should display the correct period of all frequencies in this range. Mark the results on the test card.

## IV. TIME INTERVAL

Specification: 20 Hz—100 MHz

1. Set the HP 5314A front panel controls as follows:

FUNCTION	TIME B
BLUE key	IN
RESOLUTION	N-1
CHANNEL A SLOPE	
CHANNEL B SLOPE	
ATTN	0
SEPCOM A	COMB
BOTH LEVELS	Midrange

2. Connect an HP 3314A to the HP 5314A INPUT A with a cable and 50-ohm feedthrough. Set the HP 3314A for 100 MHz at 100 mV rms (0.315 mV p-p). The HP 5314A should display 0.5 mV or 0.5 nanoseconds. Mark the results on the test card.

Table 1-2. In-Lab Test Performance Test (Continued)

V. RATIO

Specifications


Channel A: 10 Hz–10 MHz, 25 mV rms

Channel B: 10 Hz–25 MHz, 25 mV rms

- A. Set the HP 5314A front-panel controls as follows:

FUNCTION	.....	RATIO A/B
RESOLUTION	.....	100
BOTH SLOPES	.....	
BOTH LEVELS	.....	Medium
ATTN	.....	20
SEPCOM A	.....	SEP

- B. Connect the HP 5314A, HP 5314A, and HP 5312A as shown in the following diagram:

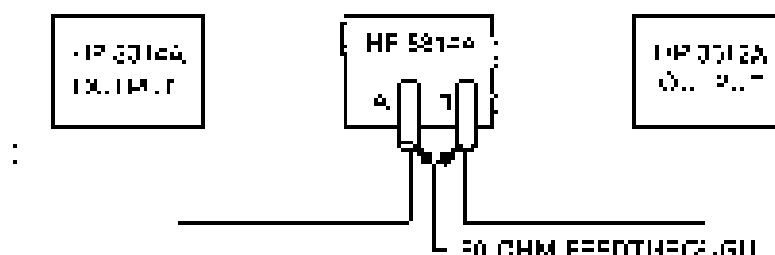

- C. Set the HP 5314A for 10 MHz at 25 mV rms. Set the HP 5312A function generator in 2 MHz at 25 mV rms (square wave). The HP 5314A should display 5.00. Read the result on the test card.

VI. TOTALIZE

Specifications: 10 Hz–10 MHz, 25 mV rms

- A. Set the HP 5314A front-panel controls as follows:

MINI-HOLD	.....	NORM
FUNCTION	.....	START A
BLUE IN	.....	IN
RESOLUTION	.....	100
BOTH SLOPES	.....	
ATTN	.....	20
SEPCOM A	.....	SEP
BOTH LEVELS	.....	Medium

- B. Set the HP 5314A totalize at 25 mV rms. Connect the HP 5314A to the HP 5312A INPUT A with a cable and 50-ohm feedthrough. Observe the HP 5314A display, counting at 10 Hz rate. Press the NORM-HOLD switch IN. Notice the display stops counting. Release the NORM-HOLD switch (OUT position). Notice the updated display and resume counting. Set the HP 5314A to 10 MHz at 25 mV rms. The HP 5314A display should be counting with the OVFL indicator lit. Read the result on the test card.

# PERFORMANCE TEST RECORD

HEWLETT-PACKARD MODEL 5314A  
UNIVERSAL COUNTER

Repair Work Order No. \_\_\_\_\_

Serial Number: \_\_\_\_\_

Temperature: \_\_\_\_\_

Test Performed By: \_\_\_\_\_

Relative Humidity: \_\_\_\_\_

Date: \_\_\_\_\_

Post Calibration Test: ☐

Notes: \_\_\_\_\_

Pre Calibration Test: ☐

PARAM. NO.	TEST	CORRECT DISPLAY	RESULTS		
			PASS	FAIL	
I.	SELF-TEST Resolution 10 Hz = 100 10 MHz = 10 10 kHz = 100 Hz 1 kHz	500.000 10000.0 10000.00 10000.0 90000.	_____	_____	
II.	FREQUENCY RESPONSE AND SENSITIVITY CHANNEL A 10 Hz = 10 kHz @ 20 mV rms 10 MHz = 100 kHz @ 20 mV rms CHANNEL B 10 Hz = 20 MHz @ 20 mV rms	Stable Count Stable Count  1 Hz	_____	_____	
III.	PERIOD 10 Hz = 20 MHz @ 20 mV rms	Correct Period	_____	_____	
IV.	TIME INTERVAL Time Interval 0.2 microseconds @ 100 mV rms @ 20 mV rms	95 ns	MINIMUM _____	ACTUAL _____	MAXIMUM _____
			PASS	FAIL	
V.	RATIO Ratio AB	5.00	_____	_____	
VI.	TOTALIZE Totalize A 10 Hz Up Count	10 Hz Up Count RJC	_____	_____	
	Up Count Steps	Stable Count	_____	_____	
	Display Update/Measure Count	Updated Display 10 Hz Up Count Time	_____	_____	
	Display Jumps	10 Hz Up Count	_____	_____	

## SECTION V ADJUSTMENTS

### 5-1. INTRODUCTION

5-2. This section describes the two adjustments that may be made to the HP 5314A. First, the power transformer primary is switchable to allow selection of two different nominal line voltages and second, the time base oscillator frequency is adjustable. The HP 5314A output power must be removed to change the power transformer primary (line voltage change) as directed in Table 5-1. The time base oscillator frequency may be adjusted via an adjustment window located in the lower left-hand corner of the front panel. Two methods for adjusting the time base frequency are given in Table 5-2. The first method uses an external input, with the HP 5314A in frequency mode. The second method employs (using an oscilloscope) the internal 10 MHz time base with an external 500 kHz standard.

5-3. Adjustments for Digits 001 and 002 are described in Tables 5-3 and 5-4, respectively. Table 5-3 describes how to adjust the Temperature Compensated Crystal Oscillator (TCXO) frequency. Table 5-4 describes how to adjust the automatic battery charger's cutoff voltage. Adjustments for both Digits 003 and 004 require access to the inside of the HP 5314A.

### 5-4. EQUIPMENT REQUIRED

5-5. The test equipment required for the adjustment procedures is listed in Table 5-1. Recommended Test Equipment. Substitute equipment may be used if it meets or exceeds the critical specifications.

### 5-6. ADJUSTMENT LOCATIONS

5-6. Adjustment locations are identified in the component locations in Section 4.11 and in the top internal view of the HP 5314A as shown in Figure 5-2.

### 5-8. SAFETY CONSIDERATIONS

5-9. This section contains warnings and cautions that must be followed for your protection and to avoid damage to the equipment.

#### WARNING

MAINTENANCE DESCRIBED HEREIN IS PERFORMED WITH POWER SUPPLIED TO THE INSTRUMENT, AND PROTECTIVE COVERS REMOVED. SUCH MAINTENANCE SHOULD BE PERFORMED ONLY BY SERVICE-TRAINED PERSONNEL WHO ARE AWARE OF THE HAZARDS INVOLVED (FOR EXAMPLE, FIRE AND ELECTRICAL SHOCK). WHERE MAINTENANCE CAN BE PERFORMED WITHOUT POWER APPLIED, THE POWER SHOULD BE REMOVED.

BEFORE ANY REPAIR IS COMPLETED, ENSURE THAT ALL SAFETY FEATURES ARE INTACT AND FUNCTIONING, AND THAT ALL NECESSARY PARTS ARE CONNECTED TO THEIR PROTECTIVE GROUNDING MEANS.

Table 3-1. Input Line Voltage Adjustment

WARNING:	
THE INVERTER COVER SHOULD BE REMOVED FROM THE REAR OF THE HP 5314A BEFORE STARTING THIS ADJUSTMENT PROCEDURE.	
1.	Turn the HP 5314A upside down and remove the four screws near the corners of the cabinet bottom.
2.	Holding the top and bottom covers together, turn the HP 5314A right-side up and carefully lift the top cover. This exposes the line voltage selector switch located on the A2 10011-60010 power supply assembly (large pc assembly located in the rear of the cabinet).
3.	The voltage position switch may now be properly set to match the input voltage (115 for 115V input or 230 for 220 to 250V input).
4.	Replace the top cover and carefully turn the unit upside down. Replace and tighten the four screws, one in each corner, of the cabinet bottom.
NOTE:	
The line voltage selector switch automatically selects the current line input line configuration (the two lines are bonded on the A2 assembly and are in series for 220V operation and in parallel for 110V operation).	

Table 3-2. Time Base Frequency Adjustment

NOTE:																											
If this adjustment is to be considered valid, the HP 5314A must have a 101 hour warm-up and the line voltage must be within $\pm 5\%$ to $\pm 10\%$ .																											
METHOD A:																											
1.	Apply an external signal of known frequency (i.e., house standard) and suitable amplitude (minimum 20 mV rms) to the Channel A input of the HP 5314A.																										
2.	Set the HP 5314A front panel controls as follows:																										
	<table> <tr> <td>ON/OFF</td><td>ON</td></tr> <tr> <td>NORM/LOGIC</td><td>NORM</td></tr> <tr> <td>FUNCTION</td><td>TRIG A</td></tr> <tr> <td>TIME BASE</td><td>OUT</td></tr> <tr> <td>RESOLUTION</td><td>1 Hz</td></tr> <tr> <td>CHANNEL A</td><td></td></tr> <tr> <td>LEVEL A</td><td>0V (center position)</td></tr> <tr> <td>SLOPE</td><td>UP</td></tr> <tr> <td>ALIGN</td><td>X1</td></tr> <tr> <td>CHANNEL B</td><td></td></tr> <tr> <td>LEVEL B</td><td>0V (center position)</td></tr> <tr> <td>SLOPE</td><td>UP</td></tr> <tr> <td>SEPCOM A</td><td>SET</td></tr> </table>	ON/OFF	ON	NORM/LOGIC	NORM	FUNCTION	TRIG A	TIME BASE	OUT	RESOLUTION	1 Hz	CHANNEL A		LEVEL A	0V (center position)	SLOPE	UP	ALIGN	X1	CHANNEL B		LEVEL B	0V (center position)	SLOPE	UP	SEPCOM A	SET
ON/OFF	ON																										
NORM/LOGIC	NORM																										
FUNCTION	TRIG A																										
TIME BASE	OUT																										
RESOLUTION	1 Hz																										
CHANNEL A																											
LEVEL A	0V (center position)																										
SLOPE	UP																										
ALIGN	X1																										
CHANNEL B																											
LEVEL B	0V (center position)																										
SLOPE	UP																										
SEPCOM A	SET																										
The approximate input frequency should be in the display with an update once a second.																											
3.	Turn the (331 - 411) window in the lower left-hand corner of the front panel. Turn a plastic tuning wand through the window and turn the adjustment screw until the display shows the input frequency. The internal time base frequency is now correctly adjusted.																										

Table 3-2 Time Base Adjustment (Continued)

## METHOD #2


This second method requires access to the inside of the HP 5314A. However, it accomplishes a more accurate adjustment of the time base frequency than Method #1.

## NOTE

The power cord is plugged on before while performing the following steps.

1. Turn the HP 5314A switch down and remove the rear screws near the corners of the cabinet bottom.
2. Holding the top and bottom covers together, turn the HP 5314A right-side up and carefully lift the top cover.
3. Carefully grasp the combination front panel and AT board assembly and lift until it clears the ground.
4. Swing the right side of the assembly (while looking toward the rear of the unit) away from the cabinet (shown you), then the power source to turn on the HP 5314A.
5. Install the line cord and the HP 5314A should come on the unit will be on (check if it controls the optional battery pack and the battery is charged).
6. Connect an oscilloscope to TP P on the AT board. The test point located near pin 40 on IC 102. This is the filtered 10 MHz internal oscillator.
7. Connect a hand-trigger signal to the EXT trigger input of the oscilloscope. Refer to the diagram below.

Every few minutes the oscilloscope should be checked for wave stability. When adjustment is required, use the oscilloscope method shown below. Using the appropriate wave period, adjust the variable until the movement of the pattern is stopped.

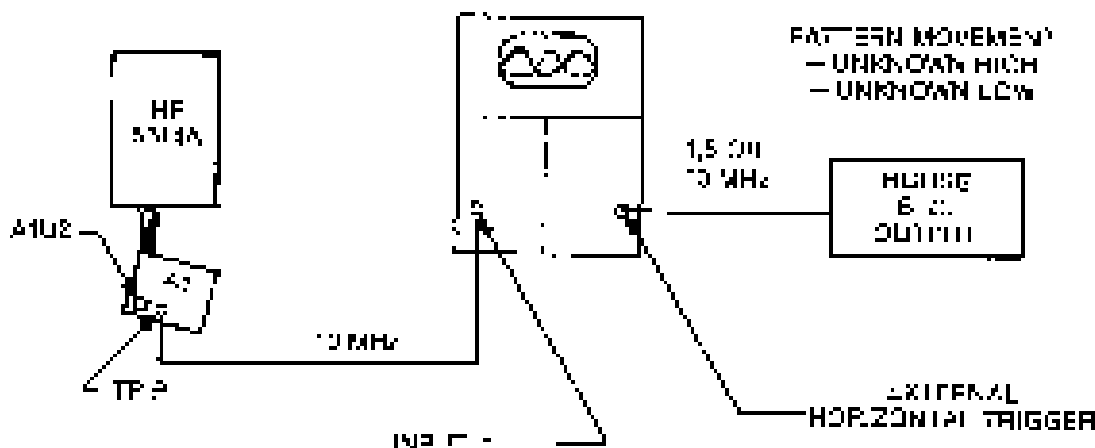

Oscillator Adjustment Interconnections

0. Set the controls of the oscilloscope as follows:

EXCITING	.....	AC
INPUT IMPEDANCE	.....	Mag
HORIZONTAL TRIGGER	.....	EXT
TRIG. SLOPE	.....	0.1 $\mu$ sec/div.

1. Adjust the ext. cal gain for a full screen waveform. The wavelets should be moving either to the left or to the right.
10. Adjust ATC2 (variable capacitor located in the lower left hand corner of the AT assembly) until the waveform is stationary. The accuracy of the frequency adjustment can be determined by referring to the table at the top of the next page.

Table 3-2 Time Base Adjustment (Continued)

Movement	SWEEP SPEED			NOTES
	1 $\mu\text{m}$	0.1 $\mu\text{m}/\text{cm}$	0.01 $\mu\text{m}/\text{cm}$	
1 $\mu\text{m}/\text{s}$	$1 \times 10^{-6}$	$1 \times 10^{-7}$	$1 \times 10^{-8}$	TIME SLOPE SCALE MOVEMENT WITH NO CONDITIANOR WATCH OR CLOCK
1 $\text{mm}/10 \text{ s}$	$1 \times 10^{-4}$	$1 \times 10^{-4}$	$1 \times 10^{-5}$	
1 $\text{cm}/100 \text{ s}$	$1 \times 10^{-6}$	$1 \times 10^{-6}$	$1 \times 10^{-7}$	

The time base frequency adjustment is now complete. Mount the combination front panel/AT assembly back into the cabinet bottom. Making sure the cables are properly routed, remove the fasteners. Turn the HP 5314A upside down. Install and tighten the four screws, one in each corner, in the cabinet bottom.

Table 3-3 Output 50% Adjustment

#### NOTE

If the adjustment is to be used to be valid, the HP 5314A must have a full-hour warm-up and the ambient must be within  $\pm 3\%$  to  $\pm 10\%$  of normal.

There are two methods of adjustment. The preliminary instructions apply to both methods and must be performed regardless of which method is chosen. The first method uses a noise standard signal applied to the channel A input with the HP 5314A making a frequency measurement. The second method compares a noise standard signal with the HP 5314A internal reference using an oscilloscope.

#### PRELIMINARY

1. Remove the power cord from the rear of the HP 5314A.
2. Turn the HP 5314A upside down and remove the four screws from the corners of the cabinet bottom.
3. Holding the top and bottom covers together, turn the HP 5314A right-side up and carefully lift the top cover.
4. Install the line cord.

#### METHOD #1

1. Apply an external noise standard signal (minimum 25 mV rms) to the Channel A input of the HP 5314A.
2. Set the HP 5314A front panel controls as follows:

DRAGOFF	.....	100
NOISE/CLK	.....	NORM
TIME/RES	.....	FREQ
RESOLUTION	.....	1 Hz
CHANNEL A		
LEVEL A	.....	0V (center position)
SLOPE	.....	- (LF)
ATTN	.....	X1
CHANNEL B		
LEVEL B	.....	0V (center position)
SLOPE	.....	- (LF)
SEPAROM A	.....	50%

The approximate input frequency should be displayed with an update once a second.



Table 5-3. Option 001 Adjustments (Continued)


The time base frequency is now properly adjusted. Replace the top cover and turn the H2 5314A upside down. Replace and tighten the four screws in the cabinet bottom.

#### METHOD #2

1. Carefully grasp the combination front panel and A1 beam assembly and tilt until it disengages.
2. Swing the right side of the assembly away from the cabinet.
- a. Press the power switch to turn the instrument ON.
4. Connect an oscilloscope to TFP of the A1 assembly test point located near pin 40 of IC U21. This is the buffered 10 MHz sine wave.

- b. Connect a time-base-correcting signal to the EXT trigger input of the oscilloscope. Refer to the diagram below.

Every now and then the oscillator could be checked in a noise generator. When adjustment is required, use the oscilloscope method below. Using the appropriate sweep speed, adjust the oscillator until the movement of the pattern is stopped.

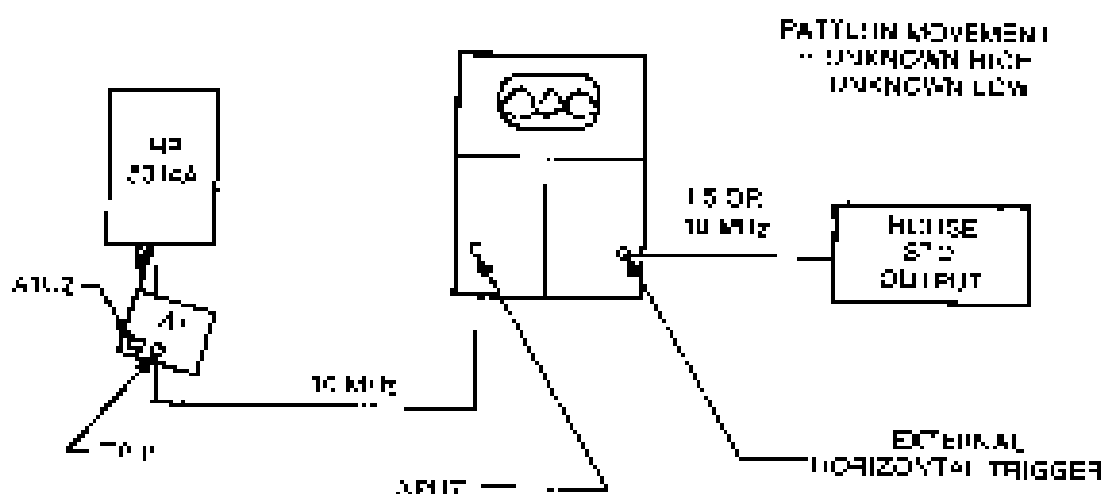

#### Qualitative Adjustment Recommendations

4. Set the controls of the oscilloscope as follows:  

COUPLING	.....	AC
INPUT IMPEDANCE	.....	1 Meg
HORIZONTAL TRIGGER	.....	EXT
TIME BASE	.....	0.1 sec/div
5. Adjust the vertical gain for a full screen waveform. The waveform should be moving either to the left or to the right.
6. Locate the A1 assembly TCXO, which is mounted on the A2 power supply assembly. The frequency adjustment screw-type capacitor is located on the top of the TCXO. Using a plastic tuning wand, adjust the TCXO frequency until the correct tuning plate wave frequency of the input house standard is in the H2 5314A display.

Table 5-3. Option U01 Adjustment (Continued)

Measurement	SWEEP SPEED			Notes
	1 $\mu$ s/cm	0.1 $\mu$ s/cm	0.01 $\mu$ s/cm	
1 $\mu$ s/div	$1 \times 10^{-6}$	$1 \times 10^{-7}$	$1 \times 10^{-8}$	TIME SCOPE TRACE RATE
1 ms/div	$1 \times 10^{-3}$	$1 \times 10^{-4}$	$1 \times 10^{-5}$	MULTI-Y-1111 SECOND HAND
1 cm/100/s	$1 \times 10^{-8}$	$1 \times 10^{-9}$	$1 \times 10^{-10}$	OR WATCH OR CLOCK

The time base frequency adjustment is now complete. Mount the combination front panel/AD assembly back into the cabinet bottom. Making sure the cables are properly routed, replace the top cover. Turn the HP 5314A upside down. Install and tighten the four screws, one in each corner, in the cabinet bottom.

Table 5-4. Option U02 Charger Offset Voltage Adjustment

This adjustment set the voltage at which the 0.5 amp charging current to the battery is terminated. It is preset at the factory and normally requires no further adjustment. However, readjustment is necessary after a repair to the AD assembly or after field installation of Option U02.

1. Remove the power cord from the rear of the HP 5314A.
2. Turn the HP 5314A upside down and remove the four screws near the corners of the cabinet bottom.
3. Holding the top and bottom covers together, turn the HP 5314A upside down and carefully lift the equipment.
4. Disconnect the red and black cables from the battery.
5. Insert the line cord and turn the HP 5314A ON.
6. Connect a line voltage power supply to the AD assembly charger cables (positive lead to red cable and negative lead to black cable).
7. Turn the pot (A3K12) fully clockwise.
8. Adjust the power supply voltage, then increase it to 10.5 volts  $\pm 5$  mV.
9. Connect a voltmeter between ground and A3C11/2.
10. Turn the pot (A3K12) counterclockwise slowly until the voltage rises above 5 volts (typically 2-1.3 volts).
11. Disconnect the line voltage power supply from the red and black cables.
12. Turn the HP 5314A to STBY and reconnect the line cord.
13. Connect the red and black charger cable to the positive and negative posts of the battery, respectively.
14. Replace the handle and top cover.
15. Turn the unit upside down. Install and tighten the four screws (one in each corner) of the cabinet bottom.

Adjustment of the AD assembly is now complete.

## SECTION VI REPLACEABLE PARTS

### 6-1. INTRODUCTION

6-2. This chapter contains information for ordering parts. The following replaceable parts lists are included:

Table 6-1  
Table 6-2  
Table 6-3

Reference Designations and Abbreviations  
Replaceable Parts  
Manufacturer's Codes

### 6-3. REFERENCE DESIGNATIONS

6-4. Table 6-1 lists the abbreviations and reference designations used in the parts lists, block diagrams, and throughout the manual.

### 6-5. REPLACEABLE PARTS

6-6. Table 6-2 is the list of replaceable parts and is organized as follows:

1. Electrical assemblies in alphabetical order by reference designation.
2. Classified mechanical parts in alphabetical order by reference designation.
3. Classified mechanical parts in alphabetical order by reference designation.

6-7. The information given for each part consists of the following:

1. Reference Designation
2. Hewlett-Packard part number
3. Part number check digit (QTY)
4. Total quantity (QTY) in instrument. The total quantity is given once and on the first appearance of the part number in the list.
5. Description of the part.
6. Typical manufacturer's part number for the part.

### 6-8. HOW TO ORDER A PART

6-9. Hewlett-Packard wants to keep your parts ordering process as simple and efficient as possible. Think of the process as having the following steps:

- Identifying the part and the quantity that you want.
- Determining the ordering method to be used and contacting Hewlett-Packard.

### 6-10. Parts Identification

6-11. To identify the part(s) you want, first refer to the replaceable parts lists (Tables 6-2 and 6-3) in this chapter.

6-12. When ordering from Hewlett-Packard, the important numbers to note from the Parts List are the HP Part Number and manufacturer's digit for the "COD" column, and the quantity of the part you want.

6-13. If the part you want is NOT identifying in the manual, you can call an Hewlett-Packard for help over the following section "Contacting Hewlett-Packard". Please have the following information at hand when you contact HP for help:

- Instrument Model Number (example HP 5314A)
- Complete Instrument Serial Number (example 123456789) information about where to find the serial number is given in the preface of this manual in the "HOW TO USE THIS MANUAL" section.
- Description of the part and its use.
- Quantity of the part required.

#### 6-14. Contacting Hewlett-Packard

6-15. Depending on where you are in the world, there are one or more ways in which you can get parts or parts information from Hewlett-Packard.

- Outside the United States, contact your local HP sales office. HP sales offices are listed at the back of this manual.
- Within the United States, we encourage you to order replacement parts or request parts information directly by telephone or mail from the HP Support Materials Organization. Using the telephone numbers or address listed below, you can also contact your local HP sales office. HP sales offices are listed at the back of this manual.

#### 6-16. By telephone

- a. For Parts Ordering, use our toll free number 1800 214-1661, Monday through Friday (except Holidays), 9 am to 5 pm (Pacific Time).
- b. If you need a part in a hurry, an express Hotline phone answering service is available, 24 hours a day. Use the toll free number above at the times indicated; at other times, use 1815/958-1347.
- c. For Parts Identification Assistance, call us at 958/563-0604. Our Parts Identification hours are from Monday through Friday, 9 am to 5 pm (Pacific Time).

#### 6-17. For mail correspondence, use the address below:

Hewlett-Packard  
Support Materials Resource  
P.O. Box 1145  
Riverside, Ca 92501-1145

#### 6-18. CABINET PARTS AND HARDWARE

6-19. To locate and identify miscellaneous cabinet parts, refer to Figure 6-1. This figure provides an exploded view of the cabinet, with the parts identified by reference designations; the reference designations correspond with the items in Table 6-3.

Table 6.7. Reference Designs and Alternatives

[illegible]

## ABBREVIATIONS

MULTIPLIERS		MULTIPLIERS	
Multiplier	Factor	Multiplier	Factor
1	1.000000	10	10.000000
2	2.000000	20	20.000000
3	3.000000	30	30.000000
4	4.000000	40	40.000000
5	5.000000	50	50.000000
6	6.000000	60	60.000000
7	7.000000	70	70.000000
8	8.000000	80	80.000000
9	9.000000	90	90.000000
10	10.000000	100	100.000000
11	11.000000	110	110.000000
12	12.000000	120	120.000000
13	13.000000	130	130.000000
14	14.000000	140	140.000000
15	15.000000	150	150.000000
16	16.000000	160	160.000000
17	17.000000	170	170.000000
18	18.000000	180	180.000000
19	19.000000	190	190.000000
20	20.000000	200	200.000000
21	21.000000	210	210.000000
22	22.000000	220	220.000000
23	23.000000	230	230.000000
24	24.000000	240	240.000000
25	25.000000	250	250.000000
26	26.000000	260	260.000000
27	27.000000	270	270.000000
28	28.000000	280	280.000000
29	29.000000	290	290.000000
30	30.000000	300	300.000000
31	31.000000	310	310.000000
32	32.000000	320	320.000000
33	33.000000	330	330.000000
34	34.000000	340	340.000000
35	35.000000	350	350.000000
36	36.000000	360	360.000000
37	37.000000	370	370.000000
38	38.000000	380	380.000000
39	39.000000	390	390.000000
40	40.000000	400	400.000000
41	41.000000	410	410.000000
42	42.000000	420	420.000000
43	43.000000	430	430.000000
44	44.000000	440	440.000000
45	45.000000	450	450.000000
46	46.000000	460	460.000000
47	47.000000	470	470.000000
48	48.000000	480	480.000000
49	49.000000	490	490.000000
50	50.000000	500	500.000000
51	51.000000	510	510.000000
52	52.000000	520	520.000000
53	53.000000	530	530.000000
54	54.000000	540	540.000000
55	55.000000	550	550.000000
56	56.000000	560	560.000000
57	57.000000	570	570.000000
58	58.000000	580	580.000000
59	59.000000	590	590.000000
60	60.000000	600	600.000000
61	61.000000	610	610.000000
62	62.000000	620	620.000000
63	63.000000	630	630.000000
64	64.000000	640	640.000000
65	65.000000	650	650.000000
66	66.000000	660	660.000000
67	67.000000	670	670.000000
68	68.000000	680	680.000000
69	69.000000	690	690.000000
70	70.000000	700	700.000000
71	71.000000	710	710.000000
72	72.000000	720	720.000000
73	73.000000	730	730.000000
74	74.000000	740	740.000000
75	75.000000	750	750.000000
76	76.000000	760	760.000000
77	77.000000	770	770.000000
78	78.000000	780	780.000000
79	79.000000	790	790.000000
80	80.000000	800	800.000000
81	81.000000	810	810.000000
82	82.000000	820	820.000000
83	83.000000	830	830.000000
84	84.000000	840	840.000000
85	85.000000	850	850.000000
86	86.000000	860	860.000000
87	87.000000	870	870.000000
88	88.000000	880	880.000000
89	89.000000	890	890.000000
90	90.000000	900	900.000000
91	91.000000	910	910.000000
92	92.000000	920	920.000000
93	93.000000	930	930.000000
94	94.000000	940	940.000000
95	95.000000	950	950.000000
96	96.000000	960	960.000000
97	97.000000	970	970.000000
98	98.000000	980	980.000000
99	99.000000	990	990.000000
100	100.000000	1000	1000.000000

Table 6-2. Replaceable Parts

Reference Designation	HP Part Number	QTY	Qty	Description	Ref Code	Ref Part Number
A100	HP 100-0000	1	1	HP 100-0000	1000	HP 100-0000
A101	HP 100-0001	1	1	HP 100-0001	1001	HP 100-0001
A102	HP 100-0002	1	1	HP 100-0002	1002	HP 100-0002
A103	HP 100-0003	1	1	HP 100-0003	1003	HP 100-0003
A104	HP 100-0004	1	1	HP 100-0004	1004	HP 100-0004
A105	HP 100-0005	1	1	HP 100-0005	1005	HP 100-0005
A106	HP 100-0006	1	1	HP 100-0006	1006	HP 100-0006
A107	HP 100-0007	1	1	HP 100-0007	1007	HP 100-0007
A108	HP 100-0008	1	1	HP 100-0008	1008	HP 100-0008
A109	HP 100-0009	1	1	HP 100-0009	1009	HP 100-0009
A110	HP 100-0010	1	1	HP 100-0010	1010	HP 100-0010
A111	HP 100-0011	1	1	HP 100-0011	1011	HP 100-0011
A112	HP 100-0012	1	1	HP 100-0012	1012	HP 100-0012
A113	HP 100-0013	1	1	HP 100-0013	1013	HP 100-0013
A114	HP 100-0014	1	1	HP 100-0014	1014	HP 100-0014
A115	HP 100-0015	1	1	HP 100-0015	1015	HP 100-0015
A116	HP 100-0016	1	1	HP 100-0016	1016	HP 100-0016
A117	HP 100-0017	1	1	HP 100-0017	1017	HP 100-0017
A118	HP 100-0018	1	1	HP 100-0018	1018	HP 100-0018
A119	HP 100-0019	1	1	HP 100-0019	1019	HP 100-0019
A120	HP 100-0020	1	1	HP 100-0020	1020	HP 100-0020
A121	HP 100-0021	1	1	HP 100-0021	1021	HP 100-0021
A122	HP 100-0022	1	1	HP 100-0022	1022	HP 100-0022
A123	HP 100-0023	1	1	HP 100-0023	1023	HP 100-0023
A124	HP 100-0024	1	1	HP 100-0024	1024	HP 100-0024
A125	HP 100-0025	1	1	HP 100-0025	1025	HP 100-0025
A126	HP 100-0026	1	1	HP 100-0026	1026	HP 100-0026
A127	HP 100-0027	1	1	HP 100-0027	1027	HP 100-0027
A128	HP 100-0028	1	1	HP 100-0028	1028	HP 100-0028
A129	HP 100-0029	1	1	HP 100-0029	1029	HP 100-0029
A130	HP 100-0030	1	1	HP 100-0030	1030	HP 100-0030
A131	HP 100-0031	1	1	HP 100-0031	1031	HP 100-0031
A132	HP 100-0032	1	1	HP 100-0032	1032	HP 100-0032
A133	HP 100-0033	1	1	HP 100-0033	1033	HP 100-0033
A134	HP 100-0034	1	1	HP 100-0034	1034	HP 100-0034
A135	HP 100-0035	1	1	HP 100-0035	1035	HP 100-0035
A136	HP 100-0036	1	1	HP 100-0036	1036	HP 100-0036
A137	HP 100-0037	1	1	HP 100-0037	1037	HP 100-0037
A138	HP 100-0038	1	1	HP 100-0038	1038	HP 100-0038
A139	HP 100-0039	1	1	HP 100-0039	1039	HP 100-0039
A140	HP 100-0040	1	1	HP 100-0040	1040	HP 100-0040
A141	HP 100-0041	1	1	HP 100-0041	1041	HP 100-0041
A142	HP 100-0042	1	1	HP 100-0042	1042	HP 100-0042
A143	HP 100-0043	1	1	HP 100-0043	1043	HP 100-0043
A144	HP 100-0044	1	1	HP 100-0044	1044	HP 100-0044
A145	HP 100-0045	1	1	HP 100-0045	1045	HP 100-0045
A146	HP 100-0046	1	1	HP 100-0046	1046	HP 100-0046
A147	HP 100-0047	1	1	HP 100-0047	1047	HP 100-0047
A148	HP 100-0048	1	1	HP 100-0048	1048	HP 100-0048
A149	HP 100-0049	1	1	HP 100-0049	1049	HP 100-0049
A150	HP 100-0050	1	1	HP 100-0050	1050	HP 100-0050
A151	HP 100-0051	1	1	HP 100-0051	1051	HP 100-0051
A152	HP 100-0052	1	1	HP 100-0052	1052	HP 100-0052
A153	HP 100-0053	1	1	HP 100-0053	1053	HP 100-0053
A154	HP 100-0054	1	1	HP 100-0054	1054	HP 100-0054
A155	HP 100-0055	1	1	HP 100-0055	1055	HP 100-0055
A156	HP 100-0056	1	1	HP 100-0056	1056	HP 100-0056
A157	HP 100-0057	1	1	HP 100-0057	1057	HP 100-0057
A158	HP 100-0058	1	1	HP 100-0058	1058	HP 100-0058
A159	HP 100-0059	1	1	HP 100-0059	1059	HP 100-0059
A160	HP 100-0060	1	1	HP 100-0060	1060	HP 100-0060
A161	HP 100-0061	1	1	HP 100-0061	1061	HP 100-0061
A162	HP 100-0062	1	1	HP 100-0062	1062	HP 100-0062
A163	HP 100-0063	1	1	HP 100-0063	1063	HP 100-0063
A164	HP 100-0064	1	1	HP 100-0064	1064	HP 100-0064
A165	HP 100-0065	1	1	HP 100-0065	1065	HP 100-0065
A166	HP 100-0066	1	1	HP 100-0066	1066	HP 100-0066
A167	HP 100-0067	1	1	HP 100-0067	1067	HP 100-0067
A168	HP 100-0068	1	1	HP 100-0068	1068	HP 100-0068
A169	HP 100-0069	1	1	HP 100-0069	1069	HP 100-0069
A170	HP 100-0070	1	1	HP 100-0070	1070	HP 100-0070
A171	HP 100-0071	1	1	HP 100-0071	1071	HP 100-0071
A172	HP 100-0072	1	1	HP 100-0072	1072	HP 100-0072
A173	HP 100-0073	1	1	HP 100-0073	1073	HP 100-0073
A174	HP 100-0074	1	1	HP 100-0074	1074	HP 100-0074
A175	HP 100-0075	1	1	HP 100-0075	1075	HP 100-0075
A176	HP 100-0076	1	1	HP 100-0076	1076	HP 100-0076
A177	HP 100-0077	1	1	HP 100-0077	1077	HP 100-0077
A178	HP 100-0078	1	1	HP 100-0078	1078	HP 100-0078
A179	HP 100-0079	1	1	HP 100-0079	1079	HP 100-0079
A180	HP 100-0080	1	1	HP 100-0080	1080	HP 100-0080
A181	HP 100-0081	1	1	HP 100-0081	1081	HP 100-0081
A182	HP 100-0082	1	1	HP 100-0082	1082	HP 100-0082
A183	HP 100-0083	1	1	HP 100-0083	1083	HP 100-0083
A184	HP 100-0084	1	1	HP 100-0084	1084	HP 100-0084
A185	HP 100-0085	1	1	HP 100-0085	1085	HP 100-0085
A186	HP 100-0086	1	1	HP 100-0086	1086	HP 100-0086
A187	HP 100-0087	1	1	HP 100-0087	1087	HP 100-0087
A188	HP 100-0088	1	1	HP 100-0088	1088	HP 100-0088
A189	HP 100-0089	1	1	HP 100-0089	1089	HP 100-0089
A190	HP 100-0090	1	1	HP 100-0090	1090	HP 100-0090
A191	HP 100-0091	1	1	HP 100-0091	1091	HP 100-0091
A192	HP 100-0092	1	1	HP 100-0092	1092	HP 100-0092
A193	HP 100-0093	1	1	HP 100-0093	1093	HP 100-0093
A194	HP 100-0094	1	1	HP 100-0094	1094	HP 100-0094
A195	HP 100-0095	1	1	HP 100-0095	1095	HP 100-0095
A196	HP 100-0096	1	1	HP 100-0096	1096	HP 100-0096
A197	HP 100-0097	1	1	HP 100-0097	1097	HP 100-0097
A198	HP 100-0098	1	1	HP 100-0098	1098	HP 100-0098
A199	HP 100-0099	1	1	HP 100-0099	1099	HP 100-0099
A200	HP 100-0100	1	1	HP 100-0100	1100	HP 100-0100

SEE INSTRUCTIONS FOR THE USE OF THE INFORMATION CONTAINED HEREIN.

Table 1. Respondents' Party Affiliation

[illegible]

Table 6.2. Reusable Polyimides.

Reference Designation	HP Part Number	C D	Qty	Description	HP Code	HP Part Number
202	12114-0000	-	1	NOISE REDUCING MOUNT ASSEMBLY (24-114-0000)	202-01	12114-0000
4001	TR3200V	3	1	TRANSISTOR, PNP, 2N3200V	400-01	2N3200V
4002	12114-0000	-	2	TRANSISTOR, PNP, 2N3200V	400-02	2N3200V
4003	2N3200V	1	1	TRANSISTOR, PNP, 2N3200V	400-03	2N3200V
4004	TR3200V	1	1	TRANSISTOR, PNP, 2N3200V	400-04	2N3200V
4005	12114-0000	-	2	TRANSISTOR, PNP, 2N3200V	400-05	2N3200V
4006	12114-0000	-	4	TRANSISTOR, PNP, 2N3200V	400-06	2N3200V
4007	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-07	2N3200V
4008	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-08	2N3200V
4009	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-09	2N3200V
4010	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-10	2N3200V
4011	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-11	2N3200V
4012	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-12	2N3200V
4013	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-13	2N3200V
4014	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-14	2N3200V
4015	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-15	2N3200V
4016	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-16	2N3200V
4017	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-17	2N3200V
4018	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-18	2N3200V
4019	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-19	2N3200V
4020	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-20	2N3200V
4021	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-21	2N3200V
4022	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-22	2N3200V
4023	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-23	2N3200V
4024	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-24	2N3200V
4025	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-25	2N3200V
4026	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-26	2N3200V
4027	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-27	2N3200V
4028	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-28	2N3200V
4029	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-29	2N3200V
4030	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-30	2N3200V
4031	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-31	2N3200V
4032	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-32	2N3200V
4033	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-33	2N3200V
4034	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-34	2N3200V
4035	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-35	2N3200V
4036	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-36	2N3200V
4037	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-37	2N3200V
4038	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-38	2N3200V
4039	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-39	2N3200V
4040	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-40	2N3200V
4041	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-41	2N3200V
4042	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-42	2N3200V
4043	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-43	2N3200V
4044	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-44	2N3200V
4045	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-45	2N3200V
4046	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-46	2N3200V
4047	12114-0000	-	1	TRANSISTOR, PNP, 2N3200V	400-47	2N3200

\*\*\* INFORMATION CONTAINED HEREIN IS UNCLASSIFIED \*\*\*  
DATE 08-22-2002 BY 60322 UCBAW/SAB



Table 6.2. Reusable and Single-Use Containers

Bus Name Designation	HP Part Number	C D	Qty	Description	MT Grade	Alt Part Number
				OPTIONAL EQUIPMENT QUANTITY CHECKED		
43	1801543001	4	1	RASTER BOARD SCHEMATIC ADDRESS MAPS 16MB	2000	1801543001
4377	18004020	1	1	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4378	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4379	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4380	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4381	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4382	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4383	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4384	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4385	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4386	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4387	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4388	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4389	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4390	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4391	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4392	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4393	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4394	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4395	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4396	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4397	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4398	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4399	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4400	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4401	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4402	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4403	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4404	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4405	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4406	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4407	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4408	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4409	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4410	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4411	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4412	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4413	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4414	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4415	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4416	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4417	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4418	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4419	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4420	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB	2000	18004020
4421	18004020	8	2	16MB RAM 16MB 16MB 16MB 16MB		

NO INSTITUTION TO THIS SOCIETY FOR ORDER NO. 101-10441-104  
INVESTIGATION NO. 101-10441-104

Table 2.2. Accessible Units (Continued)

Reference Designation	HP Part Number	C D	Qty	Description	Alt Code	MP Part Number
				OPTIONAL ITEM STAMINITE (REPLACES 1000)		
AA	201-481-001	0	1	TOOTH ROLLER-ARM REEL		
CA01	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010001	0100-0001
CA02	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010002	0100-0001
CA03	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010003	0100-0001
CA04	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010004	0100-0001
CA05	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010005	0100-0001
CA06	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010006	0100-0001
CA07	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010007	0100-0001
CA08	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010008	0100-0001
CA09	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010009	0100-0001
CA10	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010010	0100-0001
CA11	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010011	0100-0001
CA12	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010012	0100-0001
CA13	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010013	0100-0001
CA14	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010014	0100-0001
CA15	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010015	0100-0001
CA16	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010016	0100-0001
CA17	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010017	0100-0001
CA18	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010018	0100-0001
CA19	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010019	0100-0001
CA20	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010020	0100-0001
CA21	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010021	0100-0001
CA22	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010022	0100-0001
CA23	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010023	0100-0001
CA24	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010024	0100-0001
CA25	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010025	0100-0001
CA26	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010026	0100-0001
CA27	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010027	0100-0001
CA28	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010028	0100-0001
CA29	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010029	0100-0001
CA30	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010030	0100-0001
CA31	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010031	0100-0001
CA32	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010032	0100-0001
CA33	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010033	0100-0001
CA34	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010034	0100-0001
CA35	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010035	0100-0001
CA36	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010036	0100-0001
CA37	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010037	0100-0001
CA38	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010038	0100-0001
CA39	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010039	0100-0001
CA40	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010040	0100-0001
CA41	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010041	0100-0001
CA42	0100-0001	0	0	EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010042	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010043	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010044	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010045	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010046	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010047	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010048	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010049	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010050	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010051	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010052	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010053	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010054	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010055	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010056	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010057	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010058	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010059	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010060	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010061	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010062	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010063	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010064	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010065	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010066	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010067	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010068	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010069	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010070	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010071	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010072	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010073	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010074	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010075	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010076	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010077	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010078	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010079	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010080	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010081	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010082	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010083	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010084	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010085	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010086	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010087	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010088	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010089	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010090	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010091	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010092	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010093	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010094	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010095	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010096	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010097	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010098	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010099	0100-0001
				EXHAUSTOR ROD AND 1/4-20 X 3/8 IN. SCREW FOR	010100	0100-0001

電話 6791 11 : 11 月 11 日 6 時 30 分 ~ 12 時 20 分 30 分 1 時 30 分 ~ 2 時 30 分  
7 時 30 分 ~ 10 時 30 分 11 時 30 分 ~ 12 時 30 分

Table 6.2. Replaceable Parts (Continued)

[illegible]

\* INFORMATION TO THE ACTION FOR A BETTER ENVIRONMENT  
NATIONAL FACTORY SILENCE PROJECT

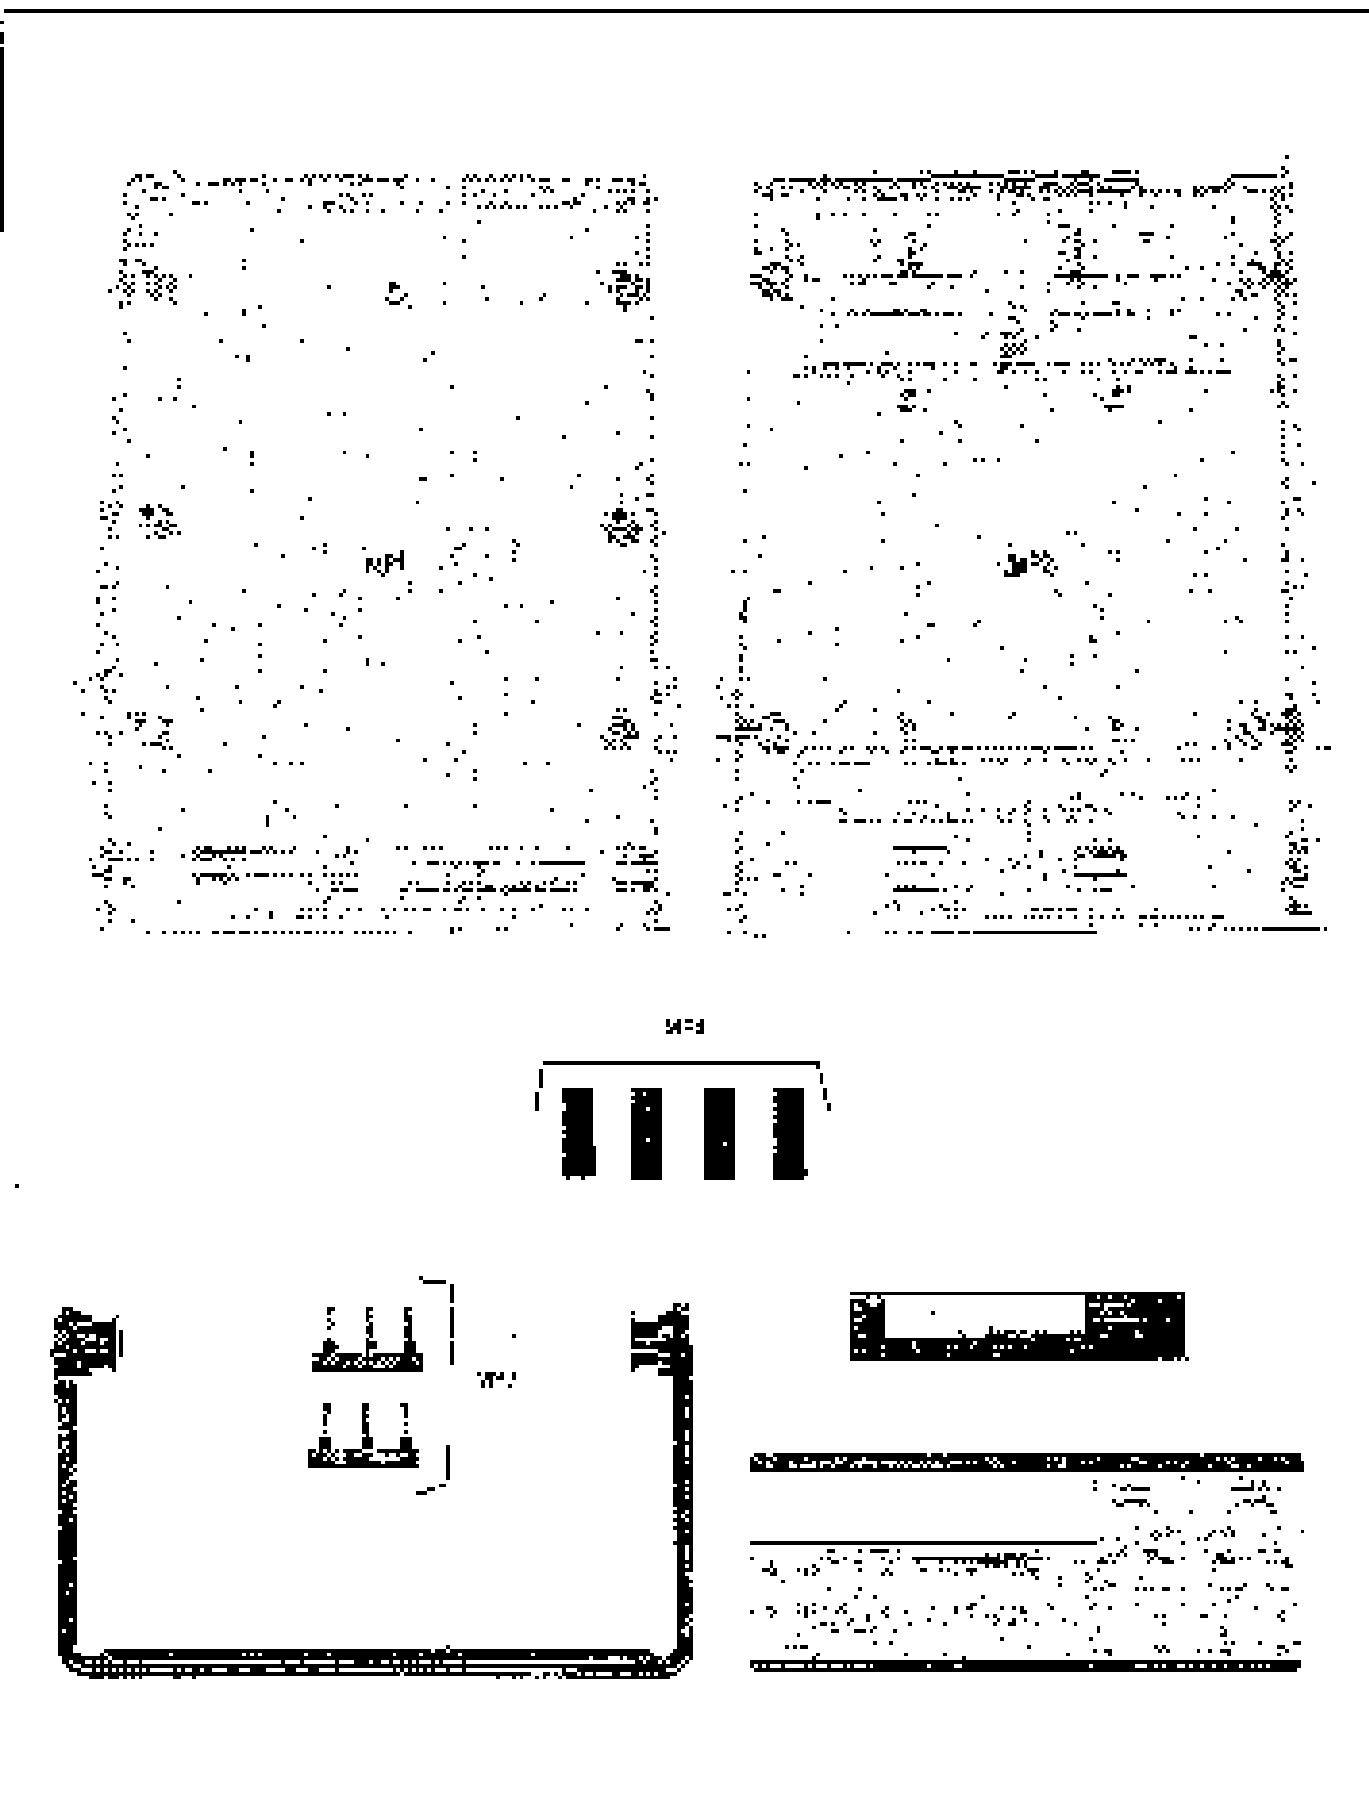


Figure 2-1 Mechanical Parts Layout

Table 6-1. Manufacturer Code List

AFC CODE	MANUFACTURER NAME	ADDRESS			ZIP CODE
00040	VARCO FAN CO.	IRVING, TX		GM	75039
00000	AMERICAN FAN CO., INC.	EL PASO	TX	US	69011
01299	TEXAS FAN COMPANY	DALLAS	TX	US	75223
01412	CHRYSLER CORP. DIVISION OF CHRY	DETROIT	MI	US	48208
02018	GEORGE STAMPANONI MOTOR MFG. CO.	ALBANY, NY		LS	12210
04717	FRIGIDAIR AND FAN COMPANY	ALBANY	NY	US	12200
056	CFE COMPANY, INC.	EL PASO	TX	US	79911
0612	THE FANCOCK CO., INC.	TULSA	OK	US	74103
06406	DOERING ELECTRONICS	SANTA CLARA	CA	US	95050
07074	NATIONAL FAN MANUFACTURING CO.	SANTA CLARA	CA	US	95050
08410	NEW FAN FACTORY CO. CORPORATION	PHILADELPHIA	PA	US	19104
08744	WILSON FAN CO. STATE INC.	CHICAGO, IL		US	60642
08829	NIEMELINE	CHICAGO, IL		US	60614
09542	GEORGE ENGINEERING INC.	ST. LOUIS, MO		US	63103
09599	SPRAGUE ELECTRIC CO.	ROCKFORD, ILL.		US	61107
09815	UTILEHOUSE CORPORATION	DES PLAINES, IL		US	60018
09970	UNITROL CORPORATION	CHICAGO, IL		US	60671

## SECTION VII MANUAL CHANGES

### 7-1. INTRODUCTION

7-2. This section contains information for adapting this manual to instruments with serial prefixes other than that listed on the title page. Refer to Section I for additional important information about serial number coverage.

### 7-3. MANUAL CHANGES

#### 7-4. Newer Instruments

7-5. Instruments having serial number prefixes higher than those listed on the title page of the manual are covered with a "Manual Changes" sheet included with this manual. If the change sheet is missing, information can be supplied by any Hewlett-Packard Sales and Service Office listed at the back of this manual.

#### 7-6. Older Instruments

7-7. If your instrument's serial number prefix is lower than that listed in this manual, this manual must be modified to correctly apply to your instrument. To determine which changes must be made to this manual, locate your instrument's serial number prefix in Table 7-1 Manual Backdating, then make the indicated changes.

Table 7-1. Manual Backdating

IF YOUR HP 3314A HAS SERIAL PREFIX	THEN MAKE THE FOLLOWING CHANGES TO THIS MANUAL
2010A	1
2E04A	2
2538A & Instrument Serial Numbers 2036A1237 & above	3
2530A	1 through 4
2036A & Instrument Series # 2036A0739 & above	1 through 5
2036A & Instrument Serial Numbers 2016A10721 & above	1 through 6
2012A	1 through 7
2024A	1 through 8
2016A	1 through 9
1908A	1 through 10
Instrument Serial Numbers 1884A00701 through 1884A00840	1 through 11
1084A	1 through 12
1030A	1 through 13
1878A	1 through 14
1876A	1 through 15

#### CHANGE 1 Series 2714A

Section 6, Table 6-2, A1 Main Board Assembly Replaceable Parts:

Change A1C11 - C11 from 0160-4022, 1000PF to 0160-4043 CAPACITOR, FFD 1000PF  
±5%, 100VDC CER.

Delete A1MP7, CONNECTOR SINGLE CONT.

Delete A1MP4 through MP6, TUBING-FLEX.

#### CHANGE 2 Series 2804A

Page 6-4(b-c), Table 6-2, A1 Main Board Assembly Replaceable Parts:

Change A1C11 - C11 from 0160-4040 (1000PF) to 0160-4022 CAPACITOR, FFD 1000PF ±  
5%, 100VDC CER, 20400, 0160-4022.

Add A1MP4 - MP6, 0850-0824, Qty 3, TUBING-FLEX, 100'-D TET, 3/16"-WALL, 20400,  
0160-4022.

Add A1MP7, 1251-4757, Qty 1, CONNECTOR-SGL CONT, PN 301-IN-650-67, 2x480,  
1251-4707.

#### CHANGE 3 Series 2530A

Page 6-7, Table 6-2, A4 Option 001 TCXO Board Replaceable Parts:

Delete resistor A4R3.

Page 8-2, Figure 8-10, A3 Battery Charger Assembly, Qty for 001 A4 TCXO Assy, Qty for 001,  
Delete A4R3.

Replace A4 component locator with the component locator shown in Figure 7-5.

#### CHANGE 4 Series 2530A & Instrument Serial Numbers 2530A12871 and Above

Page 6-4, Table 6-2, A1 Main Board Assembly Replaceable Parts:

Change A1 105314-60000 series to 2530A.

Delete A1C31 - C33.

Delete MP1 - MP7.

Page 8-23, Figure 8-8, A1 Counter Assembly Schematic Diagram:

Change A1 105314-60000 Schematic Diagram to series 2530A.

Delete C31 - C33.

Change C1 - C13 to C1 - C22 on Reference Designation's Table.

#### CHANGE 5 Series 2004A and Instrument Serial Numbers 2004A07881 and Above

Page 6-4, Table 6-2, A1 Main Board Assembly Replaceable Parts:

Change A1Q10 and A1Q11 to 1851-0015, TRANSISTOR PNP.

Change A1Q4 to 1220-1211, KIT LEXCEL 9V1 OR QUAL 2 INFL.

Page 0-24, Part of Figure 0-4, A2 Power Supply Assembly Component Locator:

Replace the component locator with the one shown in Figure 7-1.

#### CHANGE 6 Series 2016A and Individual Serial Numbers 2036A07721 and Above

Page 6-7, Table 6-2, A1 Option C01 TCXO Board Replaceable Parts  
Change A1 05314-600041 to Series 2012A.  
Change A4C1 to C160 2013, 2013F.  
Delete A302, A4X1, A461.

Page 6-27, Figure 0-10, Option C01 A4-1 XO Assembly  
Delete C2, R1, R1

#### CHANGE 7 Series 2002A

Page 6-4, Table 6-2, A1 Main Board Assembly Replaceable Parts  
Change A1 05214-600051 Series to 2002A.  
Change A1D55 to 1990-0751 Yellow LED.  
Change A1D51 through A1D57 to 1990 0650 Yellow LED.  
Delete A2A, 14 pin Sockets.

Page 6-5, Table 6-2, A2 Power Supply Board Replaceable Parts  
Change A2C1 to 1060 2167.

#### CHANGE 8 Series 2024A

Page 6-5, Table 6-2, C01 or C02 A3 Battery Pack Board Assembly Replaceable Parts  
Change A3 05011-500031 Series to 2024A.  
Delete A2C3.

Page 6-7, Table 6-2, Option C01 TCXO A4 Board Assembly Replaceable Parts  
Change A4 05314-600041 Series to 2024A.  
Change A4Y1 to C566 C394.

Page 6-27, Figure 6-10, A3 Battery Charger Assembly Option A0:  
Change A3 05011-500031 Series to 2024A.  
Delete C1.  
Change A4 05314-600041 Series to 2024A.

#### CHANGE 9 Series 2016A

Page 6-4, Table 6-2, A1 Main Board Assembly Replaceable Parts  
Change A1 05314-600051 to Series 2016A.  
Change A1C13 to C160 0210 3.3 uF.  
Delete asterisk from A1E20.

Page 0-23, Figure 0-6, A1 Counter Assembly Schematic  
Change A1 05314-600051 to Series to 2016A.  
Change C10 to 3.3 uF.  
Delete asterisk from R20.



#### CHANGE 10 Series 1900A

- Page 6-7, Table 6-2, Option 001, IC302 A1 Board Replaceable Parts  
Change A1 IC5314-60004 to Series 1900A.  
Delete A1K.  
Page 8-27, Figure 8-13, Option 001, IC302 A1 Assembly  
Change A1 IC5314-60004 to Series 1900A.  
Delete R1.

#### CHANGE 11 Instrument Serial Numbers 1884A00710 through 1884A00900

- Page 6-6, Table 6-2, Option 002 A3 Battery Pack Board Replaceable Parts  
Change A3C331 to C301 C67u.

#### CHANGE 12 Series 1884A

- Page 6-6, Table 6-2, A1 Main Board Assembly Replaceable Parts  
Change A1 IC3314-60005 to Series 1884A.  
Delete A1R12.  
Page 9-23, Figure 9-3, A1 Counter Assembly Schematic Diagram  
Change A1 IC3314-60005 to Series 1841A.  
Delete K12.

#### CHANGE 13 Series 1836A

- Page 6-6, Table 6-2, A1 Main Board Assembly Replaceable Parts  
Change A1 IC3314-60005 to Series 1836A.  
Change A1R29 and A1R38 to 100K47.

#### CHANGE 14 Series 1820A

- Page 6-6, Table 6-2, A1 Main Board Assembly Replaceable Parts  
Change A1 IC5314-60004 to Series 1820A.  
Add A1C64, 1001-0043.  
Change A1R1 to 2k ohms, 0757-0258.  
Page 6-5, Table 6-2, A2 Power Supply Board Replaceable Parts  
Change A2 IC5314-60006 to IC5314-60002 Series 1820A.  
Change A2T1 to 9100-4103.  
Page 8-23, Figure 8-8, A1 Counter Assembly Schematic Diagram  
Change A1 IC5314-60005 to Series 1820A.  
Change R1 to 2k ohms.  
Add A1C34 between U2 pin 1 and U2 pin 30.  
Page 8-24, Part of Figure 8-9, A2 Power Supply Assembly Component Location.  
Replace the component locator with the one shown in Figure 7-3.  
Page 8-25, Figure 8-9, A2 Power Supply Schematic Diagram  
Change A2 IC5314-60006 to IC5314-60002 Series 1820A.  
Change A2T1 pin 7 to pin 8, pin 8 to pin 7, and pin 9 to pin 8.  
Add pin 6 to grounded center tap on A2 L1 or very adjacent to polarity dot.

**CHANGE 15 Series 1876A**

Page 6-4, Table 6-2, A1 Main Board Assembly Replaceable Parts  
Change A1 165314-50003 to 05314-60001 Series 1876A

Page 6-7, Table 6-2, Miscellaneous Parts  
Change MP5 to 05314-60001.

Page 6-22, Figure 8-8, A1 Schematic Diagram  
Replace A1 component location with the one shown in Figure 8-1.



Figure 7-1. AT Component Location Series 7305A

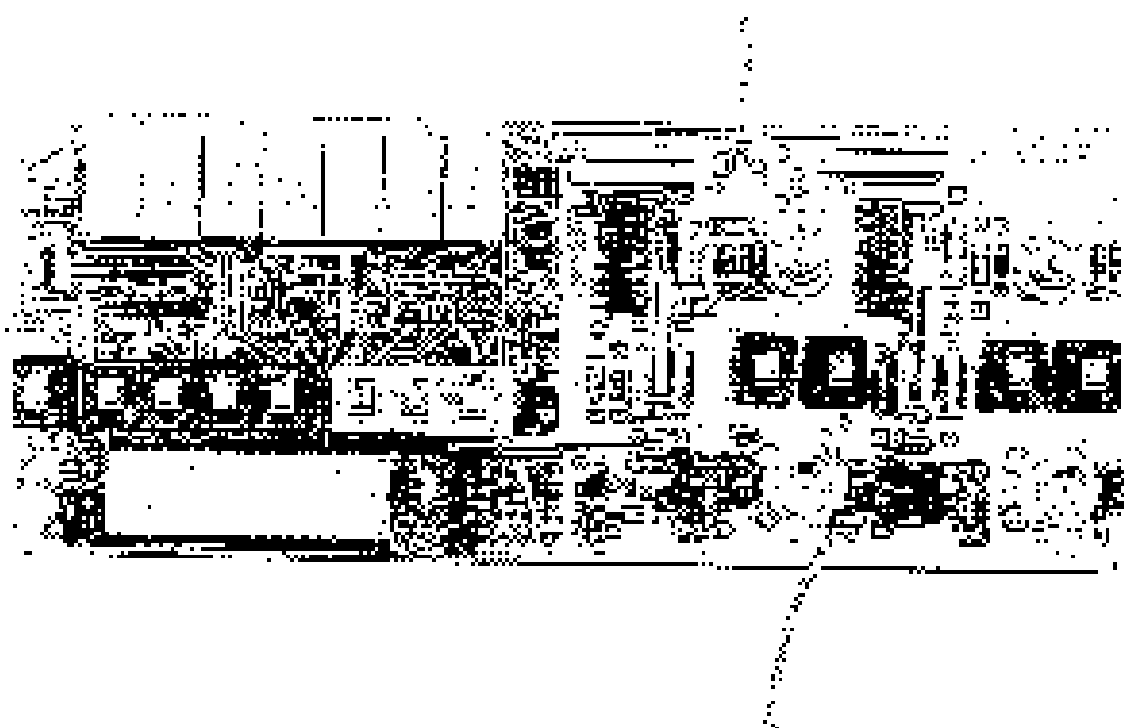


Figure 7-3 AT Assembly Component Location Summary 1074A

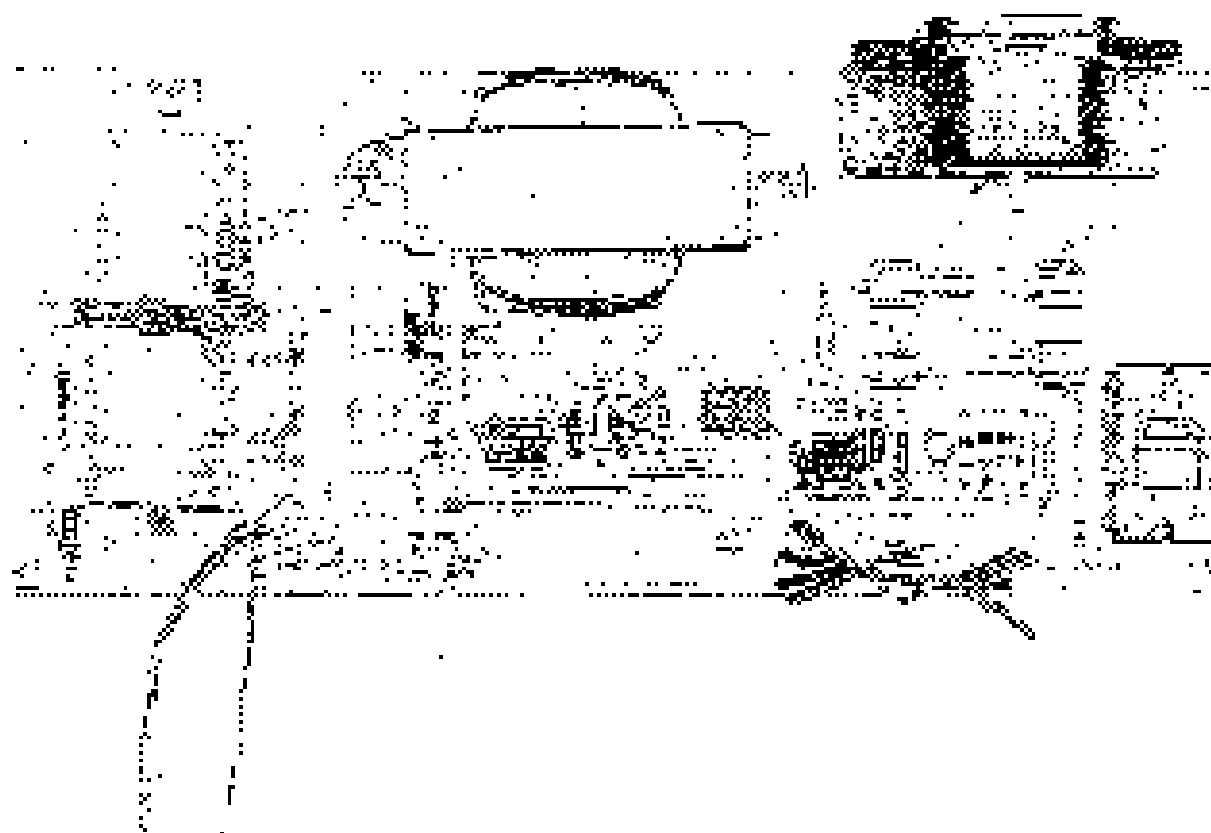


Figure 7-3. 750 Power Supply Assembly (Compressor Engine) Series 750RA

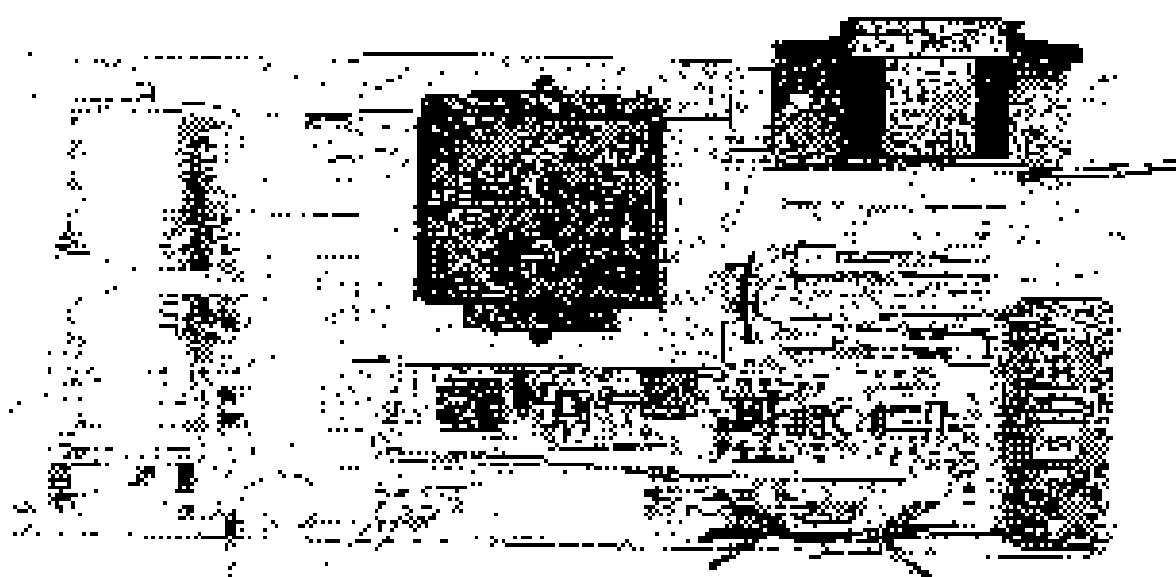


Figure 7-4. A2 Power Supply Assembly, Component 1001001, Serial 10354

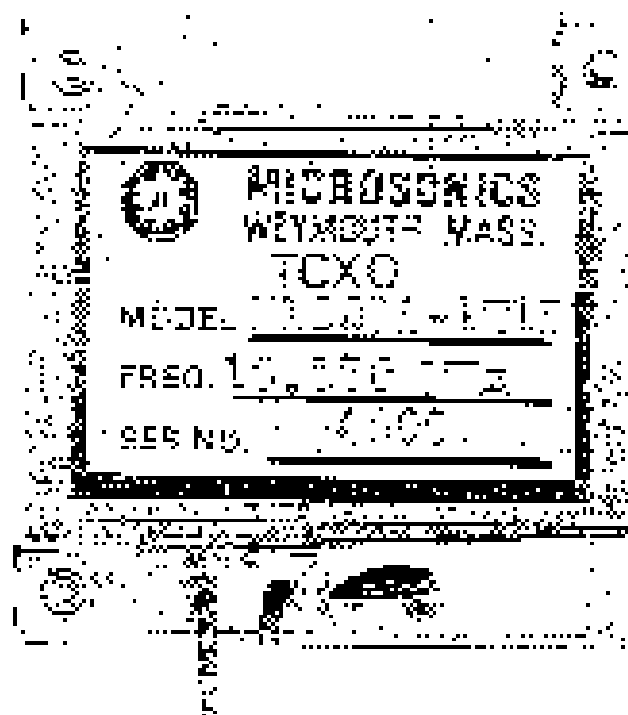


Figure 7-2. TM TOXO Assembly Component Location (Order 10204)

## SECTION VIII SERVICE

### WARNING

LINE VOLTAGE IS EXPOSED WITHIN THE HP 5314A EVEN WHEN THE POWER SWITCH IS IN THE STBY POSITION. REMOVAL OF THE POWER CORD IS REQUIRED TO FULLY UNPOWER THE INSTRUMENT.

### 8-1. INTRODUCTION

8-2. This section contains information needed to service the HP Model 5314A. The information includes: theory of operation, troubleshooting, recommended test equipment, schematic diagram notes, safety considerations, fuse replacement, block diagram theory, detailed circuit theory, service aids, block diagrams, component locations, and schematic diagrams.

### 8-3. THEORY OF OPERATION

8-4. There are two theories of operation. The first is a block theory. That is, an overview of the HP 5314A is presented. The block theory is assembled to follow the block diagram in Figures 8-2 through 8-5. The second is a detailed theory. It describes in detail, the circuit operation of all assemblies, both standard and optional. All reference is made to the schematic diagrams in Figures 8-9 through 8-10.

### 8-5. TROUBLESHOOTING

8-6. Troubleshooting for the HP 5314A is performed by selectively isolating and verifying the proper operation of the various major sections. This is accomplished in an indicated sequence, through a series of five test procedures, keyed to the troubleshooting block diagram in Figure 8-6.

### 8-7. RECOMMENDED TEST EQUIPMENT

8-8. Test equipment and test equipment accessories required to maintain the HP 5314A are listed in Table 1-3. Equipment not on List may be used if it meets the listed critical modifications.

### 8-9. SCHEMATIC DIAGRAM NOTES

8-10. Figure 8-7 shows the symbols used on the schematic diagrams. Figure 8-1 also shows the method of assigning reference designators, assembly numbers, and subassembly numbers.

### 8-11. Reference Designators

8-12. Assemblies such as printed circuit boards are assigned numbers in sequence, A1, A2, A3, etc., as shown in Table 8-1. As shown in Figure 8-7, subassemblies within an assembly are given a subordinate A number. For example, oscillator subassembly A1, has the complete designator A25A1. For individual components, the complete designator is determined by adding the assembly number and subassembly number, if any. For example, CR1 is the resistor assembly is designated A25A1CR1.



Table B-1. Assembly Designations

Reference Designations	Description	HP Part Number
A1	Cover Assembly	05314-60008
A2	Power Supply Assembly	05314-60006
A3	Battery Group 1 Assembly (Option 010)	05314-60003
A4	TECO Assembly (Option 011)	05314-60004

### B-13. Identification Markings on Printed Circuit Boards

B-14. HP printed circuit boards (see Figure B-1) have four identification numbers; an assembly part number, a series number, a revision letter, and a production code. The assembly part number has 10 digits (such as 05314-60006) and is the primary identification. All assemblies with the same part number are interchangeable. When a production change is made on an assembly that makes it incompatible with previous assemblies, a change in part number is required. The series number (such as 1638A) is used to document minor electrical changes. As changes are made, the series number is incremented. When replacement boards are ordered, you may receive a replacement with a different series number. If there is a difference between the series number marked on the board and the schematic in this manual, a minor electrical difference exists. If the number on the printed circuit board is lower than that on the schematic, refer to Section Y after backdating information. If it is higher, refer to the yellow label or manual change sheets for this manual. If the manual change sheets are missing, contact your local HP Sales and Service Office. See the listing on the back cover of the manual.

B-15. Revision letters (A, B, etc.) denote changes in printed circuit layout. For example, if a capacitor type is changed (even if its value may remain the same) and requires different spacing for its leads, the printed circuit board layout is changed and the revision letter is incremented to the next letter. When a revision letter changes, the series number is also usually changed. The production code is the four-digit, seven-segment number used for production purposes.

### B-16. SAFETY CONSIDERATIONS

B-17. Although the HP 5314A has been designed in accordance with international safety standards, this manual contains information, cautions, and warnings which must be followed to insure safe operation and to retain the HP 5314A in safe operating condition (also see Sections II, III, V). Service and adjustments should be performed only by qualified service personnel.

#### WARNING

ANY INTERRUPTION OF THE PROTECTIVE (GROUNDING) CONDUCTOR (INSIDE OR OUTSIDE THE UNIT) OR DISCONNECTION OF THE PROTECTIVE EARTH TERMINAL IS LIKELY TO MAKE THE UNIT DANGEROUS.

B-18. Any adjustment, maintenance, and repair of the opened HP 5314A under voltage should be avoided as much as possible, and when inevitable, should be carried out only by a skilled person who is aware of the hazard involved. Capacitors inside the HP 5314A may still be charged even if the unit has been disconnected from its source of power.

### WARNING

**LINE VOLTAGE IS EXPOSED WITHIN THE HP 5314A EVEN WHEN THE POWER SWITCH IS IN STOP. REMOVAL OF THE POWER CORD IS NECESSARY TO FULLY UNPOWER THE UNIT.**

8-19. Make sure that only fuses with the required rated current and of the specified type (normal blow, time delay, etc.) are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided. Whenever it is likely that this protection has been impaired, the HP 5314A must be made inoperative and be secured against any unintended operation.

### 8-20. FUSE REPLACEMENT

8-21. There are two fuses in the standard HP 5314A. These are the line input fuses located on the A2 power supply assembly. There is an additional third fuse in the HP 5314A with Option 002. The fuse is located on the Option 002 A3 assembly. The actions for changing these three fuses are given in the following paragraphs.

#### 8-22. Line Input Fuse Replacement

### CAUTION

Make sure that only fuses with the required rated current and of the fast-blow type are used for replacement. The use of repaired fuses and the short-circuiting of fuse holders must be avoided.

8-23. The following instructions are given for line fuse replacement:




















1. Turn the HP 5314A OFF and remove the line input power cord.
2. Turn the HP 5314A upside down and remove the four screws near the corners of the cabinet bottom.
3. Holding the top and bottom covers together, turn the HP 5314A right-side up and carefully lift the top cover. This exposes the two line input fuses located on the A2 assembly (assembly in the rear of the instrument).
4. Remove and replace the defective fuse with a 3.0A 250V fast-blow type fuse.
5. Replace the top cover and carefully turn the unit upside down. Replace and tighten the four screws, one in each corner of the cabinet bottom.

#### 8-24. Option 002 Fuse Replacement


8-25. HP 5314A instruments with Option 002 contain a 3 Amp fuse in addition to the two line input fuses. This fuse is located on the Option 002 A3 assembly. This fuse protects the battery pack from damage in case of a possible short circuit. The following instructions are given for Option 002 fuse replacement:

1. Turn the HP 5314A OFF and remove the line input power cord.
2. Turn the HP 5314A upside down and remove the four screws from the cabinet bottom.
3. Holding the top and bottom covers together, turn the HP 5314A right-side up and carefully lift the top cover. This exposes the Option 002 A3 assembly.
4. Remove and replace the defective fuse with a 3 Amp fast-blow type fuse.
5. Replace the top cover and carefully turn the unit upside down. Replace and tighten the four screws, one in each corner of the cabinet bottom.

## SYMBOLS

	RECTANGULAR		SIGNAL WITH ARROW
	ALIAS PANEL		FEEDBACK LOOP
	INTERIOR AND CONNECTIONS		NOT FOUND
	NUMBER UNDER LINDING FORM AND CONTROL SYMBOLS TO BE CHANGED		AND GATE
	POWER AND GROUND		NOR GATE
	CLOCK (COMMON SYMBOL)		INVERTER
	FLATTENED CLOCK		NAND GATE
	EXPLODED SYMBOL		NOR GATE
	WIRE SYMBOL		NAND GATE
	SCHEMATIC SYMBOL		

**PRINTED CIRCUIT BOARD IDENTIFICATION**

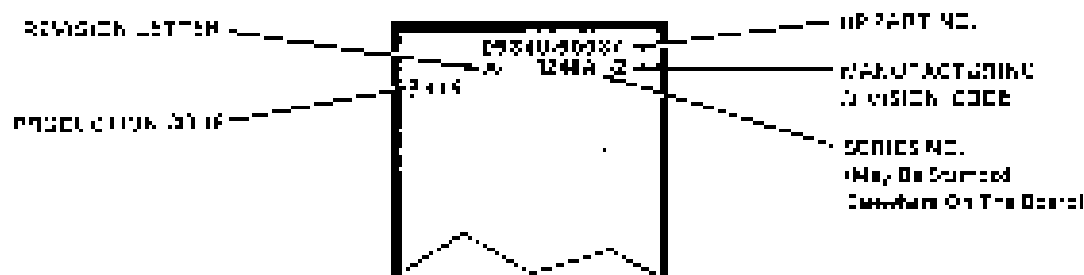

## REFERENCE DESIGNATIONS

REMOVE AND DISASSEMBLE WITHIN ASSEMBLY ARE APPROVED. ADD ASSEMBLY WITHIN THE ASSEMBLY FOR COMPLETE DESCRIPTION. JACKS AND THE STATUS OF CONNECTIONS AND OTHERS ARE THE MAIN PURPOSES OF TWO CONNECTIONS.

ASSEMBLY	ABBREVIATION	COMPLETE DESCRIPTION
----------	--------------	----------------------

AGE	GL	AGEGL
AGEGL	CEL	AGEGLCEL
AGEGLCEL	J8	J1

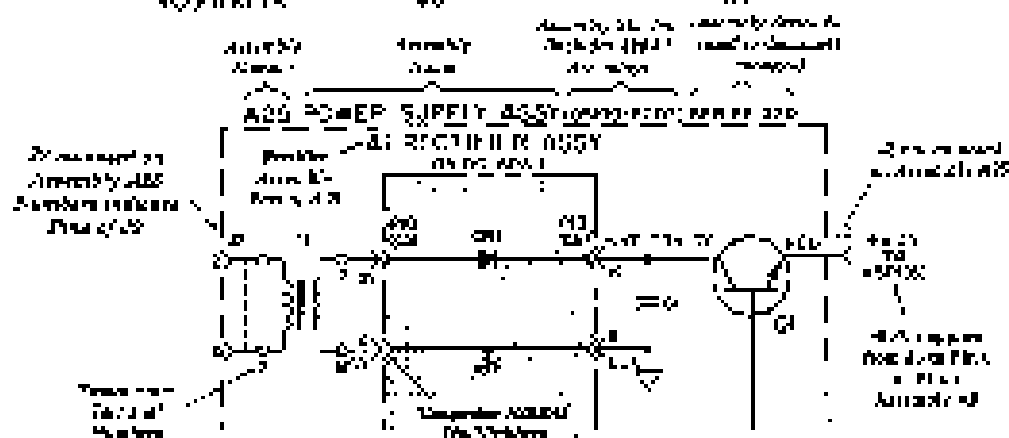


Figure 17: Schematic Diagram: Notes

## 8-26. THEORY OF OPERATION

### 8-27. Introduction

8-28. The HP 5314A is a multifunction counter using a single LSI integrated circuit. The theory of operation is organized such that a block diagram is shown along with the block theory, immediately followed by the detailed theory. The block theory is structured to follow the block diagram. The detailed theory is referenced to the schematic diagrams found at the end of this section. There are four block diagrams, shown in figures 8-2 through 8-5, as follows:

1. The HP 5314A overall block diagram.
2. The LSI counter chip (AU.7).
3. The power supply.
4. The optional battery pack charger.

### 8-29. HP 5314A Overall Block Theory of Operation

8-30. The A and B input amplifiers condition the measured input signals and insure the subsequent signal circuits receive pulses of uniform rise and fall time. The signal on Channel B is applied directly to the counter IC. Channel A is similar to Channel B except a signal path through a  $\times 10$  prescaler is also provided. The output of the counter drives the display through segment and digit drive lines. The digit drive lines are also used in conjunction with the front panel switches to select the proper function, range, and decimal point location. The power supply delivers  $\pm 5$  volts to the circuits and provides unregulated voltage to the battery charger connector for use with Option 002.

### 8-31. Detailed A1 Assembly Theory

8-32. INPUT AMPLIFIERS. The signal is applied through a BNC input connector (J1) through coupling capacitor C19. The compensated attenuator is made of R27, R25, and C18, and allows selection of X1 or X20 through the usual switch SW10. The network made up of R22, R23, C16, and diodes CR7 and CR8 make up the input matching circuit. The high input impedance is accomplished by the impedance converter made up of Q7 and Q8, and their associated biasing resistors. The signal is now amplified to an acceptable level by the first two stages of U5. The first stage provides a trigger level adjustment by allowing low reference level inputs to be shifted by approximately  $\pm 400$  mV using R29. The second stage of U5 provides some peaking at high frequencies to compensate for the roll off at the input impedance converter. The final stage of U5 is a Schmitt trigger which takes the amplified analog signal and digitizes it. The signal out of the impedance converter of Channel A goes to the amplifier U5, and can be switched into Channel B by using SW11 (the SEP/COM A separate/common A switch).

8-33. Channel B is similar to Channel A with a few exceptions. A signal applied to Channel B is supplied with no attenuation through the protection circuitry made of R35, R33, C26, CR9, and CR8. The impedance converter is made up of Q9 and Q10 and their associated biasing resistors. The Channel B signal is then amplified by the 3 stages of U5. The first stage provides an adjustable trigger level by setting R36. The second stage, rather than being peaked, is rolled off above 10 MHz as the Channel B is usable only to 25 MHz. The last stage is the Schmitt trigger without the high frequency compensation. The digital signal out of the Schmitt trigger must be translated to be compatible with TTL circuitry which follows. This is done by Q4 and Q3. The slope selection is done by U4C in conjunction with switch SW12. The Channel B signal is then applied to L2.

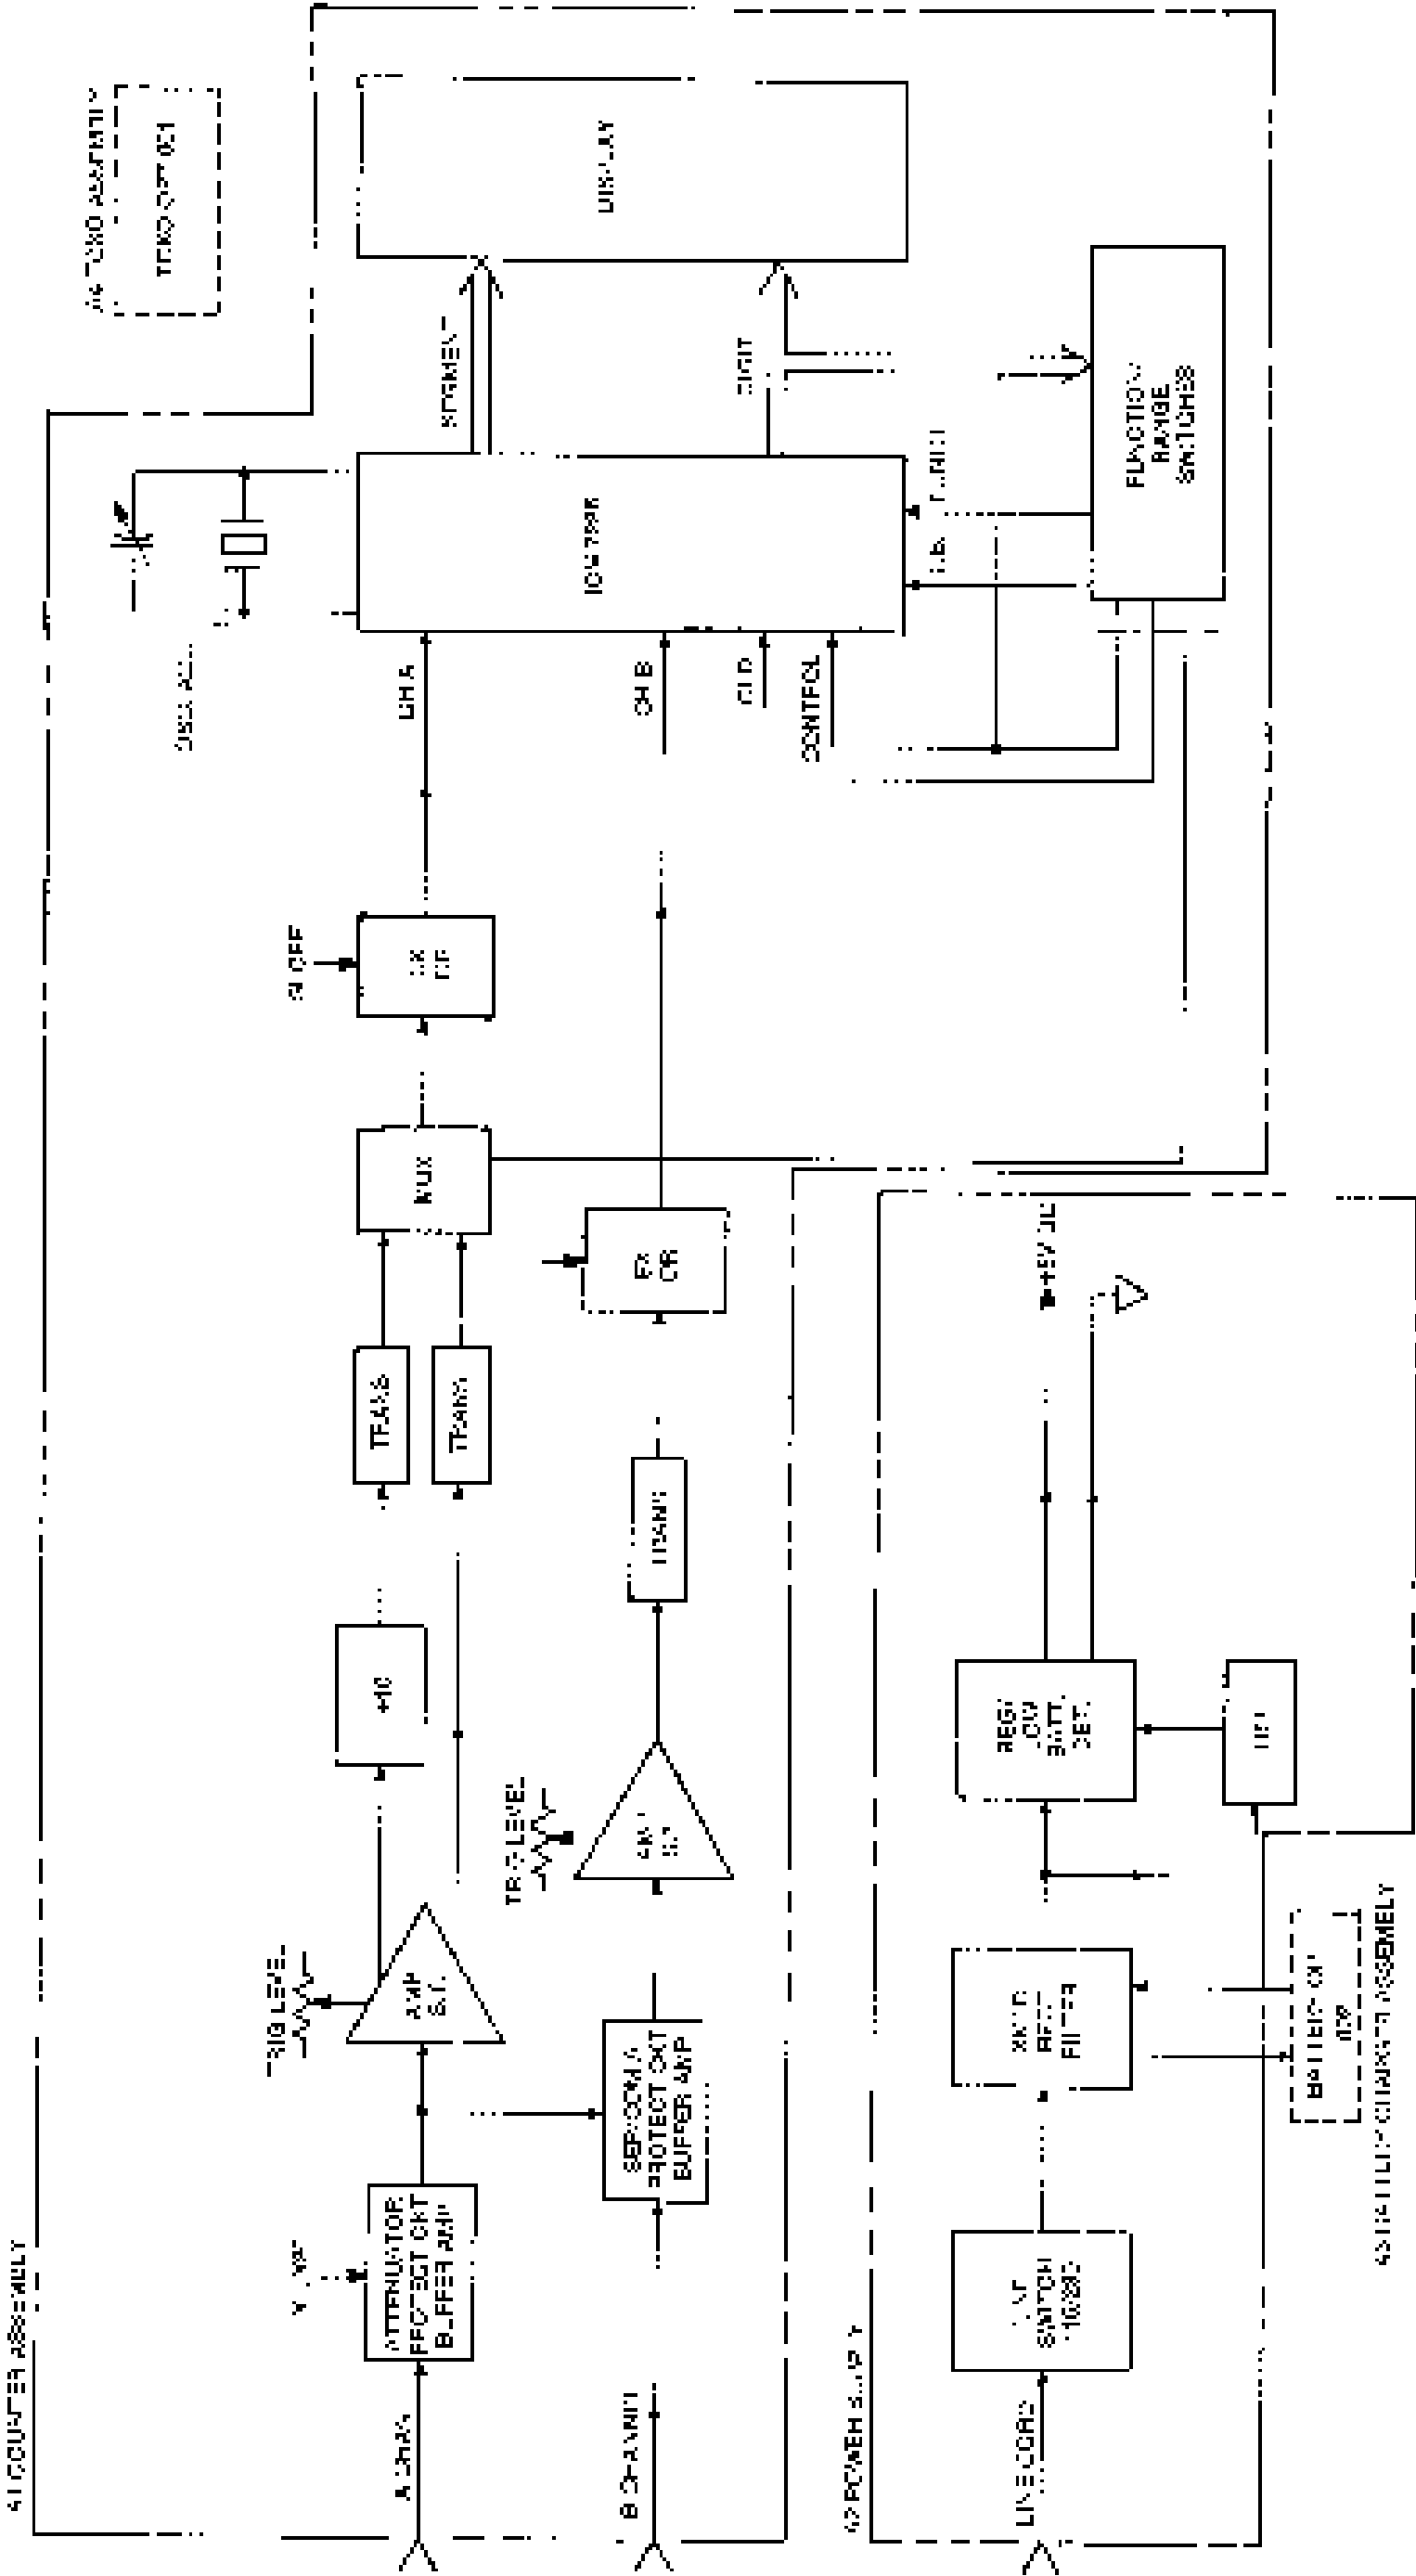


Figure 0-1 Model 5314A Overall Block Diagram

8-34. **CHANNEL A FREQUENCY SELECT CIRCUIT.** The output of the Channel A amplifier goes to the input of U2 by taking one of two paths selected by the front panel switches. The first path is through the level translator Q5 and Q6. The multiplexer (U1C) selects the input on pin 13. The slope selection is made in U4 in conjunction with switch SW9. The signal is then applied to U3.

8-35. This is the normal signal path for most functions. When frequency A is selected and the 100 MHz-10 Hz max frequency selection button is pushed, then the multiplexer (U1C) directs the signal on pin 14 through the slope select logic and on to U2. This signal has come from amplifier U5 through a  $\pm 10$  p.p.s.v. detector and a level translator (Q1 and Q2). There are any time the FREQUENCY button is pushed in conjunction with the 100 MHz-10 Hz button, the prescaler will be switched. The other sections of the U1 multiplexer provides proper location of the zero point when in the prescaler mode.

8-36. **TIME COUNTING CLIP.** Integrated circuit A1102 provides the primary for implementing a full universal counter. The functions that can be performed are FREQUENCY, PERIOD, TIME INTERVAL, START, ALTERNATE, RATIO AND CHECK. U2 also makes the logic to strobe the data to the display.

8-37. **Function, Range, Control Inputs.** In order to set the proper function and range, it is necessary to connect the proper digital drive line to the function or range input of U2. Since the digital drive lines are channel consecutively starting from the most significant digit to the least significant digit, it is where the pulse occurs in time which determines what function or range the instrument is in. As an example, connecting digit driver D3 to the function input causes U2 to operate in a ratio mode in channel A. Connecting the same digital drive line to the range input sets the gate time to 100 seconds. A third input to U2 is control which selects several modes of operation. The operation of the function, range and control inputs are shown in Table 8-2.

8-38. **Display Strobe.** The display consists of seven 7-segment common anode displayed digits with an overflow (11) indicator. Each digit has a decimal point with the most significant digit's decimal point used as a gate indicator.

8-39. In order to light a particular digit it is necessary to pull the anode of the digit high and drive current in the appropriate cathodes to light the desired number in that digit. Therefore, it is possible to tie all the corresponding segments (cathodes) together as the anode determines which digit is being addressed. U2 first addresses the most significant digit and strobes in the proper number. Then the next MSD will be addressed and the proper number strobed in and so on. A complete display strobe cycle is executed in 2 milliseconds or at a 500 Hz rate. The overflow is driven from the eighth unused digit.

Table 8-2. Function, Range versus Digit Data

Digit	Function	Range Gate Time/Hz	Content
10	FREQUENCY	100 MHz	100 MHz Input
01	RATIO A/B	100 MHz	1 A to 1 kHz Select
10	CHECK	100 Hz	500 Hz to 100 kHz Input
01	START A	100 Hz to 1000	Blank Display
10	TIME INTERVAL	500 Hz to Input Strobe	1 sec
05		—	—
01		—	—
07	PERIOD	—	DISPLAY

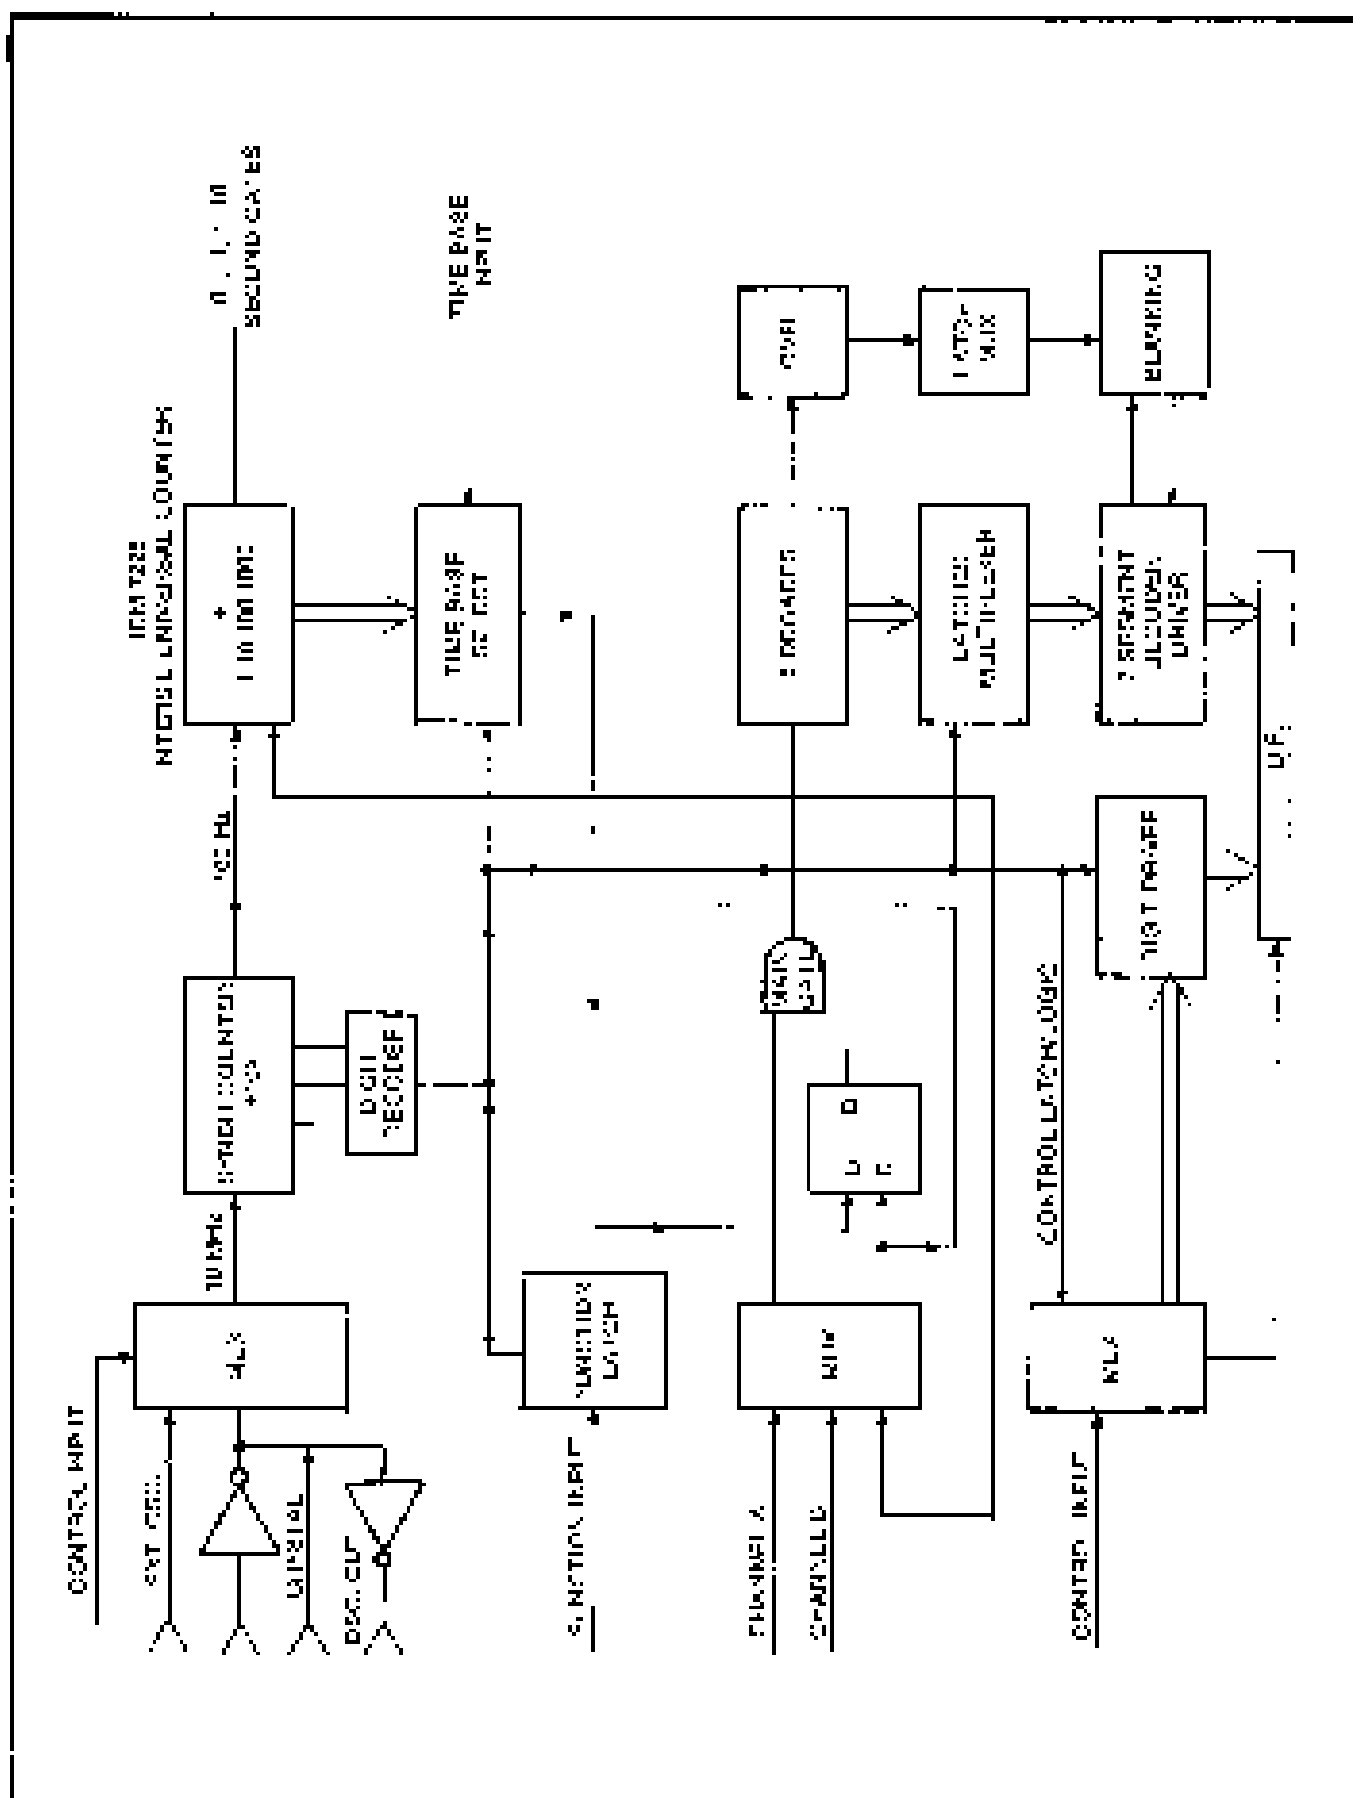


Figure 4-1. The Counter (A7102) Block System

**8-40. Decimal Point Control.** The circuitry in U2 determines the function, range, and control status and automatically positions the decimal point. The decimal point is scooped in exactly the same manner as the segments of the digits. When the prescaler decade is warranted in, by selecting FREQ A and 100 MHz/20 Hz max. frequency/resolution, it is necessary to move the decimal point one digit to the right. This is done by connecting digit U2 (LX1 decimal point enable) to the control input through multiplexer U1. This allows pin 30 (EXT decimal point input) to be used to move the decimal point into the proper position.

**8-41. PULSED OSCILLATOR.** The oscillator is made up of the 10 MHz crystal Y1 and the trimmer capacitors C2, C4, and C5, and resistors R6. The active elements are internal to U2. The pulsed oscillator is brought out on pin U6 and is connected to the EXT OSC input on pin 33. It is therefore necessary to program the control input to the LX1 oscillator input mode by connecting U6 to the control input. This is done through isolation diode CR4. If the temperature compensated crystal oscillator is used, the jumper between pins 33 and 35 is removed and the TCXO output is connected between ground and pin 30 (EXT OSC input).

**8-42. GATE LAMP.** The gate lamp is used to give an indication that the counter is in the process of making a measurement. The gate lamp is on whenever the gate is open and the counting decades are accumulating pulses. When making measurements where the gate is only open for a short time such as time interval or single-shot period measurements, the gate signal is not on long enough to light the gate indicator. Therefore, the reset pulse is also connected to the gate indicator to provide an indication that measurements are being made. The reset pulse occurs about 140 milliseconds after the measurement is over.

**8-43. POWER HOLD FUNCTION AND RANGE.** Switch SW1 connects the unregulated voltage from the power supply board back to the regulator on the power supply board. Switch SW2 in the normal (NORMAL) position applies ground to the hold input pin 39 of U2. When SW2 is depressed, a positive voltage generated by CR3 and CR4 is applied to the hold input. This terminates any measurement in progress and holds the previous reading in the display. Upon releasing the hold button, a new measurement will begin. Switches SW3, 4, and 5 connect the proper digit drive lines to the function input. Switch SW5 acts like a shift key allowing switches SW3 and SW4 to select two functions. When both SW3 and SW4 are in the normal position the functions CHECK or RATIO AND are respectively selected. In the situation the shift key SW5 has no effect.

**8-44.** Switches SW6, 7, and 8 select the proper digit drive line to be connected to the range input. SW8 provides the special function of connecting ground to U1 (LX1 prescaler) only when SW2 is also in. The same line is also applied to the multiplexers as the control signal. Switches SW6, 7, and 8 are connected to provide more range positions than those shown on the front panel. The useful switch positions are given below in Table 8-3.

Table 8-3. Useful Resolution Switch Positions (Shaded boxes indicate button IN)

Switch Position			Prescale	Freq. Dist. Time	Freq. Res.	No. of Avg.
SW6	SW7	SW8				
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	OFF	10 s	0.1 Hz	N=1000
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	OFF	1 s	1 Hz	N=100
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	LX1	0.1 s	10 Hz	N=10
<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	CIN	1 s	10 Hz	n=1
<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	CIN	0.1 s	100 Hz	n=1
<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	CIN	10 Hz	1 kHz	n=1



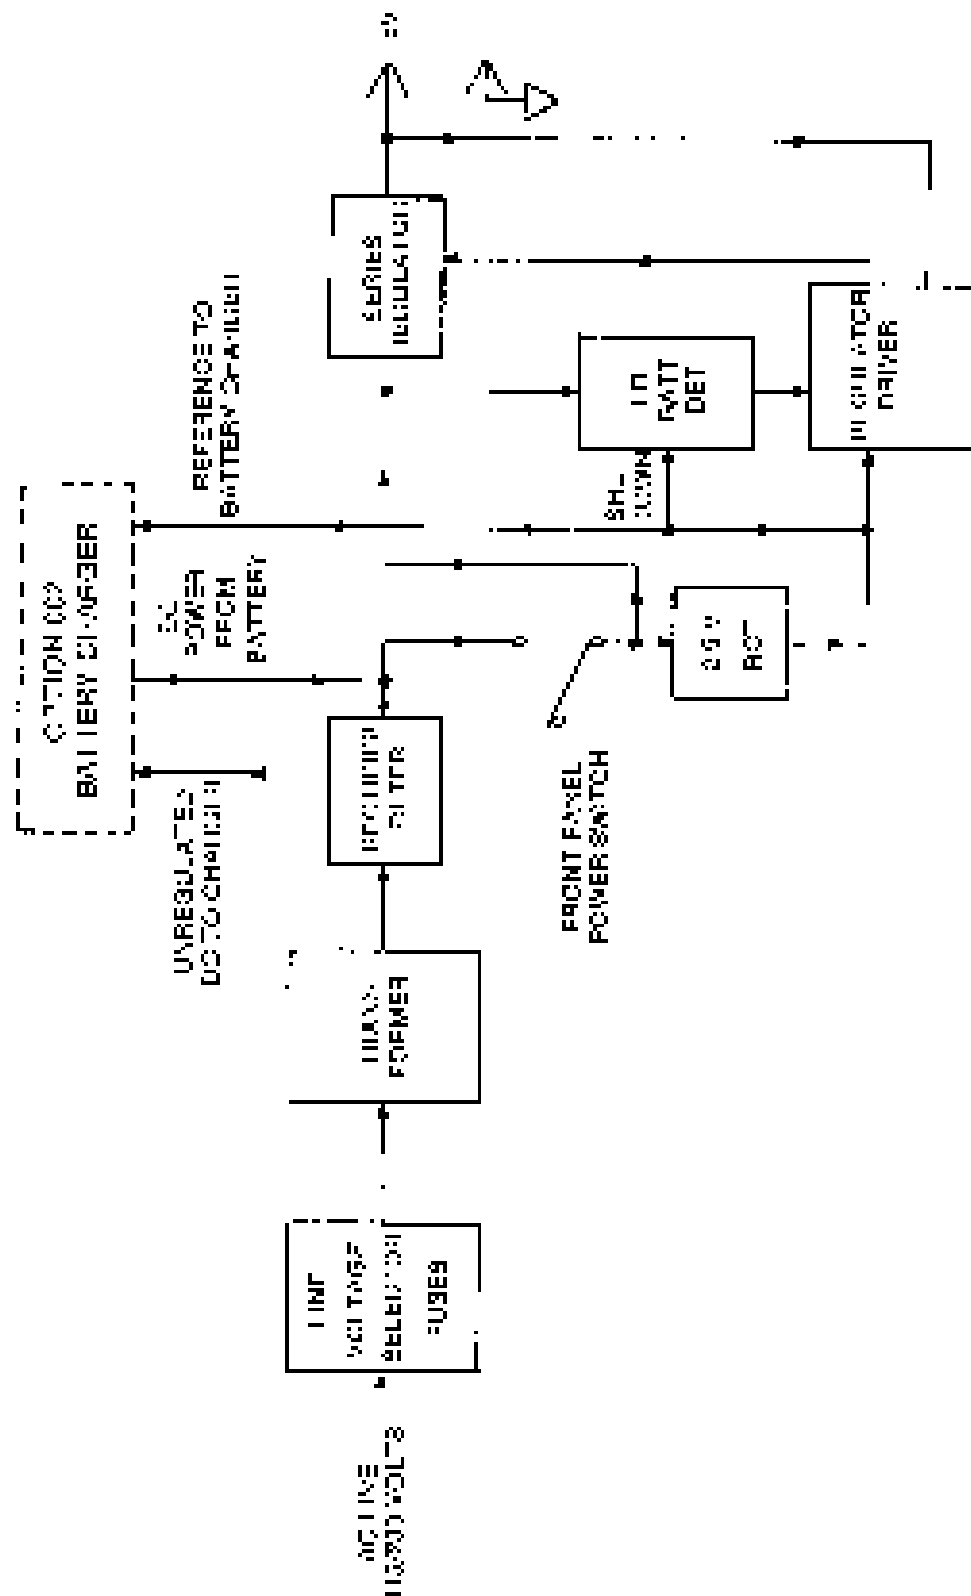


Figure C-4. 11/5/94 Power Supply Block Diagram.

#### B-45. Power Supply Block Theory

B-46. The power supply contains circuitry to operate the instrument when the front panel STBY switch is pushed to ON, or charge the battery when in standby (STBY). If Option 002 is installed, front line voltages can range from 85 to 26 volts in the 115V position of the power selector switch and 172V to 252 in the 230-volt position. The outputs provided by the power supply are regulated +5 volts at 0.5 amps, an unregulated 40 to 50 volts for charging the battery, and -2.5V reference to be used by the battery charger (Option 002).

#### B-47. Detailed A2 Assembly Theory

B-48. Line power is applied to the primary side of H1 power transformer through the line selector switch and fuses F1 and F2. The line selector switch configures the dual primary for 115-volt or 230-volt operation by connecting the winding in parallel or series, respectively. The fuses need not be changed when the line voltage selector switch is changed. The secondary of the power transformer contains a full-wave rectifier and filter made up of CR2, CR1, and C1. The unregulated dc at this point is supplied to the battery charger board. The dc also passes through two isolation diodes CR5 and CR6.

B-49. These diodes keep current from flowing back out of the battery and into the charger circuitry. The dc line is broken at this point by the standby (STBY) switch located on the A1 assembly. When the switch is ON, power is supplied to the 2.5 volt regulator U1, the output regulator driver and series pass transistor, and the low voltage detector. The regulated +5 volts output is generated using a conventional series pass linear regulator. The output voltage is divided by 2 using R7 and R5. Under normal conditions this will produce 2.5 volts at the output of the divider which is applied to an op-amp known as amplifier U2 pin 2. This voltage is compared with the 2.5 volts generated by the reference U1. The output of the opamp will control the current in Q1 which controls the series pass transistor Q2. The inverting input of U2 is used as a low battery detector. When the HP 5314A is operating under battery power, an attenuated version of the battery voltage is present on U2 pin 6. This voltage is compared with the 2.5 volt reference which is applied to pin 3 of U2. When the battery voltage is high, the output of U2 is low and CR4 is reverse biased. When the battery voltage gets low, indicating low capacity, pin 2 of U2 will go high. This puts pin 2 of U2 high and turns off the output transistor Q2. Positive feedback is applied around the low battery detector to provide hysteresis. This ensures that once the detector has shut the HP 5314A off, it will stay off. Expansion Q3 delays the 2.5-volt reference on pin 3 ensuring that when the instrument is turned on, it comes on then shuts down if necessary.

#### B-50. Option 002 Battery Charger Block Theory

B-51. The battery charger has circuitry that supplies 10 mA to the battery whenever the instrument has line power coming on. If the instrument is in the standby position, the battery is charged at a 0.5 amp rate until it is fully charged. When the battery is fully charged, a circuit detects this and discontinues the 0.5 amp current and resumes the 10 mA float current. See Table B-4 for power switch operation in an HP 5314A with Option 002.

Table B-4. Option 002 Power Switch Operation

AC Line Cord	Power Switch	Battery-Pack Operation
Connected	STBY	Two-step battery charging cycle begins.
Disconnected	ON	Counter operates from ac power, charge circuitry provides a 32 mA trickle charge to battery to maintain charge level.
Unconnected	STBY	None.
Reconnected	ON	Counter operates from battery power, Auto-Shut Down circuitry operational.

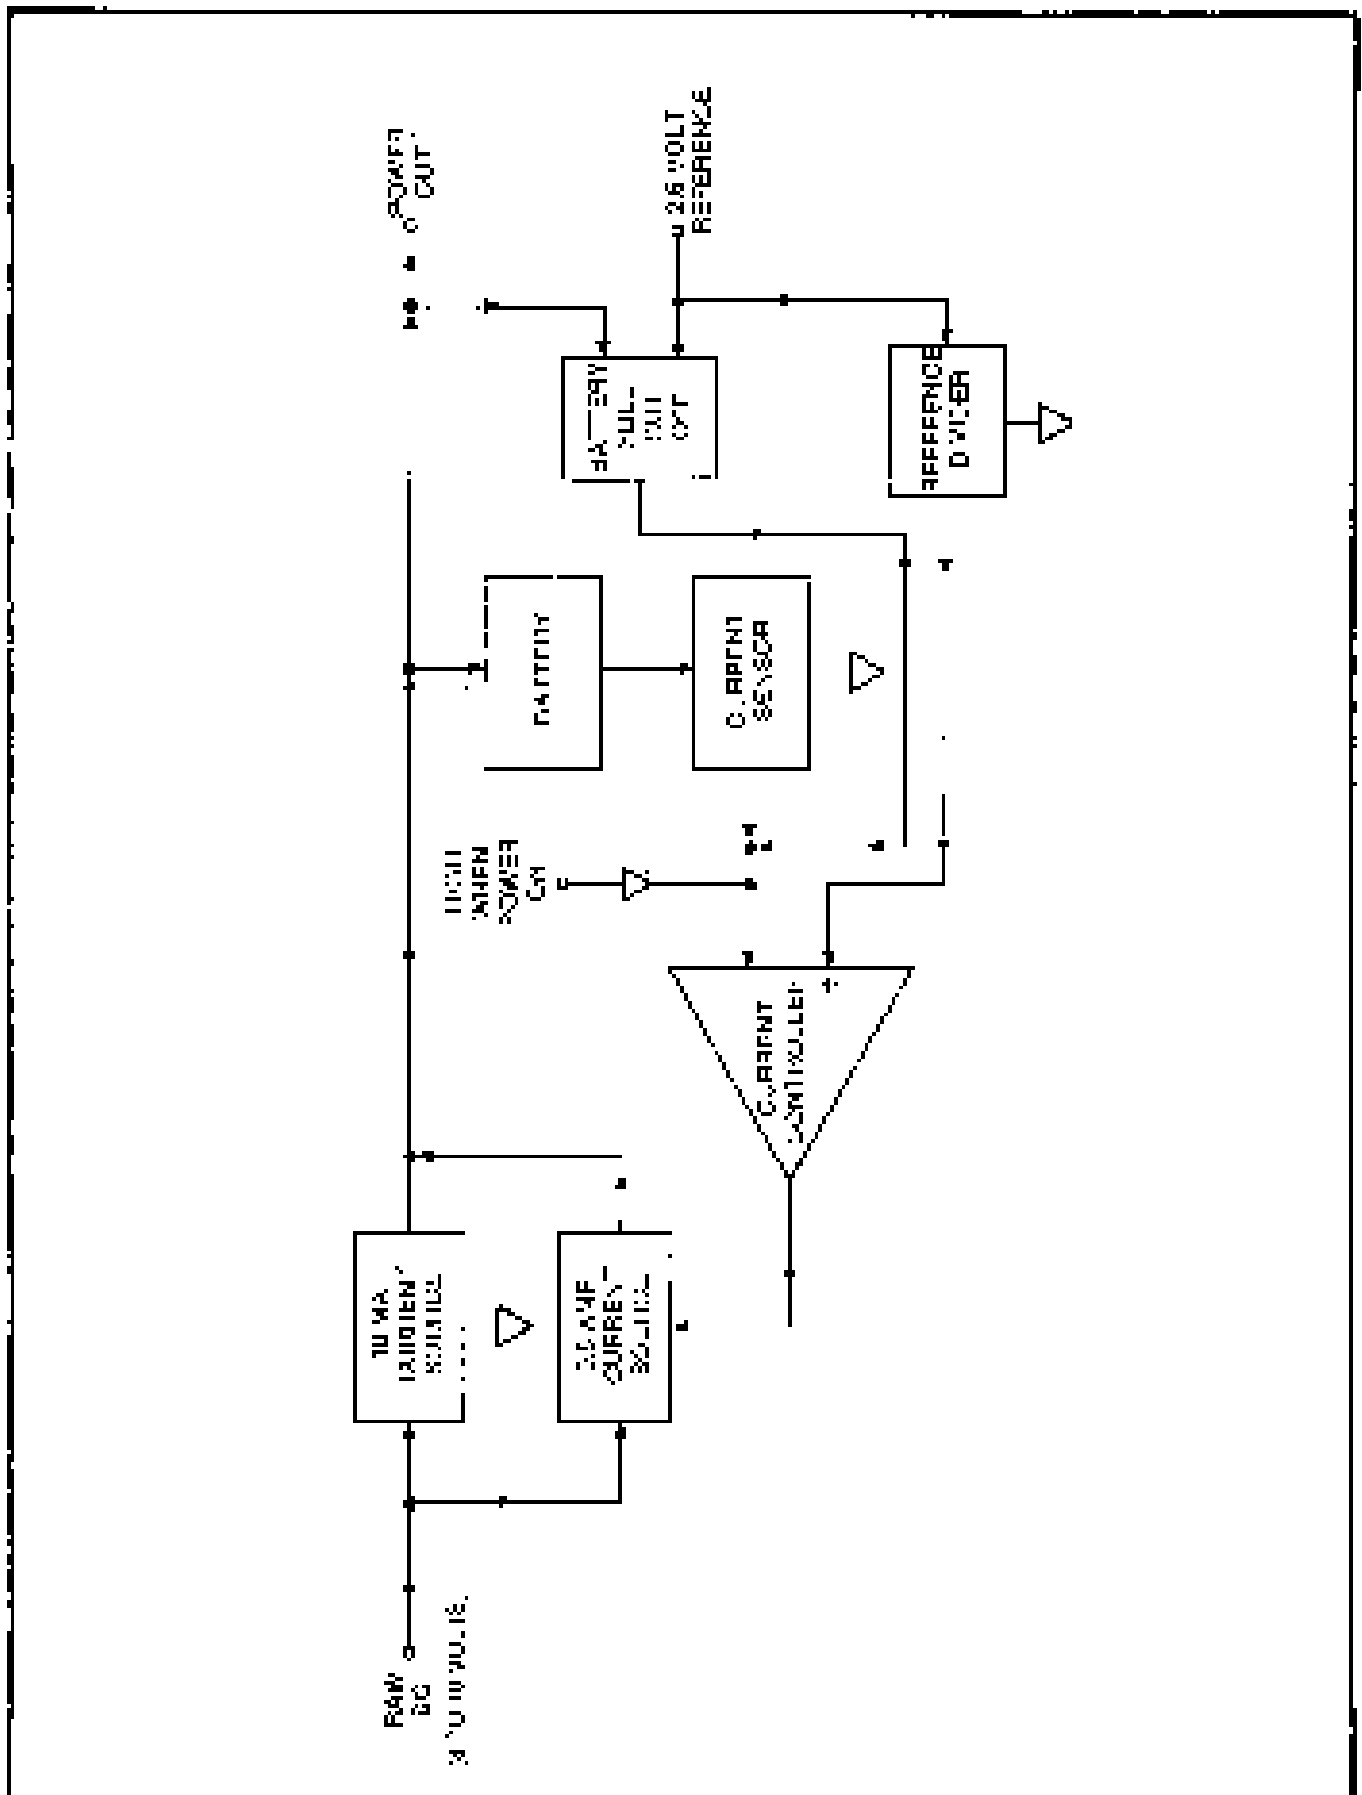


Figure B-5 1P 5314A Optional Battery Pack Block Diagram

## B-53. Detailed Option 002 A3 Assembly Theory

B-53. Power comes on to this board at pin 1. The components R1, R2, Q1, and Q2 provide continuous 10 mA to the battery from the collector of Q1. R13 is the current sensor and R4 is used to obtain the sense from pin 2 of the IC. The 2.5-volt reference comes on to the board at pin 5 and is divided down to 50 mV by R10 and R6 (50 mV is the voltage developed by the current sensor). The OP amp (consisting of pins 1, 2, and 3), in conjunction with Q3, Q4, R3, and R5, is used to control the 0.5 amp used to charge the battery.

B-54. CR2 is used so the battery does not power this circuitry when the instrument is unplugged. CR1 is used so that power only leaves the board at pin 2. When the instrument is on, pin 3 goes high which discontinues the 0.5 amp current used to charge the battery. In the standard HP 3314A, the 2.5-volt reference is turned off when the switch is in STRY so power is provided through CR4 to the reference input at pin 4 needed for Option 002.

B-55. The floating comparator circuit comprise the circuit to shut off the 0.5 amp current when the battery has a full charge. R9 and R11 and the 2 k $\Omega$  potentiometer (R12) comprise the voltage divider to determine the correct voltage where the 0.5 amp should be discontinued. CR3 and the 35 K $\Omega$  thermistor are used to track the temperature changes inside the instrument. R7 pulls pin 7 to approximately 60 mV above ground when the opamp goes low. When the battery is not fully charged, pin 7 will be low (because the voltage at pin 3 will be less than 2.5 volt reference at pin 6). The 2 k $\Omega$  pot is adjusted so that the full charge cutoff happens when there is 7.5 volts across the battery at room temperature. Now the thermistor and CR5 are out of the circuit which causes pin 5 to go even higher. Pin 7 will not go low now until pin 3 goes below 2.5 volts. This will happen when approximately 7.05 volts is across the battery. CR5, CR6, and R8 are used to insure that the previously described circuitry has no effect on pin 2 of the IC. (Recall that pin 2 is sensing 50 mV and pin 7 goes down to 60 mV).

## B-56. TROUBLESHOOTING TEST PROCEDURES

B-57. The following test procedures are designed to effectively verify the proper operation of isolated sections of the HP 3314A. Refer to the troubleshooting block diagram in Figure B-6 to examine the circuits tested by each procedure. A thorough evaluation may only be performed independently, it is recommended that they be performed in the numerical sequence as given in Table B-5.

B-58. Throughout the five troubleshooting test procedures, alphabetical test points from 01 to 05 are referenced. These test points appear on the A3 schematic diagram in Figure B-5. They are encircled with a black circle, located at various points throughout the schematic diagram. Table B-5 lists the test points and the signals present at each.

Table B-5. Block Diagram Sections versus Test Procedures

Figure B-6 Sections	Test Procedure				
	I	2	3	4	5
A	X	X	X	X	X
B		X		X	X
C			X		X
D				X	X



Table 5-6. A1 Test Point Signal Descriptions


Test Point	Description
TPD:	Channel A input to waveform amplifier (collector of A1Q2)
TP1&1:	Channel A Schmitt trigger outputs A1Q15, 14;
TP1a:	Channel A input to Counter-decoder A1Q17;
TPH:	Channel B input to waveform amplifier (emitter of A1Q3)
TP&A:	Channel B Schmitt trigger outputs A1Q15, 14;
TP L:	Channel B input to Counter-decoder A1Q17;
TP M:	FUNCTION input to A1Q24;
TPN:	TIME BASE input to A1Q23;
TP P:	TEST OSC INPUT to A1Q24a;
TP Q:	CONTROL input A1Q24;
TP R:	CONTROL input A1Q22;
TP S:	5Vdc
TP T:	10 kHz

#### B-59. Procedure 7: Testing of 5314A Power Supply

B-60. To verify proper operation of the HP 5314A power supply, check Test Point 5 on the A1 motherboard. It should be  $-5V \pm 75$  mV. This is the power supply voltage in the HP 5314A, and it is not adjustable.

#### B-61. Procedure 8: Testing of 5314A Reference Oscillator


B-62. Check for the presence of the 10 MHz Reference Oscillator at Test Point P, A1J233; see following figure for a typical waveform:

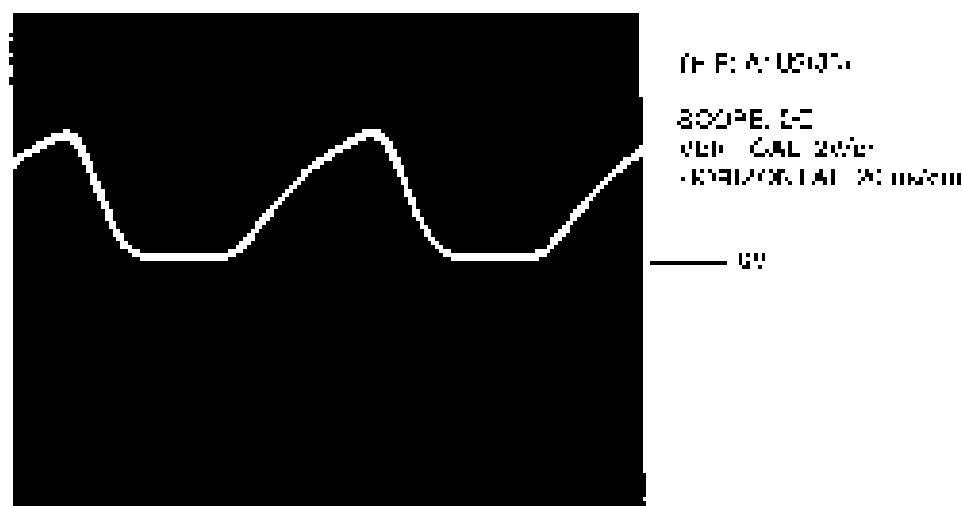

If the 10 MHz reference oscillator is not present, check A1Y1, R2, C2, C5, and U2.

### B-63 Procedure 43: Testing Input Channels

B-64 To verify proper operation of the HP 5314A, input channels, apply a 10 MHz signal at 100 mV rms ( $\approx 380$  mV p-p) to INP1.A, then to INP1.B. Check that the proper waveform exists at TPC1 (A1U416) and at TPC2 (A1U418). If they are not present, trace back the signal. The following eight photographs show the signal which should be present at the corresponding test points.

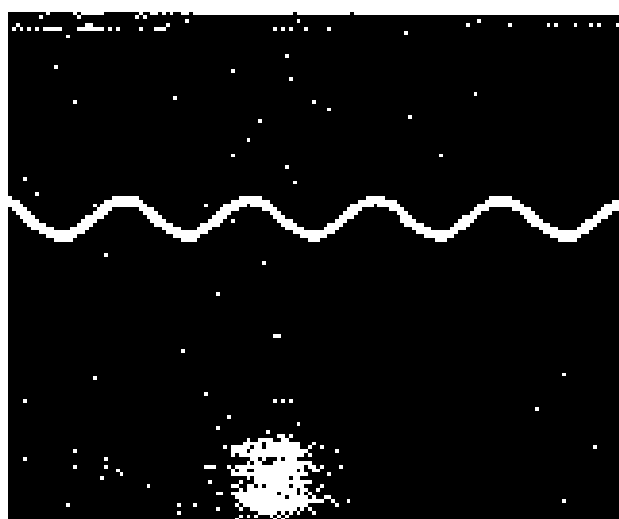


TP C1: Collector of A1U417  
SCOPE B0  
VERTICAL: 0.5V/cm  
HORIZ: 200ns/100ns/cm

— 1V




TP E: A1U418  
SCOPE D0  
VERTICAL: 1V/cm  
HORIZONTAL: 50 ns/cm

— 3V

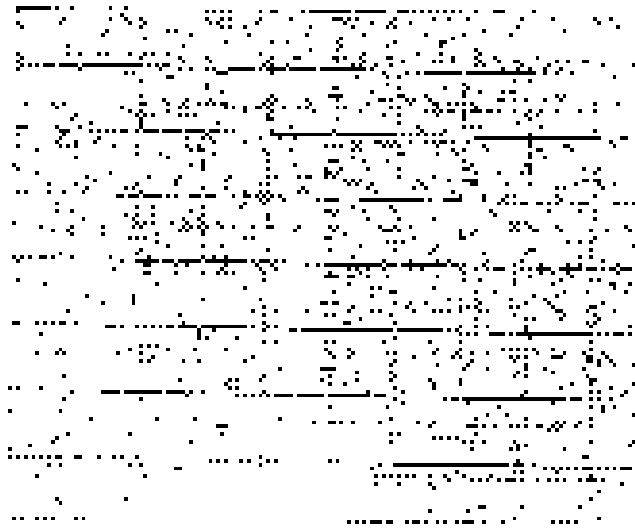


TYPE: A10000  
SCOPE: DC  
VERTICAL: 1000m  
HORIZONTAL: 50 ns/cm

0V

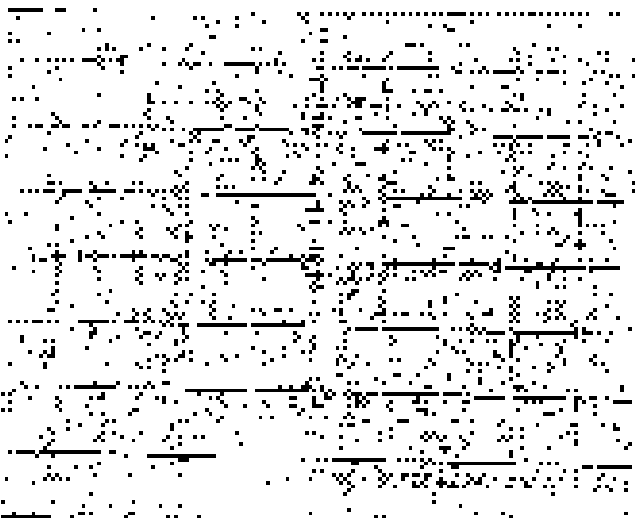

TYPE: A10000  
SCOPE: DC  
VERTICAL: 1000m  
HORIZONTAL: 50 ns/cm


0V

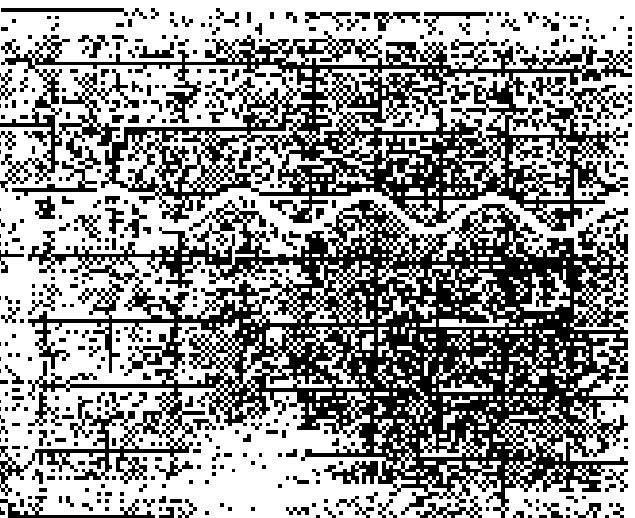

TYPE: Collection of A1000  
SCOPE: DC  
VERTICAL: 0.5V/cm  
HORIZONTAL: 50 ns/cm


0V



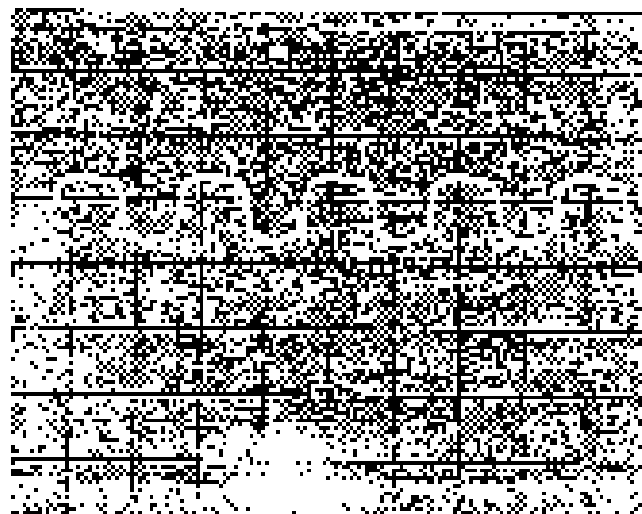


TP J A10875  
5000X DC  
VERTICAL: 1W/cm  
HORIZONTAL: 30 ns/cm

— 3V

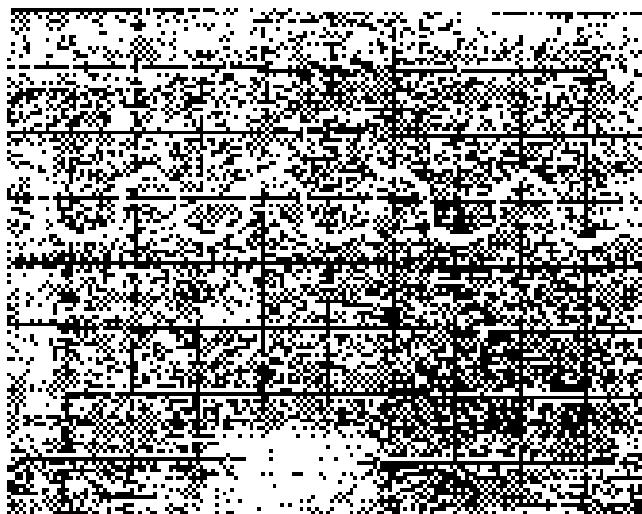

TP K A10916  
5000X DC  
VERTICAL: 1W/cm  
HORIZONTAL: 30 ns/cm

— 3V

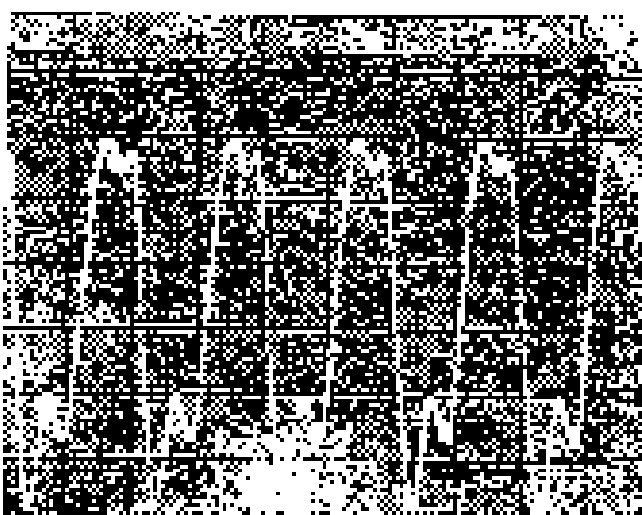

TP L A10442  
5000X DC  
VERTICAL: 1W/cm  
HORIZONTAL: 30 ns/cm

— 3V

# 8-65. Procedure 44: Testing of IC41 7226 [Counter-In-a-Chip] and Display

8-66. To verify the proper operation of A1U2 (counter-in-a-chip) and the display and the front panel switches, set the 5314A to SLEW CHECK mode; set resolution to 10 Hz (N=10). The display should be as follows.

GATE → 1 0 0 0 0 . 0 0

with "GATE" light blinking. If the counter fails to pass this test, check the DIGIT DRIVER lines from A1U2; connect A1U2(22) (TP R) to oscilloscope Channel A Input. Adjust oscilloscope time base vernier so that the total period of pulses occupy 8 centimeters of the oscilloscope screen. The Digit Driver displayed is D7 in Channel A. Connect to oscilloscope Channel B Digit Drivers D8 to D6 and the corresponding pulses should coincide with the positions as illustrated in the figure below (see Table 8-7).



To verify that proper time base pulse has been selected per front panel switch, connect oscilloscope's Channel B to A1U1(4) or A1U2(26) (see Table 8-7).

Table 8-7. Multiplexed Digit Driver Outputs

Function		Digit
FUNCTION INPUT	FREQUENCY PERIOD	D6
	RATIO	D5
	LINE INTERVAL	D4
	LINE COUNTER	D3
	OSCILLATOR FREQUENCY	D2
		D1
		D0
RANGE INPUT (Time Base Selection)	100 Hz 0.01 s/cycle	D5
	10 Hz 0.1 s/cycle	D4
	1 Hz 1 s/cycle	D3
	0.1 Hz 10 s/cycle	D2
	EXTERNAL RANGE	D1
	INPUT ENABLE	D0
CONTROL INPUT	BLANK DISPLAY	D7 HOLD
	DISPLAY TEST	D7
	1 MHz SELECT	D6
	EXTERNAL OSCILLATOR INPUT ENABLE	D5
	EXTERNAL DECIMAL POINT INPUT ENABLE	D4
	TEST	D3
		D2

# 8-67. Procedure 45: 20 MHz Mode

8-68. Apply a 20 MHz signal at 100 mV and 1-200 mV p-p to the HP 5314A INPUT A with a 50-ohm feedthrough. Set the HP 5314A to FREQ A mode, with a resolution of 10 Hz (N=1), A1U1 X1/X20 in X1, and LEVEL A about midrange. Verify that counter counts 20 MHz  $\pm 1$  count.


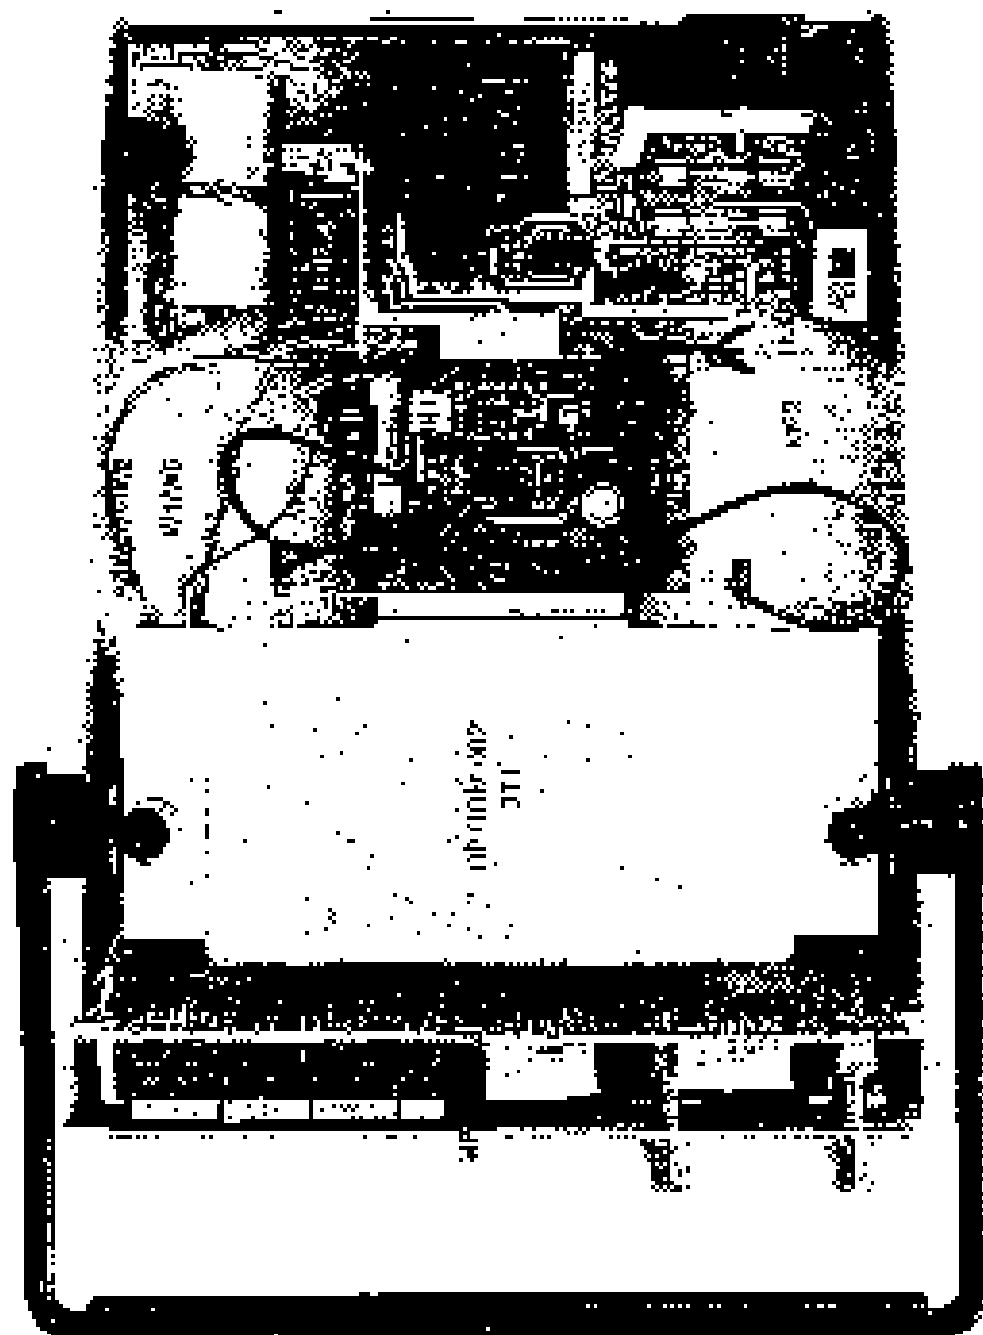


Figure 3-7 Top Internal View

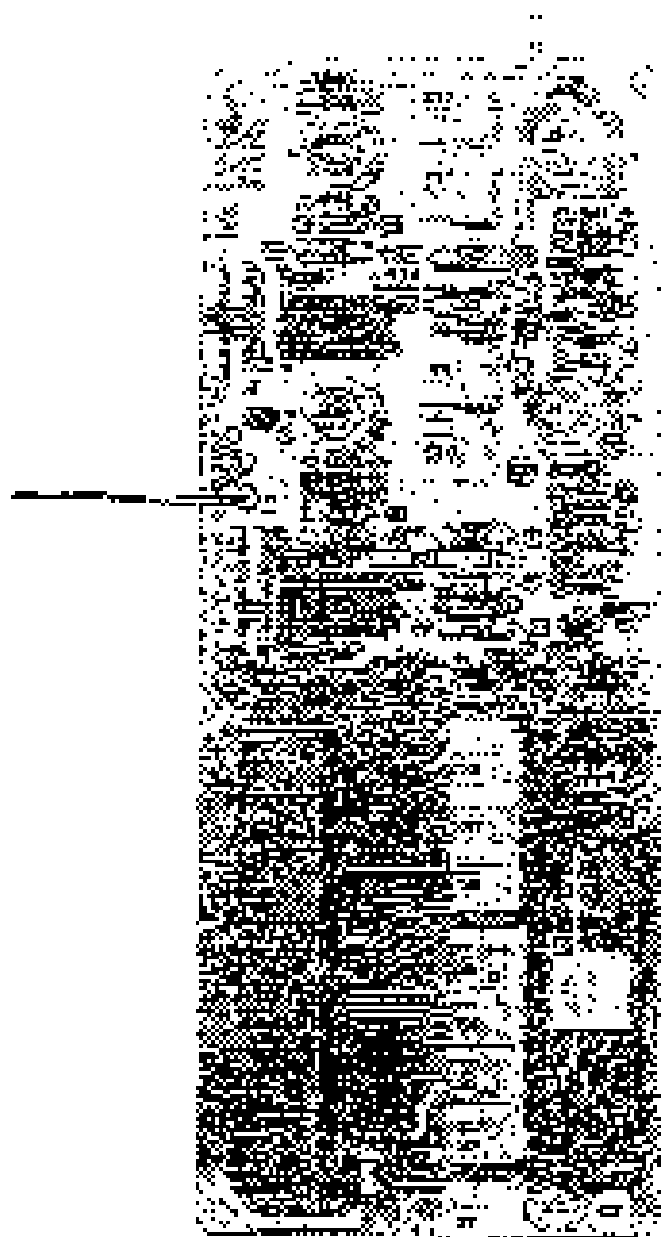

Part of Figure 3-5. All Control Assembly Components Located

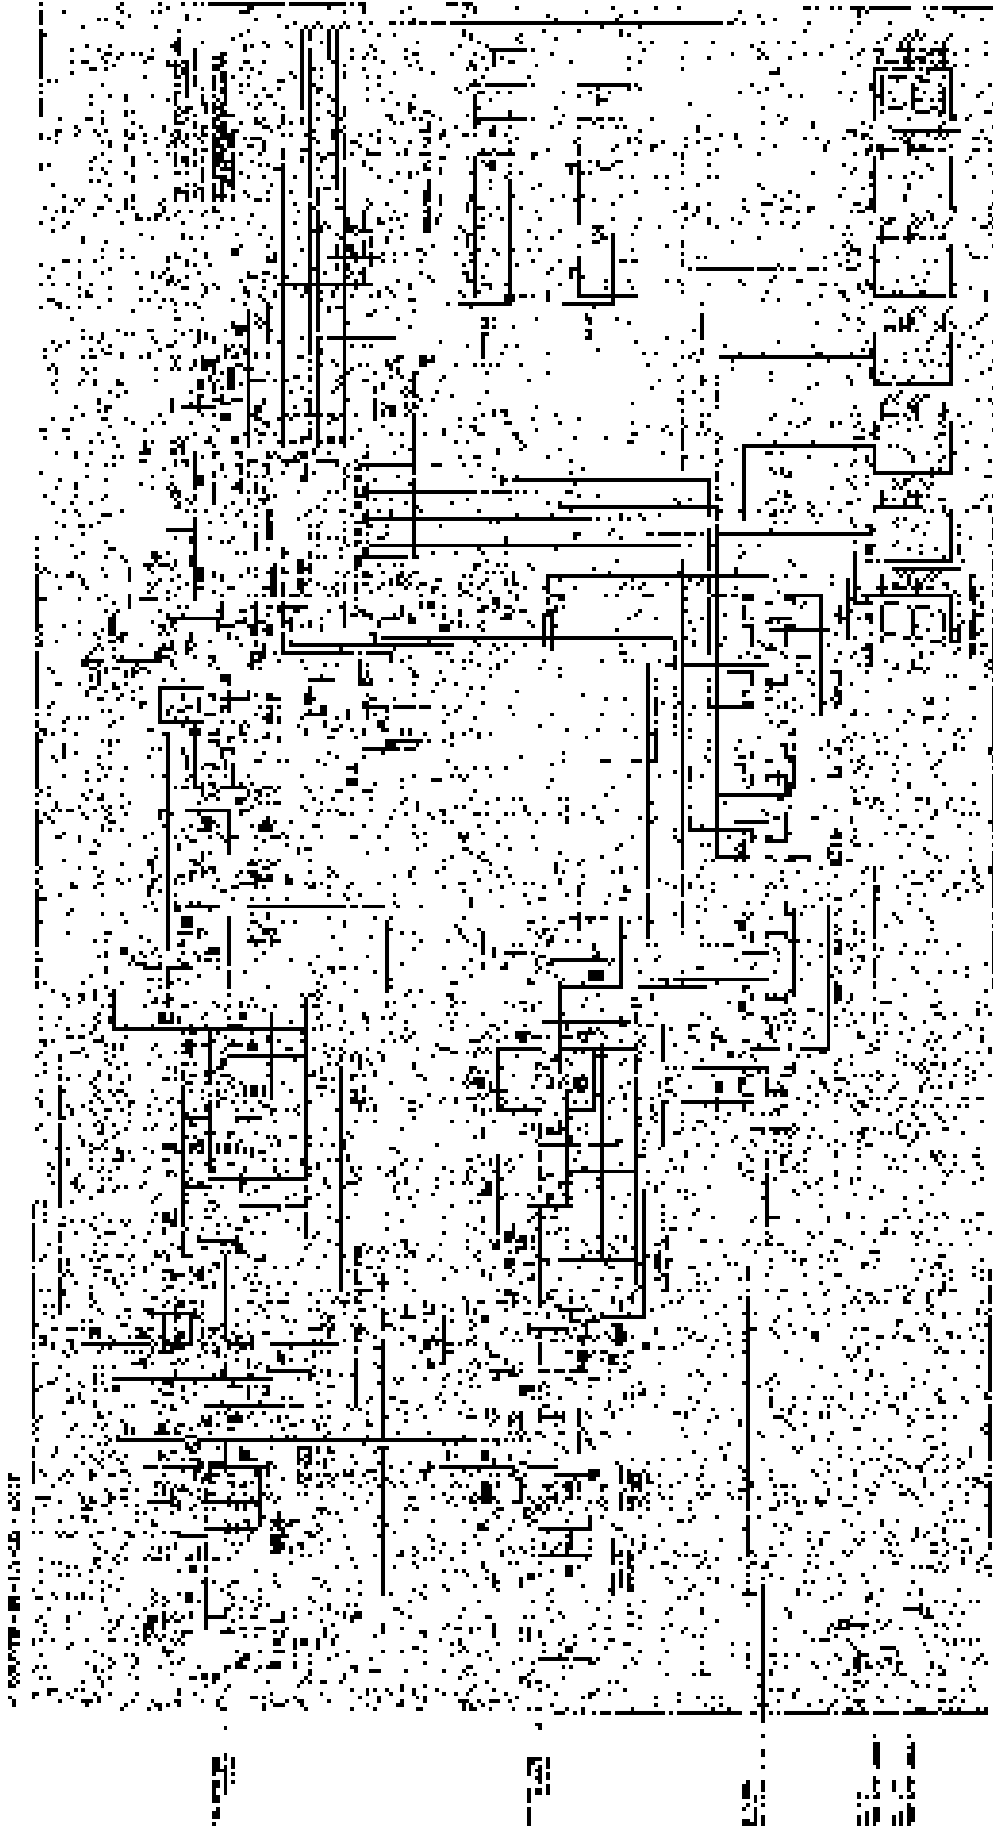


Figure 6-4  
AT COUNTER ASSEMBLY

(See Page 5-23)



FIGURE 6-9 A2 Rear Support Assembly Components Location

[illegible]

407



**2019-2020**



Figure 8-11  
A2 POWER SUPPLY ASSEMBLY

See Page B-25

KIT


# REMOVABLE BATTERY

1. Remove the battery cover by pulling it out of the case.

2. Disconnect the battery from the case by pulling the battery out of the case.

FOR REMOVING BATTERY LIFE  
1. Disconnect the battery from the case by pulling the battery out of the case.  
2. Disconnect the battery from the case by pulling the battery out of the case.

3. Disconnect the battery from the case by pulling the battery out of the case.

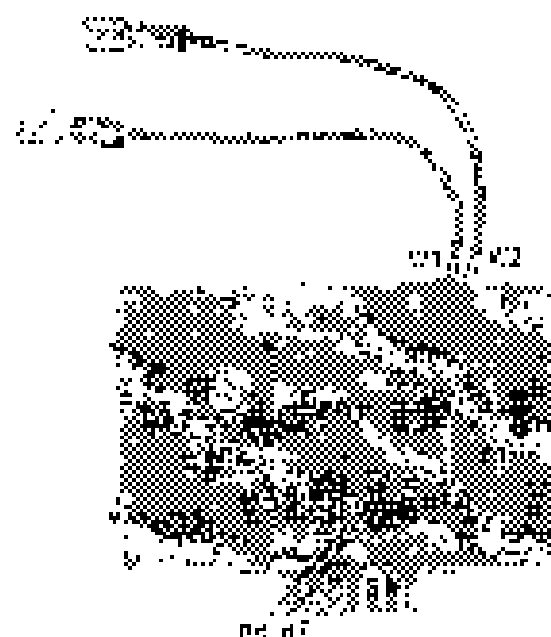


FIG



Part of Figure 3-10, 7d Battery Charge, On/Off Connection Location



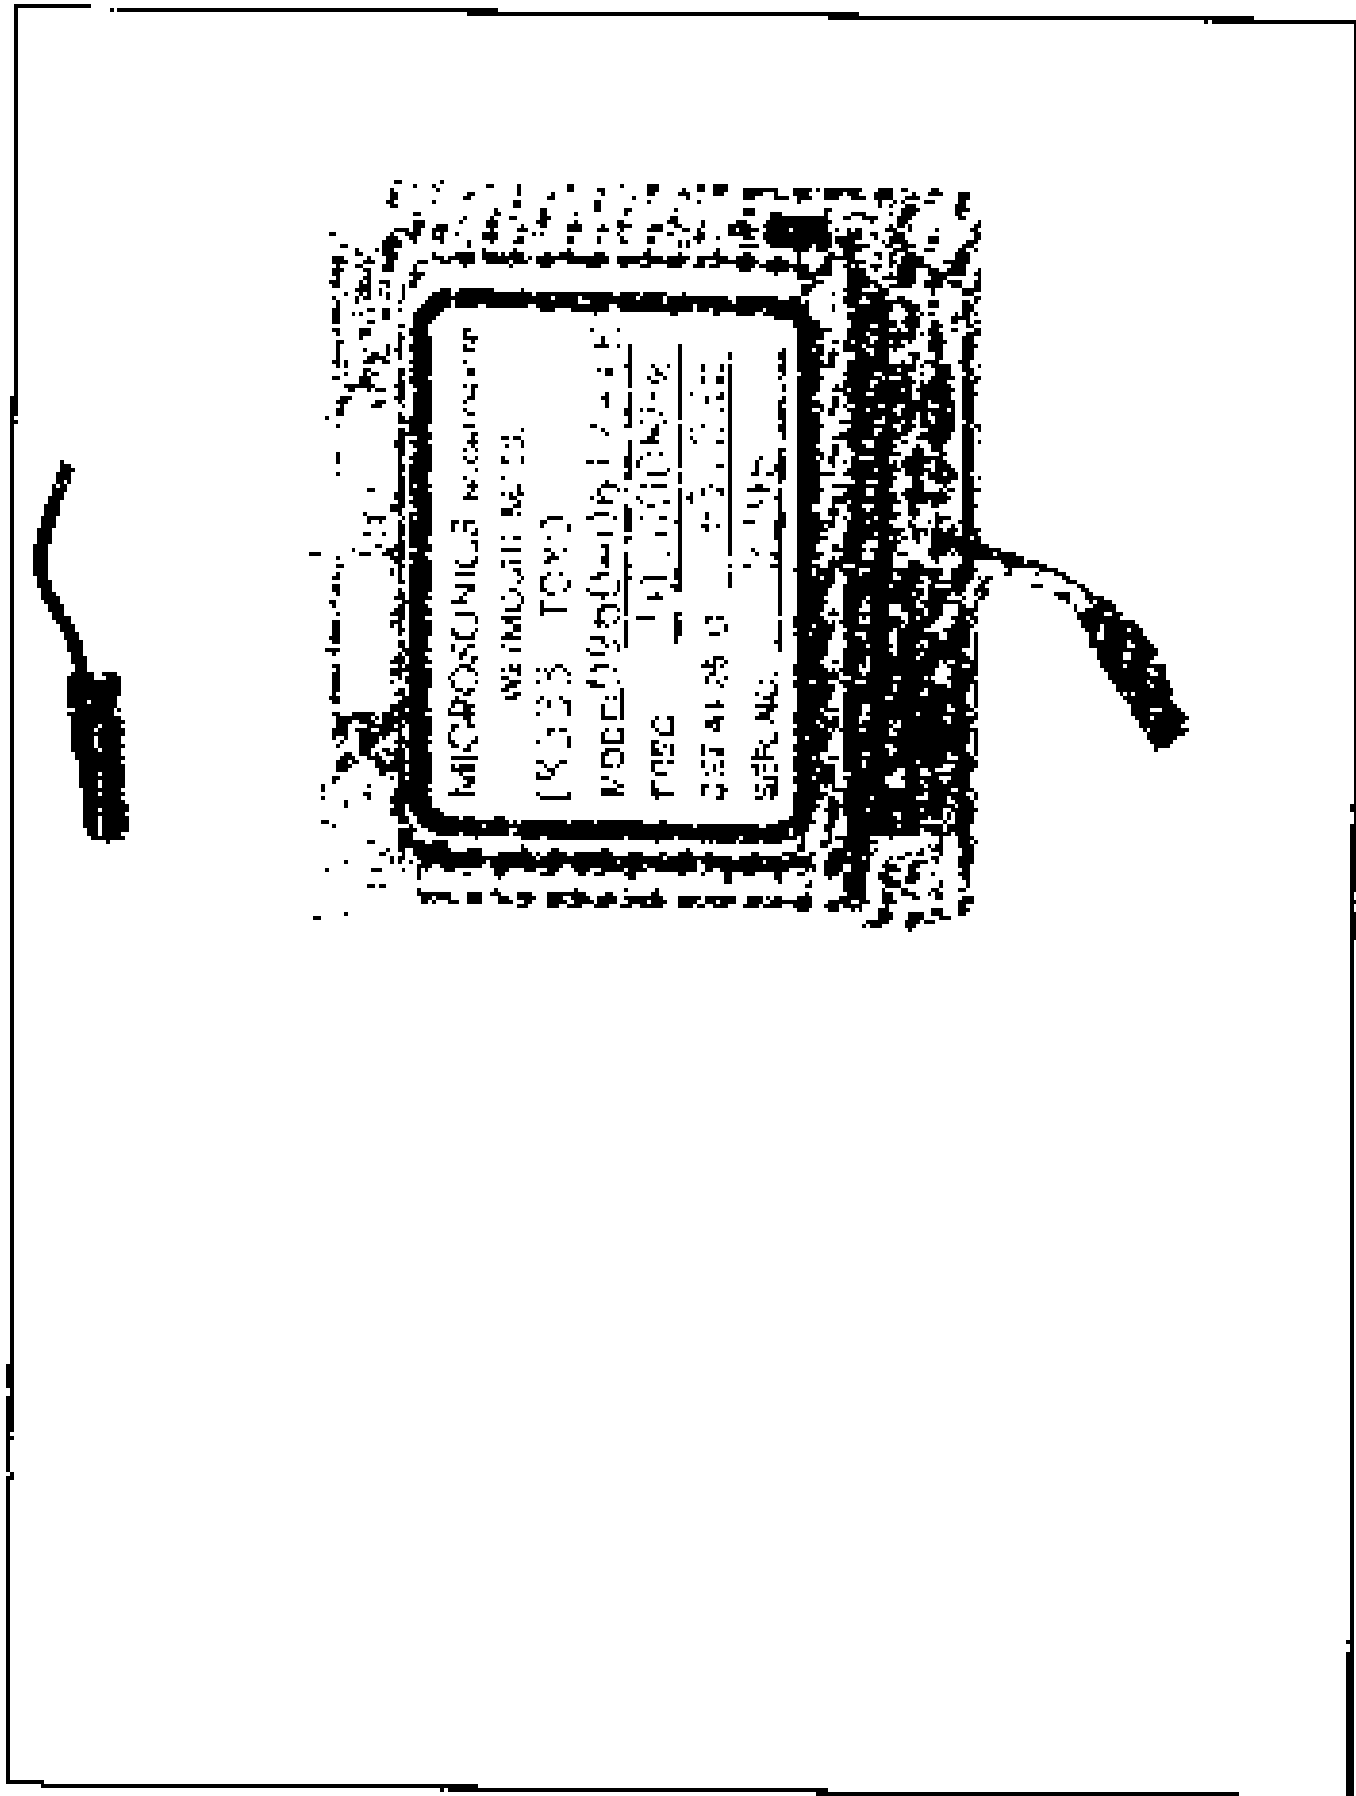

Part of Figure 3-10. 447050 Assembly Component Connects

Figure 8-10  
A3 BATTERY CHARGER ASSEMBLY, OPTION 002  
A4 TCRD ASSEMBLY, OPTION 001



Model Part Number: C5701-9003

Printed SEPTEMBER 1991  
Printed in U.S.A.